

ADAPT™



KIT CONTENTS


- (1) Mounting Hardware
- (2) Black Powder Coated L-Shape Brackets
- (1) Dash Controller
- (1) Under Dash Module
- (1) Wiring Harness
- (1) Mounting Brackets
- (1) Under Dash Module Harness

SOLD SEPARATELY

Underside Low-Profile Stealth Mounts



Light Covers

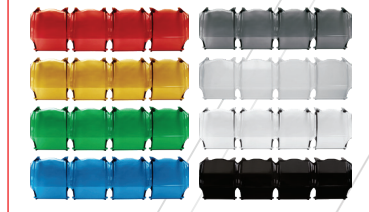

GPS Module



ADAPT | 2

WIRING DIAGRAM

LIGHT BAR



LIGHT WIRING
REFER TO PAGE 5



UNDER DASH MODULE



DASH CONTROLLER



Ignition
*Required For Operation

GPS

Projecting LED

Backlighting LED

ADAPT | 3

BEAM PATTERNS

Adapt offers 8 selectable beam patterns that range from broad short-distance lighting to highly focused long-distance lighting in a single fixture. It also includes RIGID's new Active View Technology, which allows the beam pattern to actively adjust with vehicle speed. There are no moving parts within the Adapt. Instead, RIGID uses advanced LED technology and combines it with patented new optics to create a revolutionary lighting solution that can Adapt with changing conditions.



8 MODES


MODE 1

FLOOD 
DRIVING 
SPOT 



MODE 2

 FLOOD 
DRIVING 
SPOT 



MODE 3

FLOOD 
DRIVING 
SPOT 




MODE 4

FLOOD 
DRIVING 
SPOT 




BEAM PATTERNS

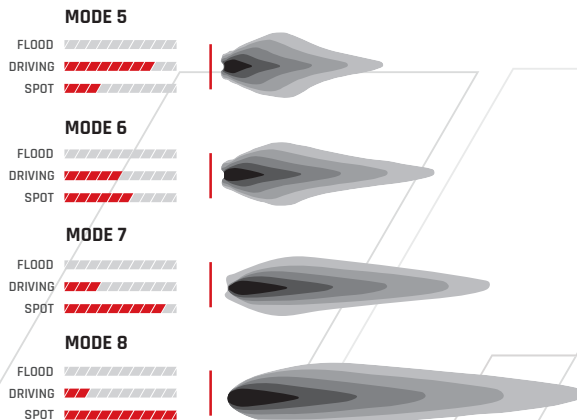

MOUNTING

- A** 1/4-20 x 1" Socket Head Bolt
- B** Black Powder Coated L-Shape Brackets
- C** Mounting Bushing
- D** End Cap
- E** 1/4-20 Nyloc Nut

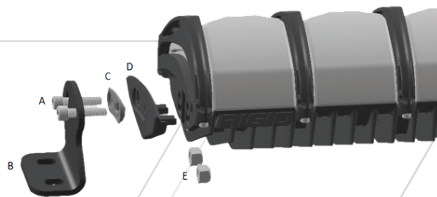


1. Remove the (2) factory installed 1/4-20 x 1" Socket head bolts (A) from each side of light.
2. Install L-Bracket (B) mating against mount bushing (C) and re-install 1/4-20 x 1" Socket head bolts.
3. Mount light to desired mount location using customer supplied hardware.
4. Once light is aimed into position tighten fasteners (A) to 75in lbs.


Note 1: End Cap (D) can be removed to gain access to 1/4-20 Nyloc nuts (E)

Note 2: Light housing is tilted 15° at nominal position. See reference image.

 Additional mounting brackets available. Visit www.rigidindustries.com/adapt



LIGHT WIRING

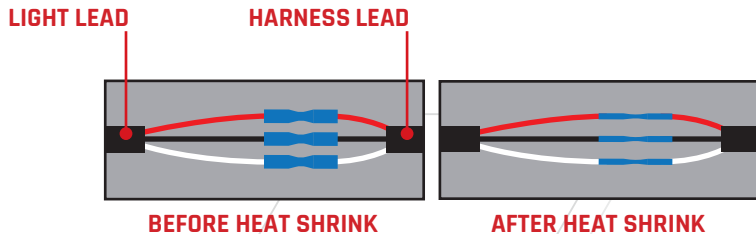


Note 1: Always disconnect the negative battery terminal when working with any electrical circuits.

Note 2: When routing wires through any metal or abrasive surfaces, be sure the surface is free of any sharp edges.

1. Route harness through vehicle to desired termination points.
 2. Match the light pigtail to the harness colors: Red to Red (+VDC main power), Black to Black (-VDC Ground), and White to White (Data)
- 2a. Use provided wire connectors with appropriate wire gauge.
 - 2b. Use a heat source to seal heat shrink tubing around wire and seal the connection.

UNDER DASH MODULE WIRING

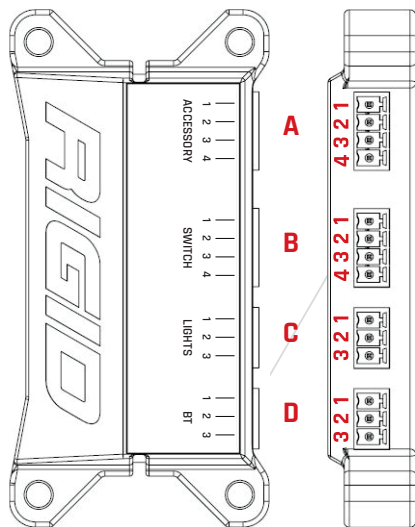

ADAPT | 8

A ACCESSORY PLUG

PIN	WIRE COLOR	DESCRIPTION
1	White	Backlighting LED Trigger
2	Blue/White	Projecting LED Trigger
3	Gray	GPS
4	Red/White	Ignition or Battery

B DASH CONTROLLER

PIN	WIRE COLOR	DESCRIPTION
1	Red	3.3V DC Power
2	Blue	Receive
3	Yellow	Transmit
4	Black	Ground

C LIGHT BAR

PIN	WIRE COLOR	DESCRIPTION
1	Blue	Relay Trigger
2	White	Data
3	Black	Ground

D NEW FEATURES COMING SOON

UNDER DASH MODULE WIRING

CONNECTOR A - ACCESSORY PLUG

PIN 4: +VDC INPUT

A. Input power for the under dash module to be wired to the factory ignition circuit or any +VDC trigger.

Note: The input power will also trigger the backlighting on dash controller. If the under dash module is wired to constant +VDC the backlighting on the dash controller will always stay on.

PIN 3: GPS

A. Input for GPS Module. This is required to activate the Adaptive mode.

PIN 2: Aux Switch Trigger - Projecting LED's

A. Use any auxiliary +12v input to trigger projecting LED's without the use of the Adapt dash controller.

B. The Adapt system will store the previously defined mode set by the Adapt dash controller. If the dash controller is removed, this feature can be used to trigger the main projecting lights with any OE/aftermarket switch.

C. To program this feature simply plug in the Adapt dash controller to the under dash module and select your desired projecting mode and backlighting color. With the projecting mode and backlighting color activated remove the Adapt dash switch and cycle the auxiliary switches on/off. Now the selected modes are saved and can be controlled by the auxiliary switches. To change the setting plug the Adapt dash controller back into the under dash module and change to the desired mode.

UNDER DASH MODULE WIRING

Pin 1: Aux Switch Trigger - Backlighting LED

- A. Use any auxiliary +12v input to trigger the backlighting LED's without the use of the Adapt dash controller.
- B. The Adapt system will store the previously defined backlighting color set by the Adapt dash switch. If the Adapt dash controller is removed this feature can be used to trigger the backlighting LED's with any OE/aftermarket switch.
- C. To program this feature simply plug in the Adapt dash controller to the under dash module and select your desired projecting mode and backlighting color. With the projecting mode and backlighting color activated remove the Adapt dash controller and cycle the auxiliary switches on/off. Now the selected modes are saved and can be controlled by the auxiliary switches. To change the setting plug the Adapt dash controller back into the under dash module and change to the desired mode.
- D. Once all connections are final, attach the battery leads to the vehicle's battery.

Note: Both primary projecting mode and back lighting color must be in the on position before removing the Adapt Dash controller in order for the auxiliary switches to function properly.

Note: The auxiliary switch trigger cannot change backlighting colors, it will only trigger the previously defined back lighting color set by the Adapt dash controller

UNDER DASH MODULE WIRING

CONNECTOR B - DASH CONTROLLER


The supplied Adapt dash controller is pre terminated by RIGID to plug directly into the Adapt Under Dash Module. Ensure the dash controller cable is secured and does not have tension once installed.

CONNECTOR C - LIGHT BAR

The Adapt Harness is pre terminated by RIGID to plug directly into the Adapt Under dash module. Ensure the harness is secured and does not have tension once installed.

CONNECTOR D - BLUETOOTH - COMING SOON

DASH SWITCH OPERATION

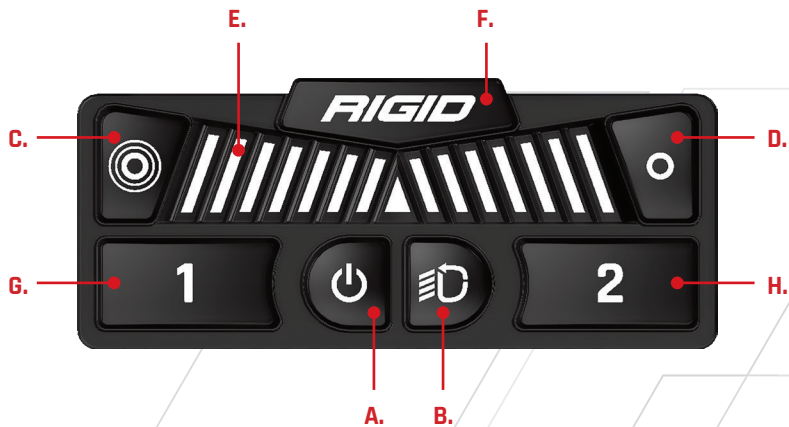

DASH SWITCH OPERATION

A. POWER ACTIVATION

Will activate the power to the primary projecting LED's.

B. ADAPTIVE MODE

Will activate the Adaptive mode and vary the primary projecting beam pattern based on vehicle speed.

B1. To program the Adaptive mode based on vehicle speed simply drive to desired vehicle speed for Mode 8 (full spot mode) and press the Adaptive mode button for 3 seconds or until the button flashes to save the setting.

B2. Once programming is complete the Adaptive mode will incrementally change modes based on vehicle speed and no additional programming is needed.

****NOTE**** GPS Module is required for Adaptive Mode Feature to function.

C. MODE SELECT DOWN

Will change Adapt modes (beam patterns) down incrementally from mode 8 to mode 1.

D. MODE SELECT UP

Will change Adapt modes (beam patterns) up incrementally from mode 1 to mode 8.

E. MODE INDICATOR

LED indicators will display the current mode selected and allow the end user to know what light mode they are in at a glance.

DASH SWITCH OPERATION

F. RGB-W BACKLIGHTING CONTROL

Activates the RGB-W backlighting and allows the end user to control the color desired.

1. To program the RGB-W backlighting first turn on the backlighting by activating the controller. Next, press and hold the RIGID button for 3 seconds or until the icon flashes.
2. Once in programming mode the backlighting will begin to color cycle and the RIGID font on the dash controller will mirror the color in the Adapt light bar.
3. Once desired backlighting color appears press the RIGID switch to save the selected color.


****NOTE**** Primary backlighting colors (red, green, blue, amber, and white) can quickly be selected by pressing the mode up or mode down keys once the color cycle has been activated.

G. & H. USER DEFINED PRE SETS

Both buttons 7. & 8. Function as user defined preset button that will save primary projecting Adaptive modes and back lighting color.

In order to program select desired Adaptive mode for primary projecting lights along with any backlighting color desired. Press and hold the desired preset button and those settings are saved. Once the settings are saved the preset icon will flash confirming programming is complete.

GPS MODULE WIRING DIAGRAM

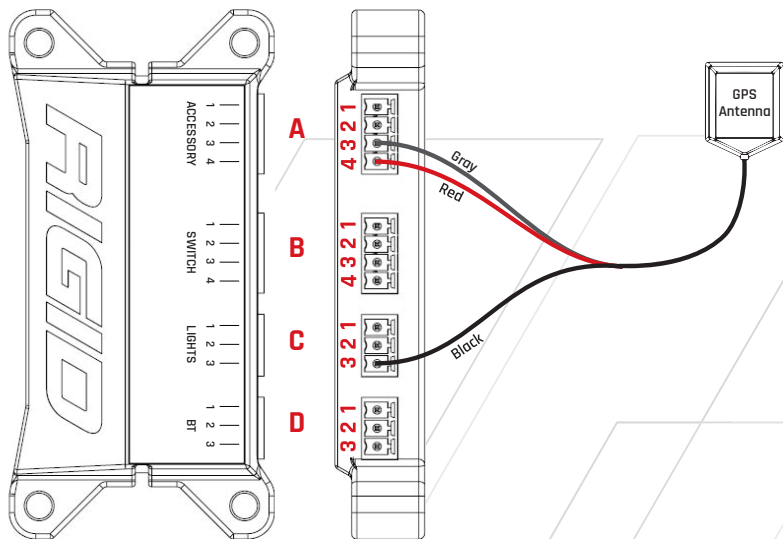

GPS MODULE OPERATION

This GPS module is required for the Adaptive Mode feature in the RIGID Adapt light bar. Once this unit is installed, the RIGID Adapt will use the GPS signal to automatically change modes based on vehicle speed.

MOUNTING

1. Find the desired location to mount the GPS interface module that is protected against heat and water submersion.
2. The mounting orientation is not critical to the function of the unit so it can be easily mounted on a vertical or horizontal surface using mounting screws, zip ties, or tape.

CABLE ROUTING

1. The GPS antenna has a magnetic base, so it will securely hold in place on any metal surface.
2. The GPS antenna needs to have line of site to the Satellite's in the sky. It is recommended to be placed on the roof of the vehicle.
3. When routing wire cable through any metal surface, be sure it is free of any sharp edges and protected using wire sheathing or a grommet.

WIRING - REFER TO PAGE 15

1. Connect the GPS antenna to the interface module by screwing the SMA connector on the antenna cable to the mating connector on the module. Be careful not to over torque this connection if using a wrench.
2. The red wire from the GPS module will share pin 4 on connector A on the Adapt under dash module. This wire will provide ignition power to the GPS unit.

GPS MODULE OPERATION

3. The Black Wire from the GPS module will share pin 3 connector C on the Adapt under dash module. This will provide chassis ground to the GPS unit.
4. The gray wire from the GPS module will go directly into pin 3 connector A on the Adapt under dash module. This will provide the GPS signal to the Adapt unit.

OPERATION

1. Once the GPS unit is mounted and all wiring is connected properly, you are ready to test the unit.
2. Turn vehicle on. This will provide power to the GPS and Adapt system.
3. It can take up to 2 minutes for the GPS to find a satellite before the unit will provide a signal to the Adapt under dash module.
4. Activate the Adaptive mode by pressing the Adapt Icon on the Adapt dash controller. Adaptive mode will default to Mode 1.
5. The Adapt mode is user adjustable so you can calibrate the top intended speed. To calibrate the Adapt Mode, safely drive at the top speed where spot mode will be desirable. While remaining at this speed, press and hold the Adaptive Mode button on the Adapt dash controller until the Adapt Mode button icon flashes red. This indicates that the top speed was saved.
6. The Adapt system will now operate in mode 8 based on the top speed selected and automatically step down incrementally from mode 8 to mode 1 as your vehicle speed is reduced. Simply turn off the Adapt mode by pressing the Adapt icon on the Adapt dash controller.

NOTES

A page of lined paper with a hatched right margin. The page contains 12 horizontal lines for writing. On the right side, there is a vertical hatched area. Faint, light gray geometric shapes, including parallelograms and trapezoids, are overlaid on the page. The text 'NOTES' is at the top right, and 'ADAPT | 19' is at the bottom right.

A Toyota pickup truck is shown from a front-three-quarter perspective, driving on a winding asphalt road. The truck is equipped with RIGID lighting, including a roof-mounted bar with red and white lights and a bumper-mounted bar with red and white lights. The truck's headlights are on, and the word "TOYOTA" is visible on the front grille. The background features a sunset over a hilly landscape with mountains in the distance. The sky is filled with dramatic, dark clouds.

RIGID

WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty

779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337

www.rigidindustries.com

Adapt, RIGID, and Rigid Industries are registered and/or common law marks owned by JST Performance, LLC,
a Delaware limited liability company d/b/a Rigid Industries.

10-12173-D