



Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

SAFETY

Your safety and the safety of others is very important.

- In order to help you make informed decisions about safety, we have provided installation instructions and other information.
- These instructions alert you to potential hazards that could hurt you or others.
- Please do a job safety analysis (JSA) before each task to identify potential hazards for your situation and remove/protect against them.
- You must use your own good judgment, and take your time.

Read and understand all safety precautions and instructions before installing this product.

**THIS PRODUCT IS FOR OFFROAD USE ONLY. ALL LIABILITY FOR
INSTALLATION AND USE RESTS WITH THE OWNER.**

**CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY
OR EQUIPMENT DAMAGE.**

**SENSORS FIELD OF VIEW WILL BE ALTERED WITH USE OF THE
REPLACEMENT BUMPER.**

Injury hazard

Failure to observe these instructions could lead to severe injury or death.

- Always** remove jewelry and wear eye protection.
- Always** use extreme caution when jacking up a vehicle for work. Set emergency brake and use tire blocks. Locate and use the vehicle manufacturers designated lifting points. Use jack stands.
- Always** use appropriate and adequate care in lifting components into place.
- Always** ensure components will remain secure during installation and operation.
- Always** wear safety glasses when installing this kit. A drilling operation will cause flying metal chips. Flying chips can cause serious eye injury.
- Always** use extreme caution when drilling on a vehicle. Thoroughly inspect the area to be drilled (on both sides of material) prior to drilling, and relocate any objects that may be damaged.
- Always** use extreme caution when cutting and trimming during fitting.
- Always** tighten all nuts and bolts securely per installation instructions.
- Always** route electrical cables carefully. Avoid moving parts, components that become hot and rough or sharp edges.
- Always** insulate and protect all exposed wiring and electrical terminals.
- Always** perform regular inspections and maintenance on mounts and related hardware.





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

I. Overview

Congratulations on your new purchase of the industries' best and most stylish rear bumper available for the Ram 1500 and 2500-3500HD. This bumper has been designed to be lightweight and easily customized with the industry's highest quality accessories.

Your rear bumper designed in 3-D from digitized data, CNC laser cut, fabricated, and powder coated... all in the U.S.A.

Enjoy the fit and finish of a quality Ram 1500 and 2500-3500HD rear bumper from Fab Fours Inc.





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

II. Parts List

- Rear replacement Bumper
- 50038-hw fastener kit
- Instruction Manual
- 10019 Wiring kit
- License plate lights Qty. 2
- Resistors Qty. 2
- LED Rear Light Strip Kit -61648
- Black .25" Square spacers Qty. 2

III. Tools Required

- Standard and Metric Sockets, Wrenches, and Extension
- Hex Bit socket for #8-32 Button Head
- Phillips Screwdriver
- #16 Drill Bit (.1770")
- Floor Jack and wood block

NOTE: PLEASE READ THE ENTIRE MANUAL BEFORE ATTEMPTING INSTALLATION. Ignoring these steps will increase your probability of scratching the vehicle during installation.

IV. Vehicle Preparation

- Disconnect the trailer and back-up (if present) sensor harnesses from the bumper. Remove and temporarily store in a safe place.*
- Unplug the OEM license plate light from the housing and secure in a safe place.*
- Remove license plate (to reveal two mounting bolts).*
- Using a 15mm socket remove the two mounting bolts exposed by the license plate.*
- Using the same 15mm socket remove the two bolts (per side) holding the bumper to the Frame/Hitch assembly*





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

- F. Remove the OEM Bumper by rotating backwards. The top must clear the boss located on the hitch under the plastic cover.***
- G. Remove the clips holding the trailer hitch plug from the bumper. This plug will be modified to fit the new bumper.***

FOR SENSOR BUMPERS, REFER TO FOLLOWING STEPS.

NOTE: PARKING SENSORS ARE EXTREMELY DELICATE AND MUST BE HANDLED WITH CARE. Do NOT touch or shift the clear rubber grommet that surrounds the sensor face.

- H. Remove OEM electrical harness from bumper. Sensors can be disconnected from housing by depressing the plastic clip indicated by the square (Ref. Figure 1).***
- I. Pop out plastic clips holding harnesses to OEM bumper on both sides and carefully pull away.***
- J. CAREFULLY remove sensors from plastic housing by gently pulling the top and bottom tabs, indicated by circles (Ref. Figure 1), away as sensor is pulled out. Do not push on front of sensor as this will damage the membrane. Place sensors face up in a safe location.***
- K. Remove plastic housing from OEM bumper by depressing the four plastic tabs around the inside and pushing housing out. All sensor housings will have to be placed into the Fab Fours bumper in the same location as they were removed from OE bumper. (e.g. Outer right sensor clip must go into the outer right sensor hole in the Fab Fours bumper.)***





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

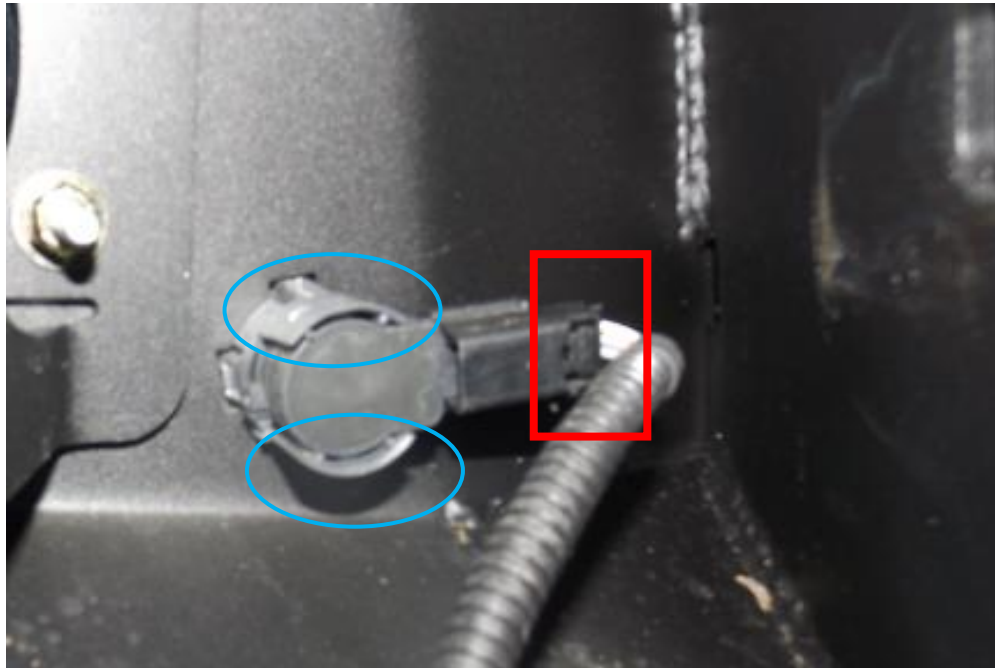


Figure 1

V. Pre-Installation

- A. Remove the bumper from the shipping carton. Lay all items out on a blanket to prevent damage to the powder coating.**
- B. FOR SENSOR BUMPER INSTALLATION: Install sensor housings in bumper, lining up plastic protrusions of the housing with the sensor profile cuts. After testing sensor function, Follow the instructions on epoxy and making sure sensor housings are flush, apply epoxy to inside face of bumper where housing sticks through (ref. figure 2). Run sensor harness through Mount brackets. Reverse steps H through K in previous section making sure that the clear plastic grommet is on properly and sensors appear centered in their housings. Final installation of sensors on passenger side should**





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

appear as follows with driver side sensors mirrored.

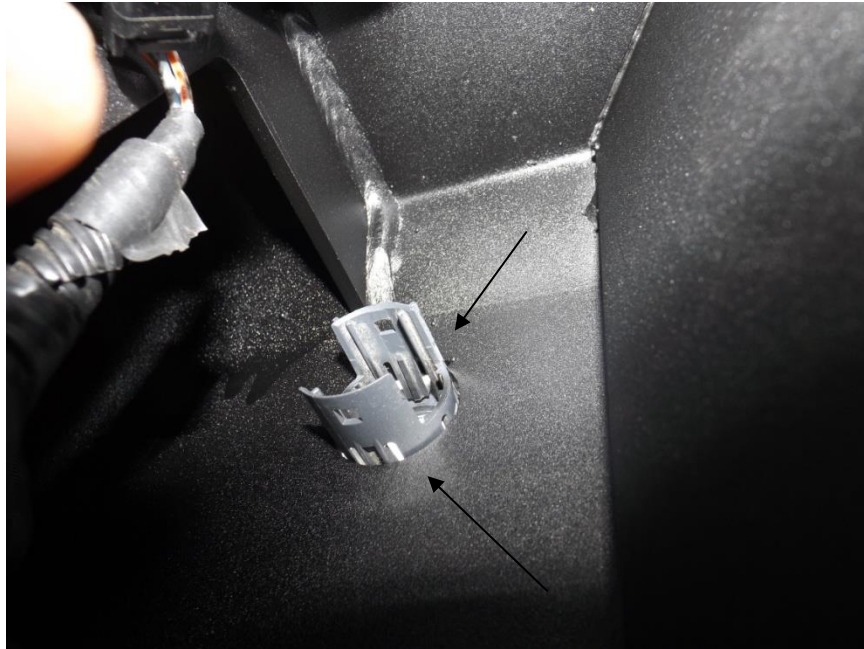


Figure 2 epoxy application locations





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951



Figure 3 Inner passenger side sensor orientation





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951



Figure 4 Outer passenger side sensor orientation





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

VI. Bumper Installation

A. Install license plate inserts in 4 provided locations.

B. Install the license plate lights into the bumper. Clamp the bumper between the two halves using the supplied #8 hardware. These will be wired once the bumper is installed.


C. *When experiencing a hyper flash or when replacing halogen lights with led lights a resistor should be used. The resistor will wire into the positive power supply to the light and the negative side of the ground supply to the light.





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

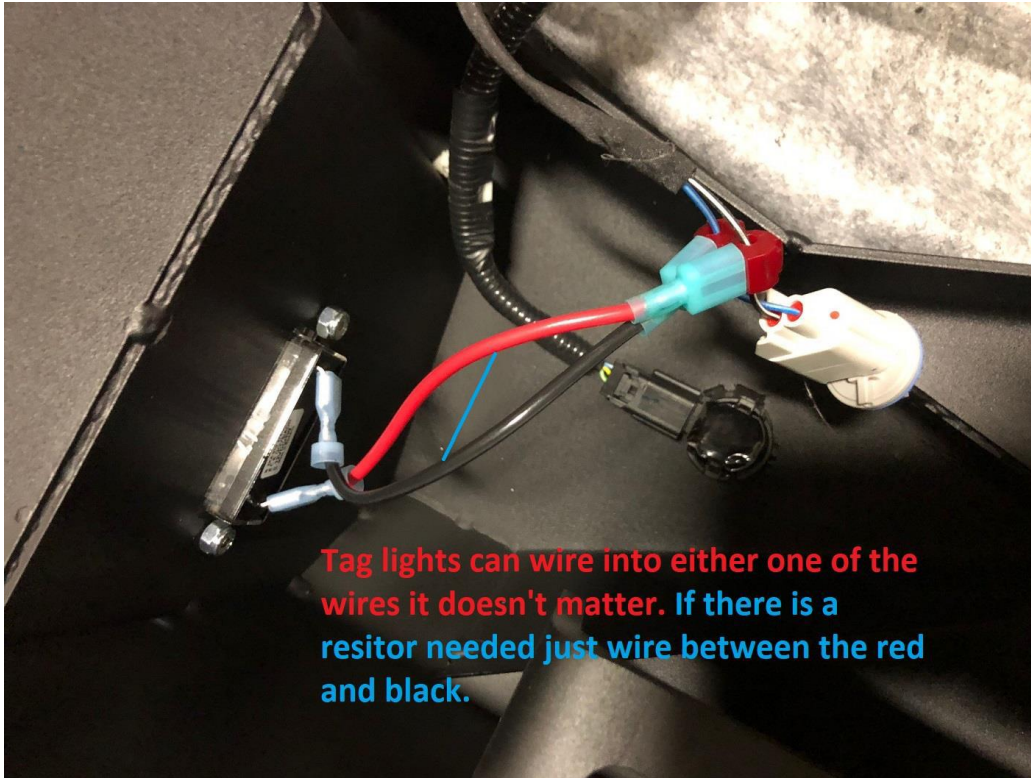




Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

D. Drill the OEM Trailer Hitch Plug using a #16 Drill Bit (.177") in the locations pointed out with arrows below. Use care to drill directly in the center of the circles in the plastic.

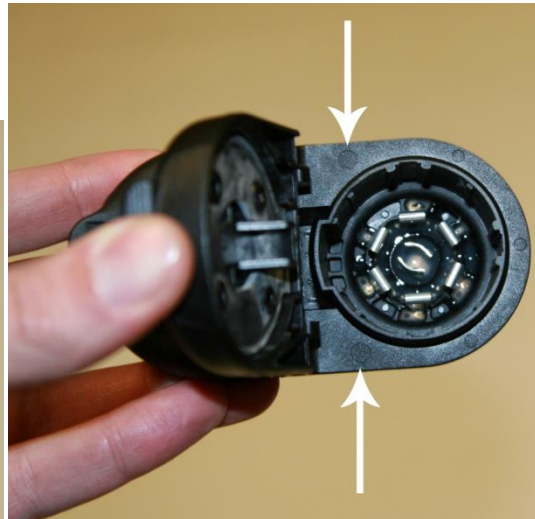

E. Install the trailer plug into the cutout in the new bumper using the #8 Hardware Supplied.


F. Place the two supplied black .25" spacers onto the hitch as shown below.





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

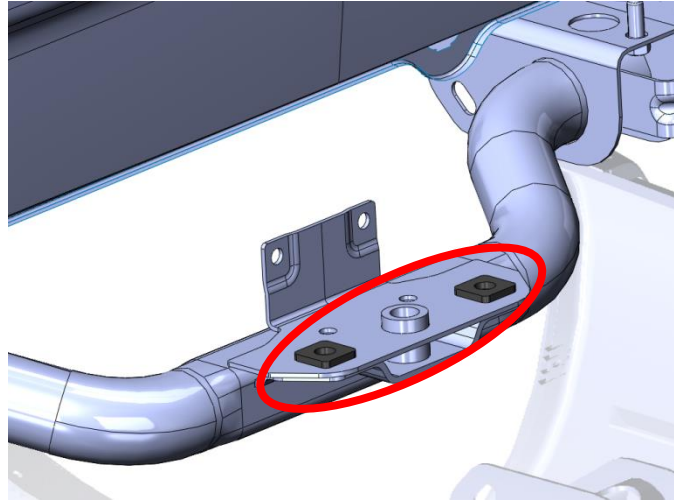

G. Bolt the bumper to the truck, making sure sensor harness is running over tow hitch receiver and using the OEM and supplied mounting hardware: bolts, washers, and nuts. Do not tighten fully. It is best to insert the bolts in through the bumper mounts and place the nuts on the back side of the mounts. See image below.





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

- H. Align bumper height side-to-side, verify tailgate clears while lowered, and tighten bumper mounting fasteners using sockets and wrenches. Bumper should be at the lowest levelled position as to allow for tailgate clearance. USE EXTRA CARE WHEN FIRST LOWERING THE TAILGATE AS TO NOT CAUSE DAMAGE TO YOUR TRUCK!**
- H. Plug the trailer connector harness back into the trailer connector.**
- I. With the supplied wiring harness place the black wire with the female spade connector onto the terminal on the back of the license plate housing that is attached directly to the housing. Using the supplied T-Tap connector tap into the black wire on the factory license plate wiring harness. Repeat on opposite side.**
- J. Place the red wire with the female spade connector onto the terminal on the back of the license plate housing that is insulated from the housing. Using the supplied T-Tap connector tap into the remaining wire on the factory license plate wiring harness. Repeat on opposite side.**
- K. Re-install license plate.**
- L. Prep the area shown below and attach the red LED strip in the location shown. Wire as desired depending on**





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

functionality. You have the following options: wire to your brake lights, running lights or tag lights.





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

VII. Maintenance/Care

- Periodically check and tighten all fasteners.
- Stripped, fractured, or bent bolts or nuts need to be replaced.

Contact Information

Fab Fours Inc.
1312 Camp Creek Rd.
Lancaster, SC 29720

Phone (866)-385-1905
Fax (970)-385-1914
Email Support@fabfours.com



More than expected... Better than expected





Installation Instructions

2009-2018 Dodge 1500,
2010-2018 Dodge 2500-3500 HD
Product Number: E2951

APPENDIX A. Troubleshooting Vehicle Sensors

- Start with a general inspection of the sensor fitment. Check that both the sensors and the sensor clips are fully secure and the sensors are properly centered in the housing.
- Confirm plastic housing is in the correct mounting holes. Misplaced sensor housings could compress sensor and give false readings or faults.
- Use a clean microfiber to wipe the front face of the sensor.
- Inspect connection. Be sure that the sensor is firmly seated into the harness.
- Run through several start cycles (i.e. fully turn the vehicle on and off).
- Finally, disconnect the battery to reset the sensors.

If sensors still do not work, sensors may have been damaged during the installation process. Take vehicle to a certified dealership.

