



1598BAG6

**ROUGH
COUNTRY**
SUSPENSION SYSTEMS®

KICKER BAR KIT

THANK YOU FOR CHOOSING ROUGH COUNTRY FOR YOUR SUSPENSION NEEDS.

Rough Country recommends a certified technician install this system. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle.

Please read instructions before beginning installation. Check the kit hardware against the parts list. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

PRODUCT USE INFORMATION

If questions exist we will be happy to answer them concerning the design, function, and correct use of our products.

NOTICE TO DEALER AND VEHICLE OWNER

Any vehicle equipped with any Rough Country product should have a "Warning to Driver" decal installed on the inside of the windshield or on the vehicle's dash. The decal should act as a constant reminder for whoever is operating the vehicle of its unique handling characteristics.

This optional kicker bar kit is for use with the Rough Country 09-up 4"-6" F150 lift kit and the 11-12 HD 7.5" kit.

Tools Needed:

19mm wrench /socket
24mm wrench /socket

Size
1/2"
5/8"

Torque Specs:

Grade 5	Grade 8
65 ft/lbs	90 ft/lbs
135 ft/lbs	175 ft/lbs



1576BOX6 Containing:

2-Kicker Bars
2-Crossmember Bracket
2-Square Washers



Kit Bag Containing:

2-1/2" X 1" Bolts
2-1/2" x 1 1/4" Bolts
4-1/2" x 3 1/2" Bolts
20-1/2" Flat Washers
8-1/2" Lock Nuts
4-Bushings
2-Sleeves

**ROUGH
COUNTRY**
SUSPENSION SYSTEMS

INSTALLATION INSTRUCTIONS

1. Install the kicker bracket to the rear of the cross member using the supplied 1/2" x 1 1/4" bolts, washers and nuts. Tighten using a 19mm wrench / socket. **See Photo 1.**
2. Install the supplied bushings and sleeves in the kicker bars.
3. Install kicker bars using the 1/2 x 3"1/2 bolts on the rear cross-member as shown in **Photo 2.** Do not tighten at this time.

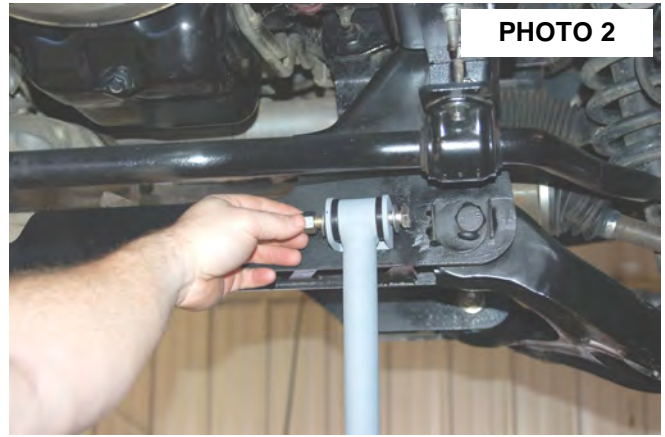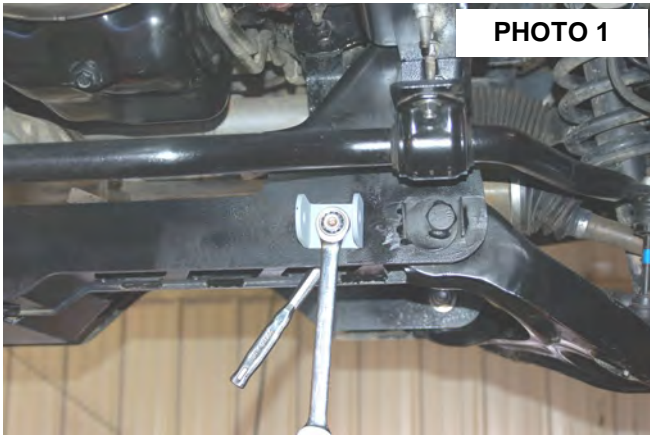

4. Swing up the kicker bar to locate the appropriate location on the factory cross-member to install the bracket. Lower the kicker and install the bracket to the factory cross-member as shown using the supplied 1/2" x 1" bolt, washer and nuts. Tighten using a 19mm socket and wrench. **Photo 3.**
5. Secure the kicker bar to the bracket as shown in **Photo 4** with the supplied 1/2 x 3 1/2 bolts, washers /nuts. Tighten bolts using a 24mm wrench for the rear bolts and 19mm for the front bolts.



POST INSTALLATION INSTRUCTIONS

1. Check all fasteners for proper torque. Check to ensure there is adequate clearance between all rotating, mobile, fixed and heated members. Check steering gear for interference and proper working order.
2. All components must be retightened after 500 miles, and every three thousand miles after installation.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

THANK YOU FOR CHOOSING ROUGH COUNTRY FOR YOUR SUSPENSION NEEDS

**ROUGH
COUNTRY**
SUSPENSION SYSTEMS