



# OLD MAN EMU

## FITTING INSTRUCTIONS

# FK83

## REAR BUMP SPACER FITTING KIT TO SUIT NAVARA D23


### KIT CONTENTS

**DESCRIPTION**  
BUMP SPACER PLATE

**QTY.**  
2

**TOOLS REQUIRED**  
RATCHET & 14MM SOCKET  
TORQUE WRENCH

### FITTING PROCEDURE

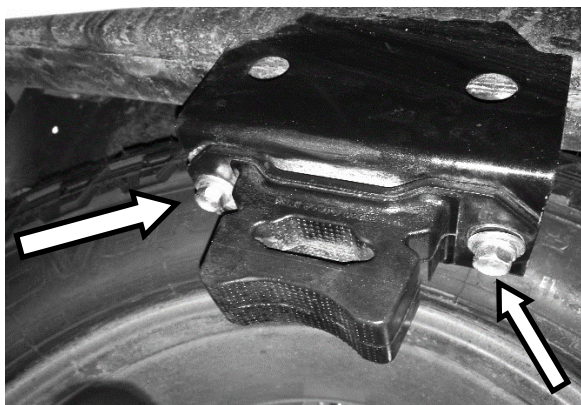

1. LOCATE AND REMOVE THE TWO M12 BOLTS WHICH LOCATE THE BUMPSTOP ON THE VEHICLE.

#### **TOOLS REQUIRED**

- RACKET AND 14MM SOCKET



2. INSERT THE BUMP SPACER PLATE UNDERNEATH THE BUMPSTOP AND RE-ATTACH THE RUBBER BUMP STOP USING THE ORIGINAL BOLTS. TORQUE BOLTS TO MANUFACTURES SPECIFICATIONS.

#### **PARTS REQUIRED**

- REAR BUMP SPACER PLATE
- ORIGINAL M12 BOLTS
- TORQUE WRENCH