



JEEP REAR BAR PIN ELIMINATOR KIT

Thank you for choosing Rough Country for your Jeep off road needs.

Please read all the instructions before beginning the installation.

PRODUCT USE INFORMATION

We will be happy to answer any questions regarding our products by calling us @ 800-222-7023. Rough Country will not be responsible for any product that is altered.

KIT CONTENTS

2-REAR UPPER SHOCK BRACKETS
1-POLY BAG CONTAINING:
2-SHOCK SLEEVES
2-1/2" X 2 1/2" BOLTS
2-1/2" LOCK NUTS

TOOLS NEEDED

13MM WRENCH
3/4" WRENCH /SOCKET



INSTALLATION INSTRUCTIONS

1. After the rear shock absorber has been removed from the rear upper mount. Install the bar pin bracket as shown in the stock location with the stock hardware as shown in **Photo 1**. Tighten using a 13mm wrench.
2. Install the shock absorber on the bar pin bracket with the supplied 1/2" x 2 1/2" bolt and lock nut as shown in **Photo 2**. Tighten using a 3/4" wrench & socket.

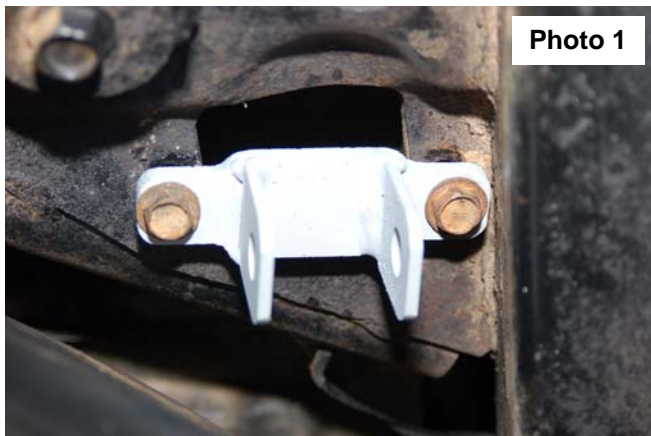


Photo 1



Photo 2

POST INSTALLATION

1. Check all fasteners for proper torque. Check to ensure there is adequate clearance between all rotating, mobile, fixed and heated members. Check steering for interference and proper working order.
2. Re torque all fasteners after 500 miles. Visually inspect components and re torque fasteners during routine vehicle service.