



## JK 2 1/2" - 6" FORGED FRONT TRACK BAR

Thank you for choosing Rough Country for your suspension needs.

In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Please read instructions before beginning installation. Check the kit hardware against the parts list. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools. If question exist we will be happy to answer any questions concerning the design, function, and correct use of our products by calling 1-800-222-7023.

### Parts Included:

1-Track Bar Assembled



### Tools Needed:

18mm Socket / Wrench  
21mm Socket / Wrench



### INSTALLATION INSTRUCTIONS

1. Using a 21mm socket, remove bolt securing the front track bar to the frame. Retain stock hardware. **See Photo 1.**
2. Remove the track bar from the axle using a 21mm wrench. Retain the hardware for reuse. **See Photo 2.**
3. Adjust the track bar to a length of 32 7/8+center of hole to center of hole. Install the new track bar into stock frame bracket using the stock hardware.

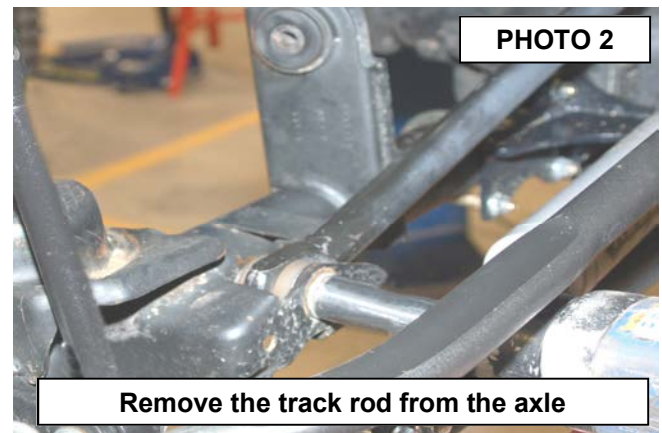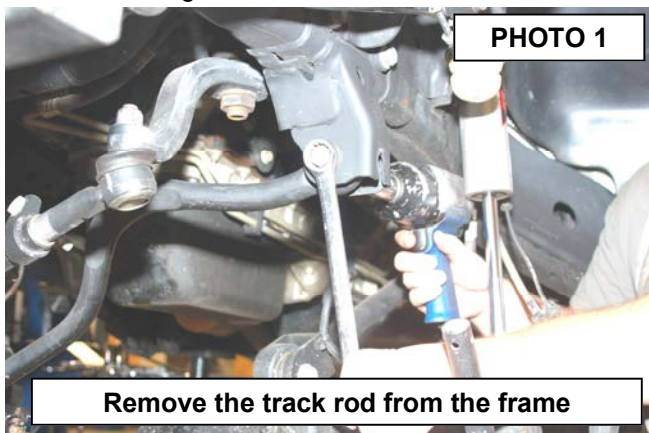

4. Check to make sure the body is centered over the axle and install the lower end of the new track rod on the axle as shown in **Photo 3**. Torque all fasteners to specifications. **It may be necessary to turn the steering wheel to align the track rod end with the axle. \*Note\* Make sure the jeep is setting on the ground at ride height before tightening track bar bolts.**
5. Tighten the pinch clamps on the track bar with a 18mm socket and wrench. Make sure the pinch clamp and bolts do not come in contact with anything during suspension travel.

### POST INSTALLATION

All components must be retightened after 500 miles, and every three thousand miles after installation.

Thank you for using Rough Country Suspension for your off road needs!!