



**CHEVY / GMC 1500 (07-13) and HD MODELS (11-14)**  
**INSTALLATION INSTRUCTIONS**  
**Rear Wheel Well Inner Liner**  
 92420700 - 92420800

**List of Contents:**

**Qty.**

1 Pc. Right Hand Inner Wheel Well Liner



1 Pc. Installation Kit

8 pc. Black Self-taping Screws



1 Pc. Left Hand Inner Wheel Well Liner



6 pc. Plastic Push Pin



1 pc. Installation Instructions.

**Tools Required**

1 Drill with Socket/Driver of 5/16" (8mm)

**Preparations:**

Clean the interior panels of the rear Wheel house.

Note: Tire removal is optional for installation

**Technical Support phone line:**

**Instructions:**


**Installation time estimated: 15 min.**

1. PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.

**NOTE:** One person can do the installation.

**WHEEL WELL LINER**

2. Starting on the right side, mount the wheel well liner marked as (RH) on the inner panel of the wheel house. (See Fig. 1)

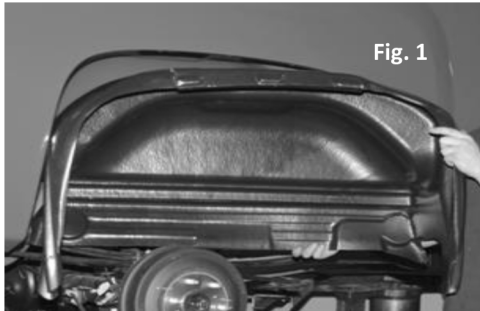



3. Be sure that the upper section of the plastic liner is mounted behind the flange and around the wheel well house edge. (See fig. 2)



4. Be sure that the 3 holes drilled on the plastic liner are aligned with the 3 pre-drilled holes on the top edge of the wheel house, and install one plastic push pin in each hole. (See Fig. 3)



5. Using a drill with socket/driver 5/16" (7mm), Install one self-taping screw in each pre-drilled hole of the plastic liner and into the wheel house sheet metal. (See fig. 4 and 5)

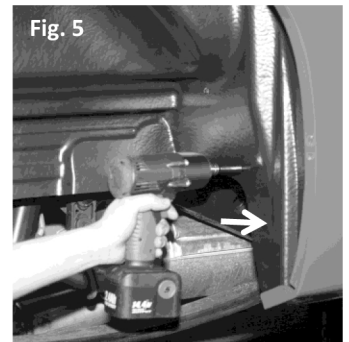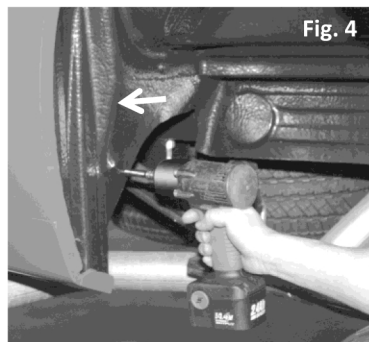

6. Repeat the procedure of the steps 2, 3, 4, and 5 for the left side.

**Care and Maintenance Recommendations**

To protect the appearance of this product, wash with soap and water