


# End link Instruction Sheet

## 1986-88 Mazda RX7 Set # 9-8134

**ENERGY**  
**SUSPENSION**

1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

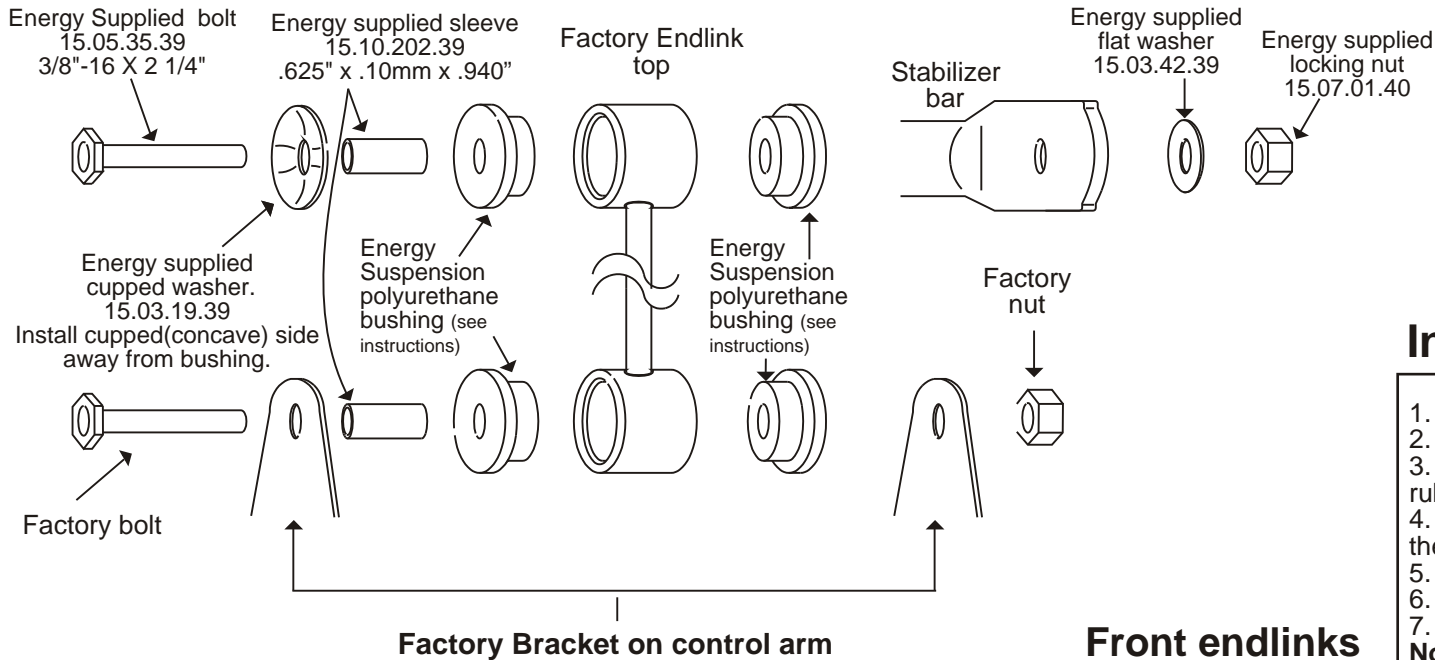

It is recommended that a factory service manual be purchased prior to performing any work on your car or truck.

### Instructions:


1. Remove endlinks.
2. Remove bushing and sleeve.
3. Clean endlink surfaces of all old rubber.
4. Grease all sides of bushing where there is contact with metal.
5. Press bushing into endlink.
6. Press in sleeve.
7. Assemble as shown in diagram.

**Note:** On some vehicles, one end of the endlink is larger in diameter than the other end. Use part #2300 instead of part #2305.

### Front endlinks

### Rear endlinks

Factory bolt  
This bolt is the longer of the two factory bolts.  
The shorter bolt will not be used.

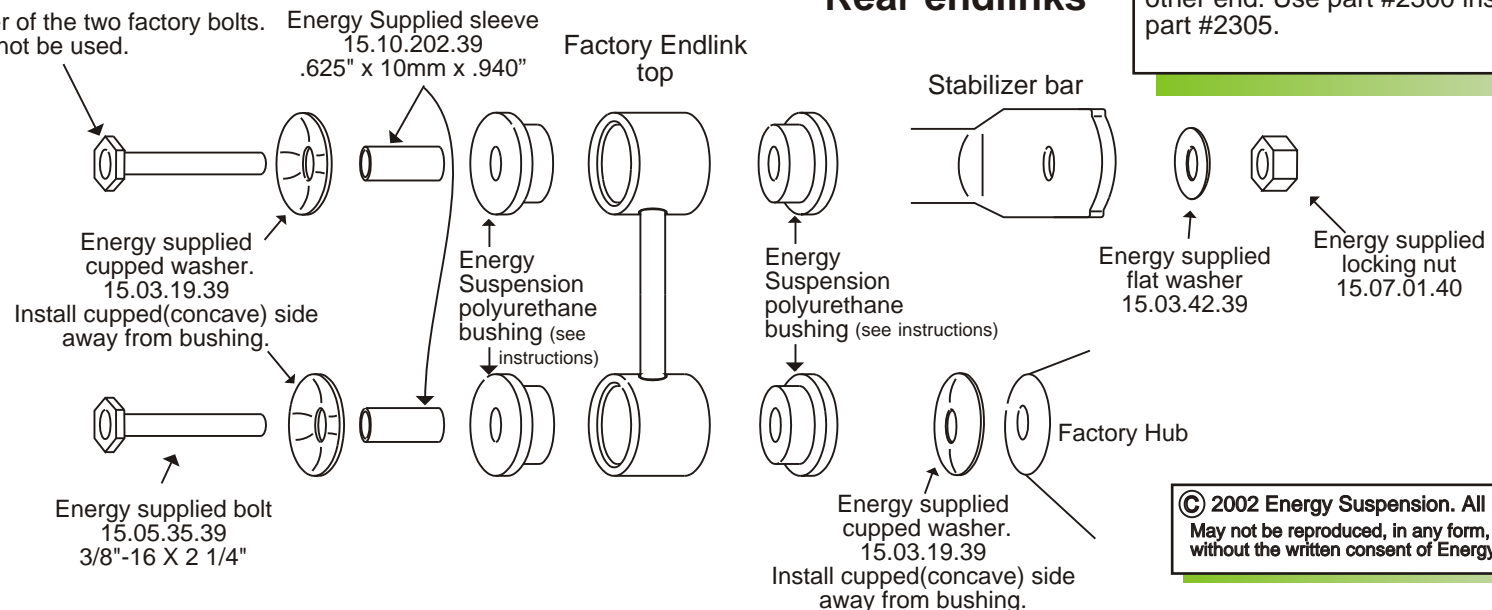

© 2002 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.

17123

1/17/97 KN

Updated 15/FEB/02 BRH