

# Installation Instructions for Set # 3-10102 63-82 Corvette

## Parts list:


- 2 - 8052 Power steering ram bushings.
- 1 - 15.10.152.39 (.500"O.D. X .375" I.D. X 1.125" LG. sleeve)
- 2 - 15.03.01.39 (1.250"O.D. X .375" I.D. cup washer)
- 1 - 15.05.22.40 (3/8-16" slotted nut)
- 1 - 15.08.87.40 ( 1/16" x 3/4" cotter pin)

Remove cotter pin and slotted nut from steering ram. **Do not grip polished rod with any tools.** Remove old rubber bushings, washers and sleeve. Install new polyurethane bushings, washers and sleeve. Tighten new slotted nut until washer bottoms on the sleeve. Then turn nut until slot is aligned with hole in ram and insert new cotter pin.

**17361**  
11/DEC/01 BRH

**ENERGY**  
**SUSPENSION** 

1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

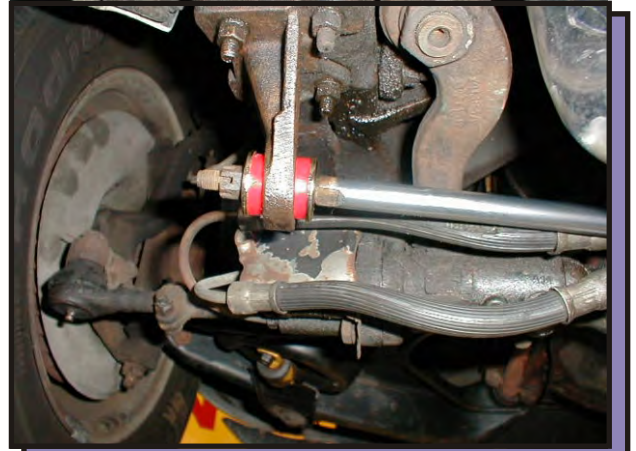

©2002 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.

# Installation Instructions for Set # 3-10102 63-82 Corvette

## Parts list:


- 2 - 8052 Power steering ram bushings.
- 1 - 15.10.152.39 (.500"O.D. X .375" I.D. X 1.125" LG. sleeve)
- 2 - 15.03.01.39 (1.250"O.D. X .375" I.D. cup washer)
- 1 - 15.05.22.40 (3/8-16" slotted nut)
- 1 - 15.08.87.40 ( 1/16" x 3/4" cotter pin)

Remove cotter pin and slotted nut from steering ram. **Do not grip polished rod with any tools.** Remove old rubber bushings, washers and sleeve. Install new polyurethane bushings, washers and sleeve. Tighten new slotted nut until washer bottoms on the sleeve. Then turn nut until slot is aligned with hole in ram and insert new cotter pin.

**17361**  
11/DEC/01 BRH

**ENERGY**  
**SUSPENSION** 

1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

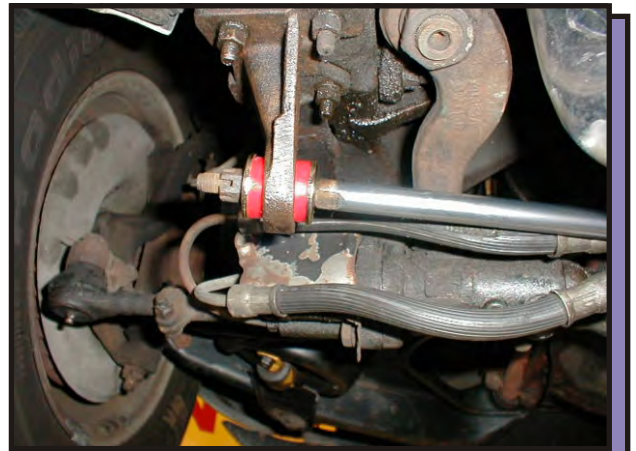

©2002 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.