

Installation instructions

For set # 7.4103

350Z-G35 REAR SUB-FRAME



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673


© 2010 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle.

Parts list:

- | | |
|-----------------------|--|
| 2 - 4280 Top Front | 2 - 15.10.629.39 Sleeve 1.375x.850x3.215 |
| 2 - 4281 Bottom Front | 2 - 15.10.630.39 Sleeve 1.375x.850x3.260 |
| 2 - 4282 Top Rear | 1 - 17557 Instructions |
| 2 - 4283 Bottom Rear | |

1. Once you get the Sub-Frame pulled out, you then can remove the stock bushings.
You can use threaded rod, washers, nuts and sleeves to pull out the bushings. Then you will install the new bushings in the Sub-Frame.
2. Reinstall the Sub-Frame back in the car and re-torque all required bolts to factory specs.

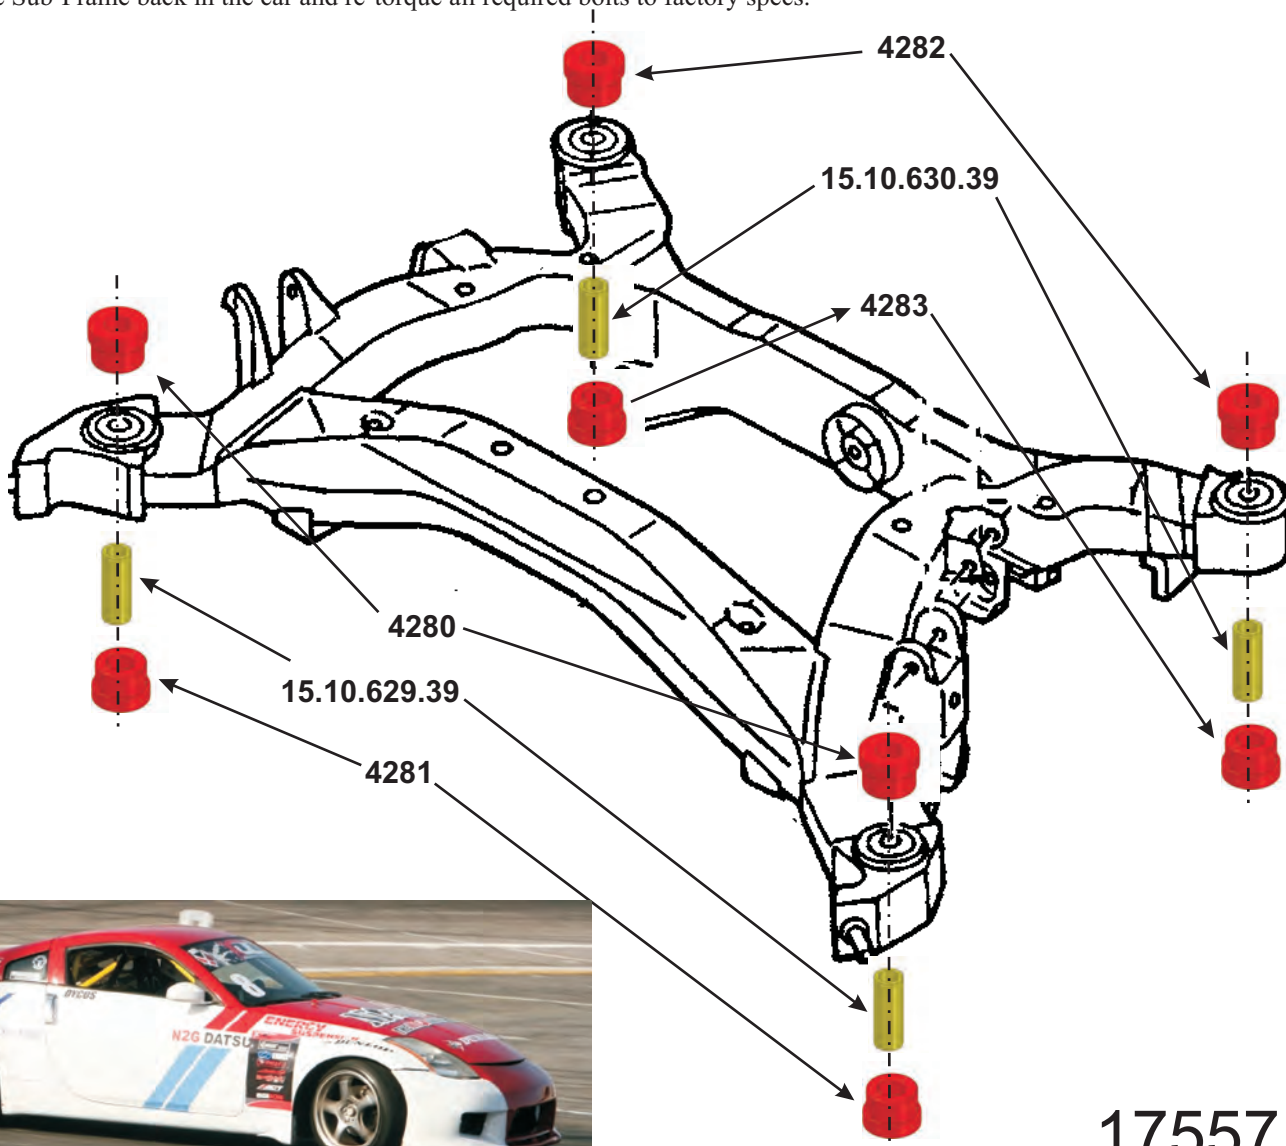

17557
15/DEC/10 BO