

Y62 2.5
INSTALLATION GUIDE



Nissan Patrol Y62 (2010+)

985-02-137: 10-ON Nissan Patrol Y62, Front Coilover, PS, 2.0, IFP, 0-2" Lift

985-24-253: 10-ON Nissan Patrol Y62, Rear, PS, 2.0, IFP, 0-2" Lift

883-06-174: Kit: 10-ON Nissan Patrol Y62, Front Coilover, 2.5 Truck PES, R/R, 0-2" Lift, DSC

883-26-086: Kit: 10-ON Nissan Patrol Y62, Rear, 2.5 Truck PES, P/B, 0-2" Lift, DSC



NISSAN PATROL Y62 (2010+)

NISSAN PATROL Y62 (2010+)

985-02-137: 10-ON Nissan Patrol Y62, Front Coilover, PS, 2.0, IFP, 0-2" Lift

985-24-253: 10-ON Nissan Patrol Y62, Rear, PS, 2.0, IFP, 0-2" Lift

883-06-174: Kit: 10-ON Nissan Patrol Y62, Front Coilover, 2.5 Truck PES, R/R, 0-2" Lift, DSC

883-26-086: Kit: 10-ON Nissan Patrol Y62, Rear, 2.5 Truck PES, P/B, 0-2" Lift, DSC

Thank you for choosing FOX direct-replacement shocks for your vehicle. FOX products are designed, tested, and manufactured by the finest professionals in the industry.

FOX recommends that you become completely familiar with the handling characteristics of your modified vehicle before operating it under rigorous conditions, helping to avoid potential rollover situations and other loss of control events. FOX further recommends that you use appropriate protective equipment at all times when operating your vehicle.

To achieve the best performance and product longevity, periodic service and maintenance is required. Please refer to the Service and Upgrades section for more information.

Table of Contents

SAFETY WARNINGS.....	2
INSTALLATION GUIDELINES	2
Y62 2.5 INSTALLATION	3-9
FACTORY SETTINGS.....	10
WARRANTY	11
SHOCKS NEED LOVE TOO.....	12

SAFETY INSTRUCTIONS

WARNING

- FOX direct-replacement shocks are designed to fit and allow proper clearance with the stock suspension. If aftermarket suspension components are installed it is the customer's responsibility to ensure that interference between the FOX shocks and other vehicle components does not occur at any point in the shock stroke.
- FOX direct-replacement shocks should always be installed as a set for maximum performance.
- Proper installation and service procedures are essential for the safe and reliable operation of the suspension components, requiring the experience and tools specially designed for this purpose. Installation and maintenance procedures for this product must be performed by a qualified service technician, to avoid potentially unsafe vehicle handling characteristics, which may result in SERIOUS INJURY or DEATH.
- Modifying your vehicle's suspension will change the handling characteristics of your vehicle. Under certain conditions, your modified vehicle may be more susceptible to loss of control or rollover, which can result in SERIOUS INJURY or DEATH. Thoroughly familiarize yourself with the modified vehicle handling characteristics before any rigorous vehicle operation. Wear protective body gear and a helmet when appropriate. Installation of vehicle roll bars or cage is highly recommended.
- FOX direct-replacement shocks are gas-charged and are highly pressurized. Placing shocks in a vise or clamp, applying heat, or attempting to open or service the shock without the proper tools and training can result in SERIOUS INJURY or DEATH. Do not attempt to modify, puncture or incinerate a FOX direct-replacement shock absorber.
- Any attempt to misuse, misapply, modify, or tamper with any FOX product voids any warranty and may result in SERIOUS INJURY or DEATH.

INSTALLATION GUIDELINES

WARNING

- Always use a chassis lift for the installation of shocks, and make certain that the raised vehicle is securely attached to the lift to prevent the vehicle from slipping, falling, or moving during the installation process.
- DO NOT install any FOX product without the necessary special tools, expertise and chassis lift or you will subject yourself to the risk of SERIOUS INJURY or DEATH. If you elect to not use a chassis lift (which may result in SERIOUS INJURY or DEATH), ensure that the vehicle is: (1) on level ground, (2) that all tires on the ground during installation are blocked to prevent vehicle movement, (3) that at least two tires are on the ground at all times, and (4) that adequately secured jack stands are used to support the vehicle. NEVER get under the vehicle until you have checked to ensure that the vehicle will be stable during installation.
- FOX direct-replacement shocks are designed to fit your vehicle's shock mounts without modification except the reservoir placement on specific models and applications.
- If a preload adjustment is necessary for your application DO NOT adjust preload with the coil-over on the vehicle. Remove the coil-over from the vehicle and use a spring compressor to remove the lower spring hardware and spring. Once the spring is removed, you can adjust the preload ring. DO NOT Exceed more than 1/2" of additional preload. If more than 1/2" of preload is required, you will need to go up in spring rate or get a longer spring that fits the application.

Y62 2.5 INSTALLATION INSTRUCTIONS - FRONT

Medium-strength thread-locker (blue) is recommended on all bolts.

1. Before lifting the vehicle, record the vehicle ride height to ensure proper lift is attained after kit is installed. Do this by measuring the distance from the top of the tire to the fender at both front tire locations on the vehicle. You will be able to make preload adjustments if needed once the shock assembly is installed. Please refer to the Installation Guidelines section for instructions on how to properly adjust preload.
2. Refer to the Installation Guidelines section for instructions on how to properly lift and secure the vehicle.
3. Remove front wheels from the vehicle.
4. Remove the (3) top nuts and washers that secure the stock shock assembly to the vehicle. **DO NOT** remove the center nut—doing so will release the spring from the stock shock assembly and could result in **SERIOUS INJURY** or **DEATH**. **DO NOT DISCARD HARDWARE AS IT WILL BE USED WITH YOUR NEW FOX SHOCK.**
5. Remove the lower bolt and nut connecting the stock shock to the vehicle. **DO NOT DISCARD HARDWARE AS IT WILL BE USED WITH YOUR NEW FOX SHOCK.**
6. For Performance Series models, proceed to Step 10. For external reservoir models, install the supplied reservoir bracket onto the vehicle frame as shown (Figure 1). Using a 7/32" drill bit, drill a pilot hole centered 1/4" below the top of the upper control arm bracket brace and adjacent to the side of the weld (Figure 2).



Figure 1: Passenger side shown

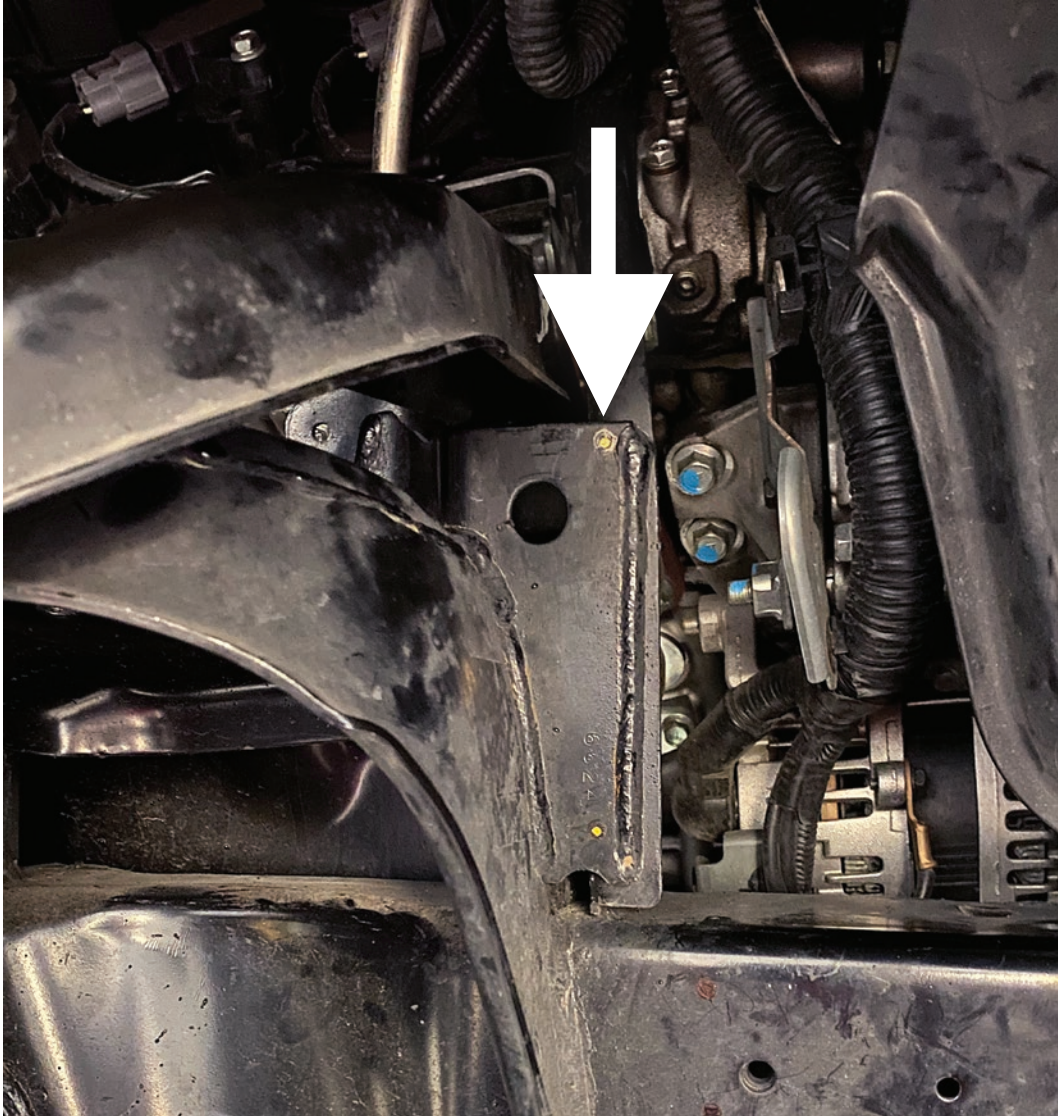


Figure 2: Passenger side shown

7. Install the bracket using one of the supplied 1/4" self-tapping screws.

8. Ensure that the bracket is straight and drill the other pilot hole using a 7/32" drill bit (Figure 3).



Figure 3: Passenger side shown

9. Install the other supplied 1/4" self-tapping screw.

10. Install your new FOX shock as shown (Figure 4). For external reservoir models, ensure that hoses are facing outward and towards the front of the vehicle.

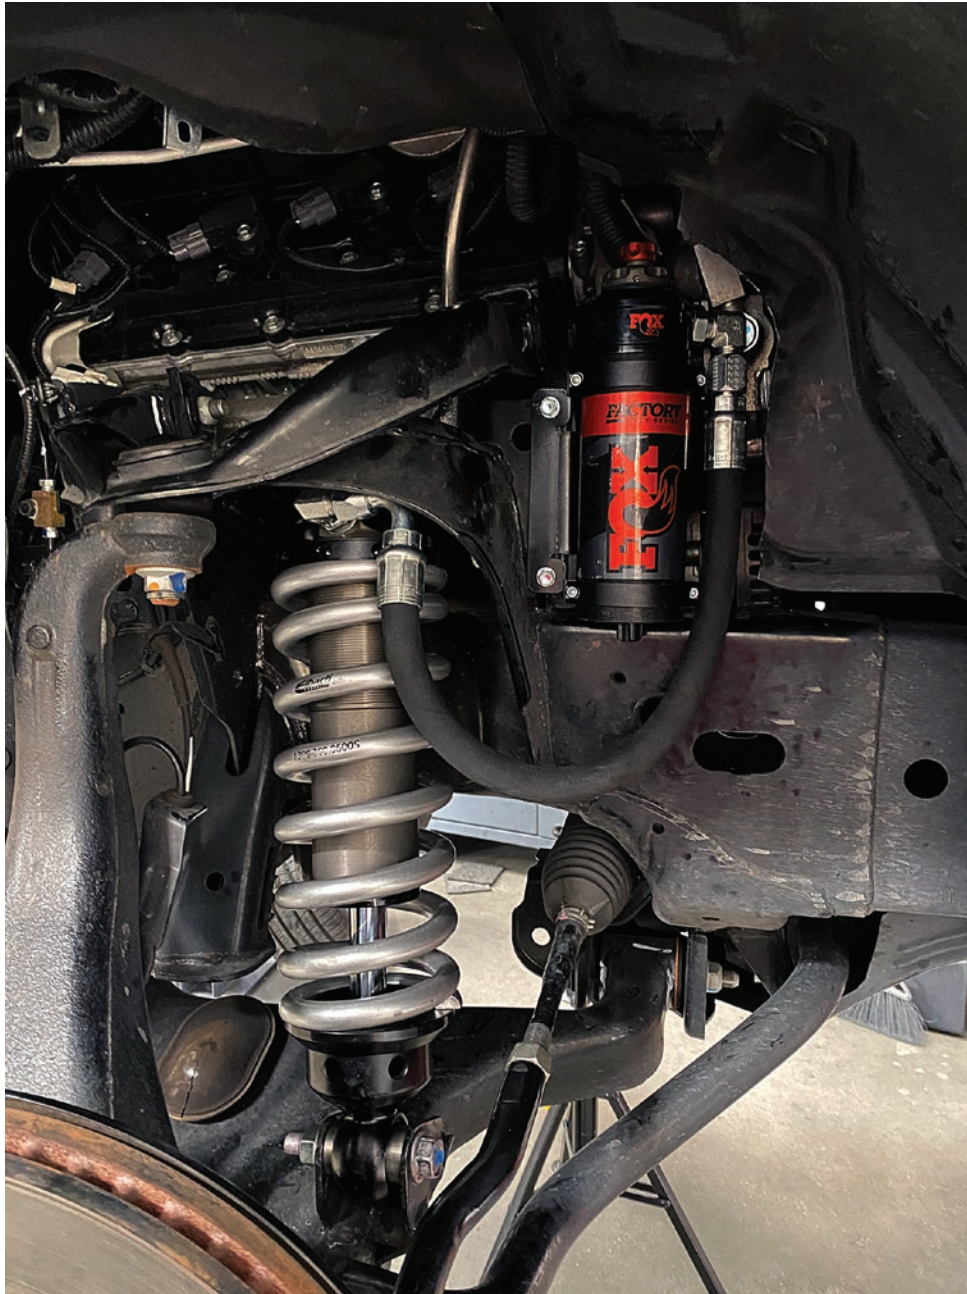


Figure 4: Passenger side shown

11. Connect the top shock hat to the vehicle using provided nuts and washers (external reservoir models) or the OEM nuts and washers (Performance Series models). Torque to OEM specifications.
12. Connect the lower eyelet to the vehicle using the OEM lower bolt and nut. Torque to OEM specifications.

13. On external reservoir models, install the reservoir onto the reservoir bracket using the two supplied clamps (Figure 5). Use the slots in the bracket to locate clamps. DO NOT feed clamps through the slots in the brackets. Torque the (4) socket head cap screws to 19 IN-LBS.

NOTE: Some fender liner trimming or removal may be required for proper reservoir fitment.



Figure 5: Passenger side shown

14. Repeat Steps 1-13 on the other side of the vehicle.
15. Reinstall both front wheels and torque to OEM specifications.
16. Set vehicle back on the ground and drive it back and forth several feet to allow the suspension to settle.
17. Check that the suspension has proper clearance by steering completely in both directions.
18. Measure ride height and adjust if necessary. Refer to the Installation Guidelines section for instructions on how to properly adjust preload.
19. It is highly recommended that you have your wheel alignment checked.

Y62 2.5 INSTALLATION INSTRUCTIONS - REAR

Medium-strength thread-locker (blue) is recommended on all bolts.



1. Please refer to the Installation Guidelines section for instructions on how to properly lift and secure the vehicle.
2. Remove rear wheels from the vehicle.
3. Remove lower and then upper bolt to remove stock shock. It may be necessary to support or raise the vehicle axle to remove bolts and for installation of your new FOX shock.
DO NOT DISCARD HARDWARE AS IT WILL BE USED WITH YOUR NEW FOX SHOCK.
4. Install your new FOX shock using factory hardware (Figure 6). For external reservoir models, ensure that reservoir is facing toward the front of the vehicle on both driver and passenger sides. Torque to OEM specifications.



Figure 6: Passenger side shown

5. Reinstall rear wheels. Torque to OEM specifications.

FOX FACTORY SETTINGS

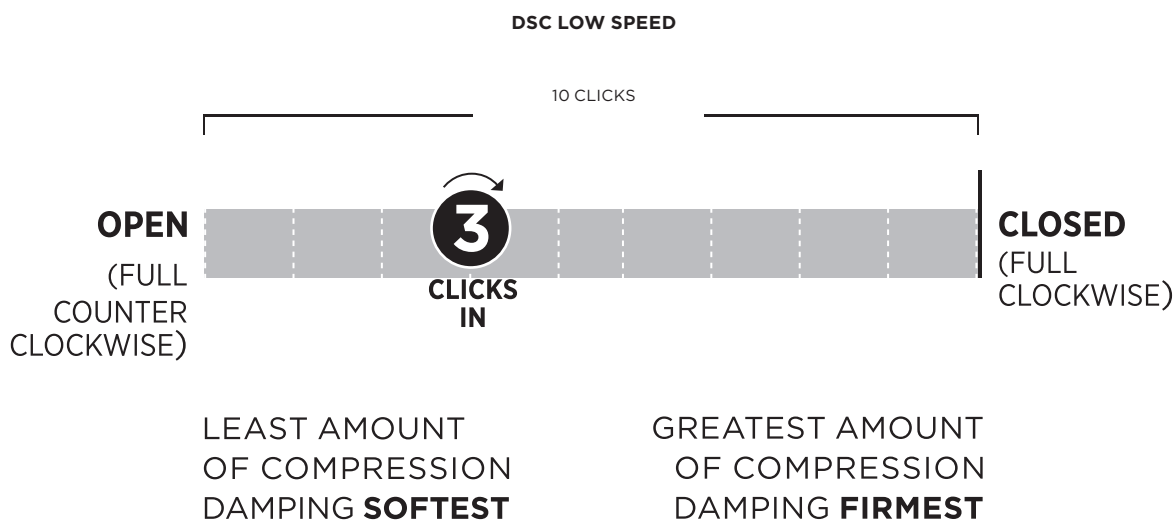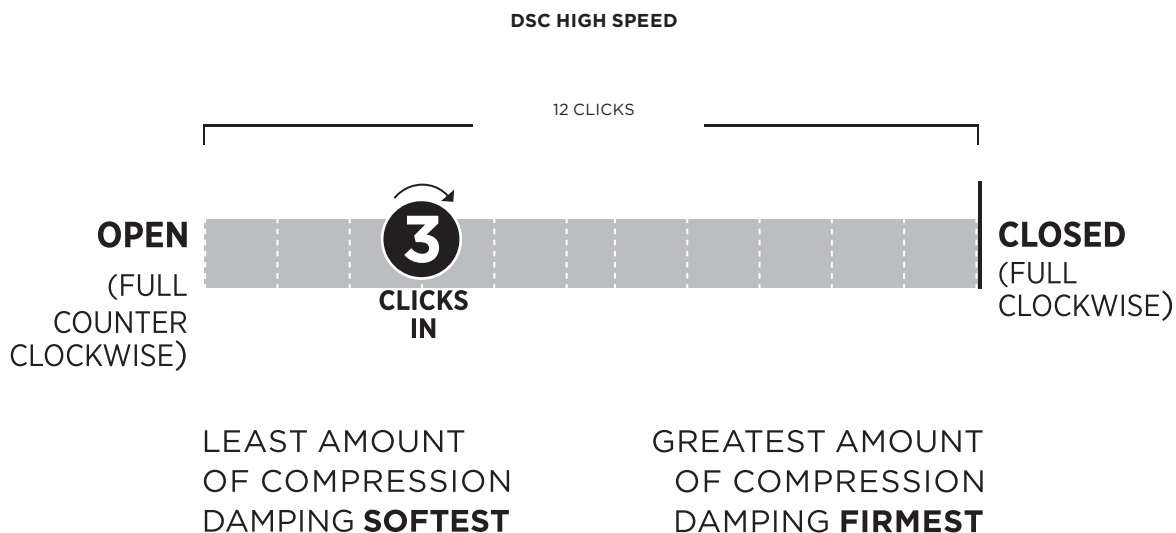



FOX LIMITED WARRANTY

FOX Factory, Inc., a Georgia corporation having an office at 6634 Highway 53 Braselton, GA 30517 (“FOX”), makes the following LIMITED WARRANTY with respect to its suspension products:

LIMITED ONE (1) YEAR WARRANTY ON SUSPENSION PRODUCTS.

Subject to the limitations, terms and conditions hereof, FOX warrants, to the original retail owner of each new FOX suspension product, that the FOX suspension product, when new, is free from defects in materials and workmanship. Unless otherwise required by law, this warranty expires one (1) year from the date of the original FOX suspension product retail purchase from an authorized FOX dealer or from a FOX authorized Original Equipment Manufacturer where FOX suspension is included as original equipment on a purchased vehicle. If law requires a warranty duration of greater than one (1) year, then, subject to the other provisions hereof, this warranty will expire at the end of the minimum warranty period required by such law.

TERMS OF WARRANTY

This warranty is conditioned on the FOX suspension product being operated under normal conditions and properly maintained as specified by FOX. This warranty is only applicable to FOX suspensions purchased new from an authorized FOX source and is made only to the original retail owner of the new FOX suspension product and is not transferable to subsequent owners. This warranty is void if the FOX suspension product is subjected to abuse, neglect, improper or unauthorized repair, improper or unauthorized service or maintenance, alteration, modification, accident or other abnormal, excessive, or improper use.

Should it be determined by FOX in its sole and final discretion, that a FOX suspension product is covered by this warranty, it will be repaired or replaced, by a comparable model, at FOX’s sole option, which will be conclusive and binding. THIS IS THE EXCLUSIVE REMEDY UNDER THIS WARRANTY. ANY AND ALL OTHER REMEDIES AND DAMAGES THAT MAY OTHERWISE BE APPLICABLE ARE EXCLUDED, INCLUDING, BUT NOT LIMITED TO, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR PUNITIVE DAMAGES.

This limited warranty does not apply to normal wear and tear, malfunctions or failures that result from abuse, improper assembly, neglect, alteration, improper maintenance, crash, misuse or collision. This limited warranty gives the consumer specific legal rights. The consumer may also have other legal rights which vary from state to state or country to country. Some states and countries do not allow the exclusion or limitation of incidental or consequential damages or warranties, and if dictated by law the above limitations or exclusions may not apply to you. If it is determined by a court of competent jurisdiction that a certain provision of this limited warranty does not apply, such determination shall not affect any other provision of this limited warranty and all other provisions shall remain in full effect.

THIS IS THE ONLY WARRANTY MADE BY FOX ON ITS SUSPENSION PRODUCTS AND COMPONENTS, AND THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION HEREIN. ANY WARRANTIES THAT MAY OTHERWISE BE IMPLIED BY LAW INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXCLUDED.



SHOCKS NEED LOVE TOO

FOX SHOCKS SERVICE & UPGRADES

HAVE YOUR FOX PRODUCT SERVICED OR UPGRADED BY FOX TECHNICIANS. CALL OUR OFF-ROAD AND TRUCK SERVICE CENTER AT 619.768.1800 TO GO OVER THE SERVICE AND UPGRADE OPTIONS AVAILABLE FOR YOUR PRODUCT. ONCE YOU SET UP YOUR SERVICE AND/OR UPGRADES YOU WILL RECEIVE A RETURN AUTHORIZATION NUMBER SHIPPING INSTRUCTIONS.

COMPLETE SERVICE INTERVALS

- 100% STREET USE:
EVERY 50,000 MILES
- 50% STREET/50% OFF-ROAD USE:
EVERY 10,000 MILES

SERVICE MENUS & PRICING

VISIT RIDEFOX.COM/ORSERVICE



WARNING: Cancer and Reproductive Harm –
www.P65Warnings.ca.gov