

Install Instructions

PRP Seats

Polaris RZR PRO XP

2 Door Seats Installation



Parts

A.



B.



Read through all of the instructions completely before beginning the install.

Parts Included:

A. Seat Adapter Brackets

- 1 x Driver Side Adapter Bracket (Right)
- 1 x Driver Side Adapter Bracket (Left)
- 1 x Passenger Side Adapter Bracket (Right)
- 1 x Passenger Side Adapter Bracket (Left)

B. Hardware

- 8 x 1/4"-20 X 1"L Hex Bolts
- 8 x 1/4" USS Flat Washer
- 8 x 1/4" Split Lock Washer


Remove all parts from the box and unwrap completely using the packaging to lay out the pieces.

Tools Needed: (not included)

- 10mm Socket
- 10mm Wrench (with ratchet end)
- 7/16" Socket
- 1/2" Socket

Time:

Approx 2 Hours.

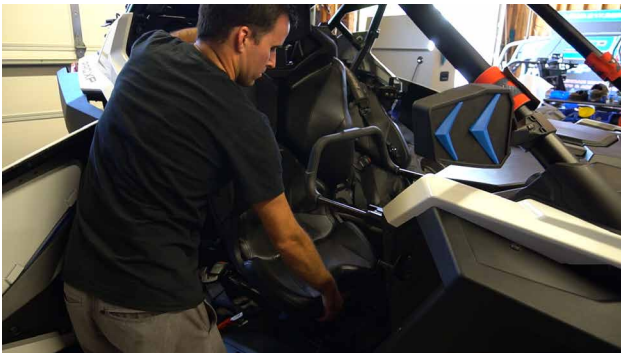

- 1. Remove the stock seats from the vehicle. Unlatch the seat and pull it up & out.**

Note: If you have a Click 6 Harness, you may need to unbolt the lap and front straps, and pull them through the harness slots to fully remove the seat.



- 2. Driver Side Install -**

Start by removing the stock seat bracket. Use a 10mm socket to remove the (8) nuts connecting the stock brackets to the sliders.



- 3. Take off both stock brackets, the metal clamps, and the plastic clamps underneath.**



- 4. Next take your PRP Seat, unbag it, and place it upside down on a clean surface so you can see the bottom of the seat.**

The seat should have two flat metal straps running side to side , with bolt holes where you will mount the PRP adapter brackets.



- 5. Place the Driver Side Brackets onto the bottom of the seat.**
The smaller bolt holes in the brackets should line up with the bolt holes on the seat frame.
The brackets should be oriented so that the triangle cut-out is towards the front of the seat.



- 6. Once everything is lined up, install the brackets to the seat using (4) of the 1/4" bolts, split washer, and flat washers that we supplied. Use a 7/16" wrench or socket to tighten them down.**



- 7. Place the PRP Seat into the vehicle.**
Make sure that both sliders are lined up even with each other. Make sure all 8 bolts line up with the slots on the bottom of the bracket.

Re-install your Click-6 harness... Or if you are changing to a PRP Harness, now is the perfect time to install it while everything is easy to access.



- 8. Re-Install the (8) stock nuts using a 10mm wrench. Using a wrench with a ratchet-end makes this fast and easy.**

Tip: Slide the seat forward and backward to get better access underneath the seat.


Tip: Pull open the release lever to better access the bolts/nuts hidden behind it.



9. Passenger Side Install -

Start by removing the stock seat bracket. Use a 1/2" socket to remove the (4) bolts that connect the stock brackets to the frame.

Note: The front straps of the Click 6 harness are mounted to the bracket being removed, and will need to be relocated.

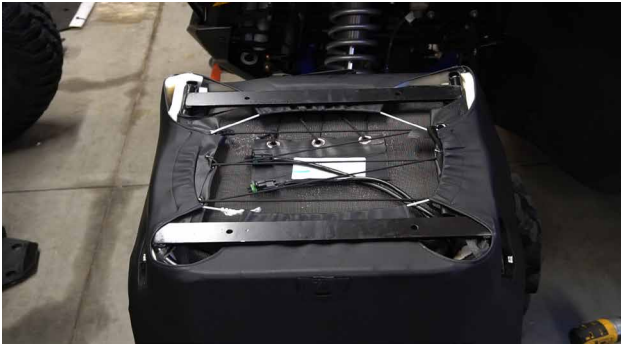

10. Next take your PRP Seat, unbag it, and place it upside down on a clean surface so you can see the bottom of the seat.

Place the passenger side brackets onto the bottom of the seat.




11. The brackets should be oriented with the angled section towards the front of the seat.

The bolt holes that connect to the seat should be oriented so that they are towards the center of the seat (narrower).



12. Install the brackets to the seat using (4) of the 1/4" bolts, split washer, and flat washers that we supplied. Use a 7/16" wrench or socket to tighten them down.

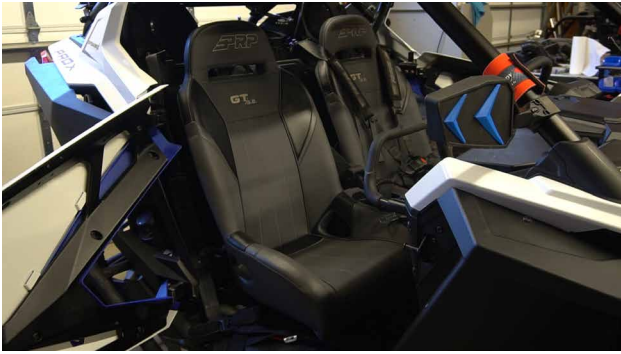

- 13. Place the PRP Seat into the vehicle. Make sure that both brackets are lined up inside the stock mounts. Make sure the bolt holes on the side of the PRP brackets line up with the bolt holes on the stock mount.**

Re-install your Click-6 harness... Or if you are changing to a PRP Harness, now is the perfect time to install it while everything is easy to access.



- 14. Use a 1/2" socket or wrench to re-install the (4) stock bolts you previously removed, so that the brackets are connected to the stock mount.**

Tip: Get all (4) bolts threaded and hand tight first, then go back and tighten them down all the way.



- 15. And you're all set!**

If you have any questions or experience issues, please contact your retail outlet first for assistance. However, the staff at PRP is always happy to help at **1-800-317-6253**, or email **customerservice@prpseats.com**

Thank you! Ride Safe!