

Install Instructions

PRP Fold Flat Rear Seats for Polaris PRO XP4, PRO R4, Turbo R4



A.



B.



Read through all of the instructions completely before beginning the install.

Parts Included:

- A. 2x Top Seats Sections (Driver and Passenger)
- B. 2x Bottom Seats Sections (Driver and Passenger)
- B. Hardware
 - 2 x M6-1.0 x 40mm Bolt

Tools Needed: (not included)

- Flat Head Screwdriver
- 10mm Socket
- 10mm Wrench
- T40 Socket

Time:

Approx 2 Hours.

Installation is the same on Driver and Passenger Side Seats

Watch the install video for
additional info and tips





1. Start by removing the Stock Seats from the vehicle.

Unlatch the top of the seat, remove it from the vehicle, and set it aside.

2. Remove the latch from the Stock Seat

Use a 10mm socket to remove the (2) bolts on top that hold the latch in place. Then use a 10mm wrench and socket to remove the bolt and nut on the bottom.

To get the latch out, flip the seat around, and pop off the headrest.

You can use a screwdriver and stick it down between the headrest and the plastic, then pry it open and off.

Once the headrest is off, un-hook the plastic handle latch from the metal latch.

You can then pull the metal latch out the front where the headrest was.


3. Install the latch onto the PRP Seat

Start by putting the plastic handle onto the seat, and lining it up with the bottom bolt hole on the metal housing.

The Stock Bolt is too long for our seat, so we have supplied a shorter bolt. Line it up and place the bolt through the housing and plastic handle, then re-use the stock nut on the PRP bolt. Only get it hand tight for now.

Once that plastic handle is in place, push it down, and hook the metal latch back into the plastic handle.

Then put the metal latch into the housing and line it up with the two bolt holes.

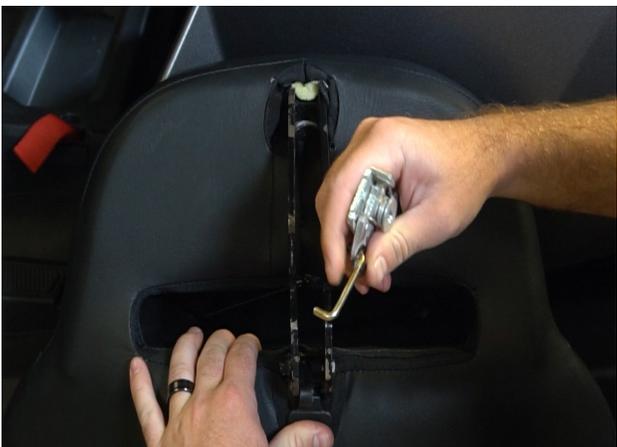



4. Install the latch onto the PRP Seat

Re-install the (2) stock bolts back into the metal latch. Then tighten down the (2) bolts, and lower bolt & nut with a 10mm socket and wrench.

Make sure they are not overtightened, and that the latch/handle can still move freely.

Bottom Cushion Install:

Those with Premium and Ultimate Editions have the fold flat seat bracket already in their vehicles. Those with Sport Editions do not have fixed brackets instead. Our PRP Seats can be installed in Sport Editions, but will not be able to fold.

We highly recommend purchasing the fold flat seat bracket directly from Polaris.

Vehicles with Fold Flat Seats **(Premium and Ultimate Editions)**

5a. Remove Stock Bottom Cushion

Start by flipping the seat over, and removing the (6) bolts that connect the seat cushion to the bracket with a T40 Socket.

Then remove the stock cushion from the seat.



6a. Install the PRP Bottom Cushion

Place the PRP Cushion on the bracket (make sure that its facing the right direction), then re-install the (6) stock bolts back into the bracket and the PRP Cushion. Then tighten down all (6) bolts with a T40 Socket.

*We found it easiest to install if you fold the seat bracket straight up while you hold the cushion in place.

**It can be hard to get these bolts lined up. Try to get one bolt lined up and threaded first. Get it hand tight, then go around and get the other bolts in.





Vehicles with Fixed Seats **(Sport Editions)**

5b. Remove the Stock Cushion

Remove the (4) bolts in the front, and (2) bolts in the rear. You can then take out the seat cushion and brackets that are connected to it.

Remove the stock cushion from the brackets by removing the (6) bolts with a T40 Socket.

6b. Install the PRP Bottom Cushion

Place the PRP Cushion on the brackets (make sure that its facing the right direction), then re-install the (6) stock bolts back into the bracket and the PRP Cushion. Then tighten down all (6) bolts with a T40 Socket.

*It can be hard to get these bolts lined up. Try to get one bolt lined up and threaded first. Get it hand tight, then go around and get the other bolts in.



7b. Re-Install the Brackets and PRP Cushion

Place the cushion and brackets back into the vehicle, and re-install with the same (4) bolts in the front, and (2) bolts in the rear.

*Keep in mind that the your PRP seat will also remain fixed in place, and will not be able to fold flat.





8. Place the Top of the Seat into the Vehicle

The PRP top seat has two small metal legs that stick out at the bottom, these line up with two slots on the back of the PRP bottom cushion bracket.

Place the top seat onto the bottom section, and move it around until you feel the legs slide into the slots in the bottom cushion.

Once the bottom is in place, push the seat back until the latch on the back of the seat snaps into place and locks against the bar (just like you did with the Stock Seat).

9. Install Harnesses

You can now install your harnesses. PRP's Fold Flat Seats work with the stock 6 Point Harnesses, as well as most aftermarket harnesses. You will just need to run the harnesses through the headrest of the seats.

*Note: These seats do not have a dedicated spot to install a 5th point strap.

10. Ride Height

PRP's Fold Flat Seats sit at about the same height as the stock seats, and have similar legroom. Since these seats are so short front to back, they may be more comfortable for young adults, rather than full size adults.

11. ... And You're All Done!

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP Seats is always happy to assist you.

1-800-317-6253.

customerservice@prpseats.com

Thank you! Ride safe!