

# Install Instructions

## PRP Seats

### Can-Am Seat Base Installation



**Read through all of the instructions completely before beginning the install.**

#### **Parts Included:**

A. Seat Adapter Brackets  
2 x Can-Am Seat Bases



#### B. Hardware

8 x 1/4"-20 X 1" L Hex Bolts  
8 1.25 x 20mm Flanged Head Bolts  
8 1/4" Split Lock Washers  
8 1/4" Flat Washers

**Remove all parts from the box and unwrap completely using the packaging to lay out the pieces.**



#### **Tools Needed:** (not included)

13mm Socket & Wrench  
18mm Deep Socket  
7/16" Socket  
Ratchet Extension

#### **Time:**

Approx 1 Hour



### 1. Remove the Stock Seat.

Pull up the bottom cushion to expose the 4 bolts. Use a 13mm socket remove the 4 bolts holding the seat to the sliders. Pull the rubber cap off the front of the slider handle. This will allow the handle to slip out of the slot in the seat.

Once this is done, you can remove the seat from the vehicle.



### 2. Loosen the slider rails, but do not fully remove them yet.

Use a 18mm deep socket with extension to remove the (2) nuts in the back.

Use a 13mm end wrench and 13mm socket to remove the (2) front bolts/nuts.



### 3. Choose Your Seat Height

Can-Am allows you to change the seat height with their slider rails. In the front you can choose either the low or high bolt holes, and in the rear with a bolt and alluminum spacer that can be rearranged to lower the seat.


Our lowered mounting plate can be flipped up or down to either lower or raise your seat height by approx 1".

Feel free to move these around as you see fit to best fit your riding height.



**\*\*PRP Height Recommendation** - have the mount plate in the lowered position on the seat. Then on the sliders, have the rear in the high position with the alluminum spacer. In the front have the slider in the low position on that bottom bolt.

**\*\*Be aware that having the mount, front & rear sliders all in the low position will cause the mount to not slide all the way back. Limiting your legroom.**

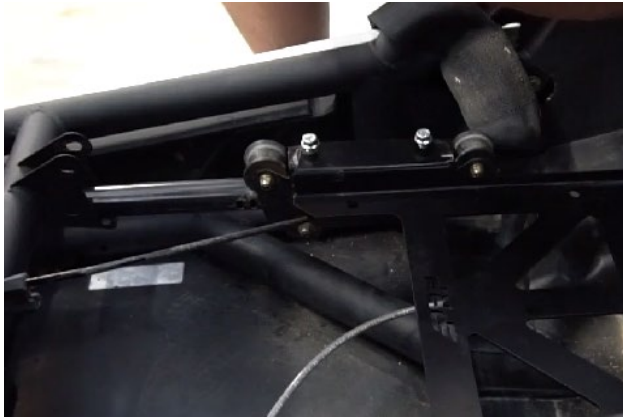

**4. Bolt the PRP Lowered Mount to the Slider Rails.**

Once you have figured out what height you want the seat. Bolt the Mounting Plate to the Seat Sliders using the supplied 1.25x20mm Flanged Head Bolts and a 13mm socket. \*Its easier to do this while the rails are installed in

**5. Remove the sliders and plate from the vehicle.**

\*\*Be sure to keep track of the direction of the rails so you install them properly in step 6.



**6. Install the Plate & Sliders on the Seat**

Flip your PRP seat upside down and line up the lowered seat mount to the (4) bolt holes on the bottom of your seat. Use the supplied (4) 1/4" x 20 x 1" bolts, (4) flat washers, and (4) lock washers. Tighten down with a 7/16" socket or wrench.

**7. Place the Seat & Slider Rails back into the vehicle.**

Make any final ride height adjustments that you need.

Slide the seat forward, then tighten down the rear bolt using a 18mm deep socket with extension.

Then slide the seat back, and tighten down



**8. Repeat steps 1-7 on the other seat.**

**And you're all set!**

If you have any questions or experience issues, please contact your retail outlet first for assistance. However, the staff at PRP is always happy to help at **1-800-317-6253**, or email **customerservice@prpseats.com**

**Thank you! Ride Safe!**

