



INSTALLATION INSTRUCTIONS

MAKE: DODGE

MODEL: RAM 1500 EcoDiesel

YEAR: 2014-2016


ENGINE: V6-3.0L (td)

WHEELBASE(S): Crew Cab/5'7" Bed (140" Wheelbase)
Crew Cab/6'4" Bed (149" Wheelbase)

**3" DPF-Back
Stainless Steel**

49-42045-B (Black Tip)

49-42045-P (Polished Tip)

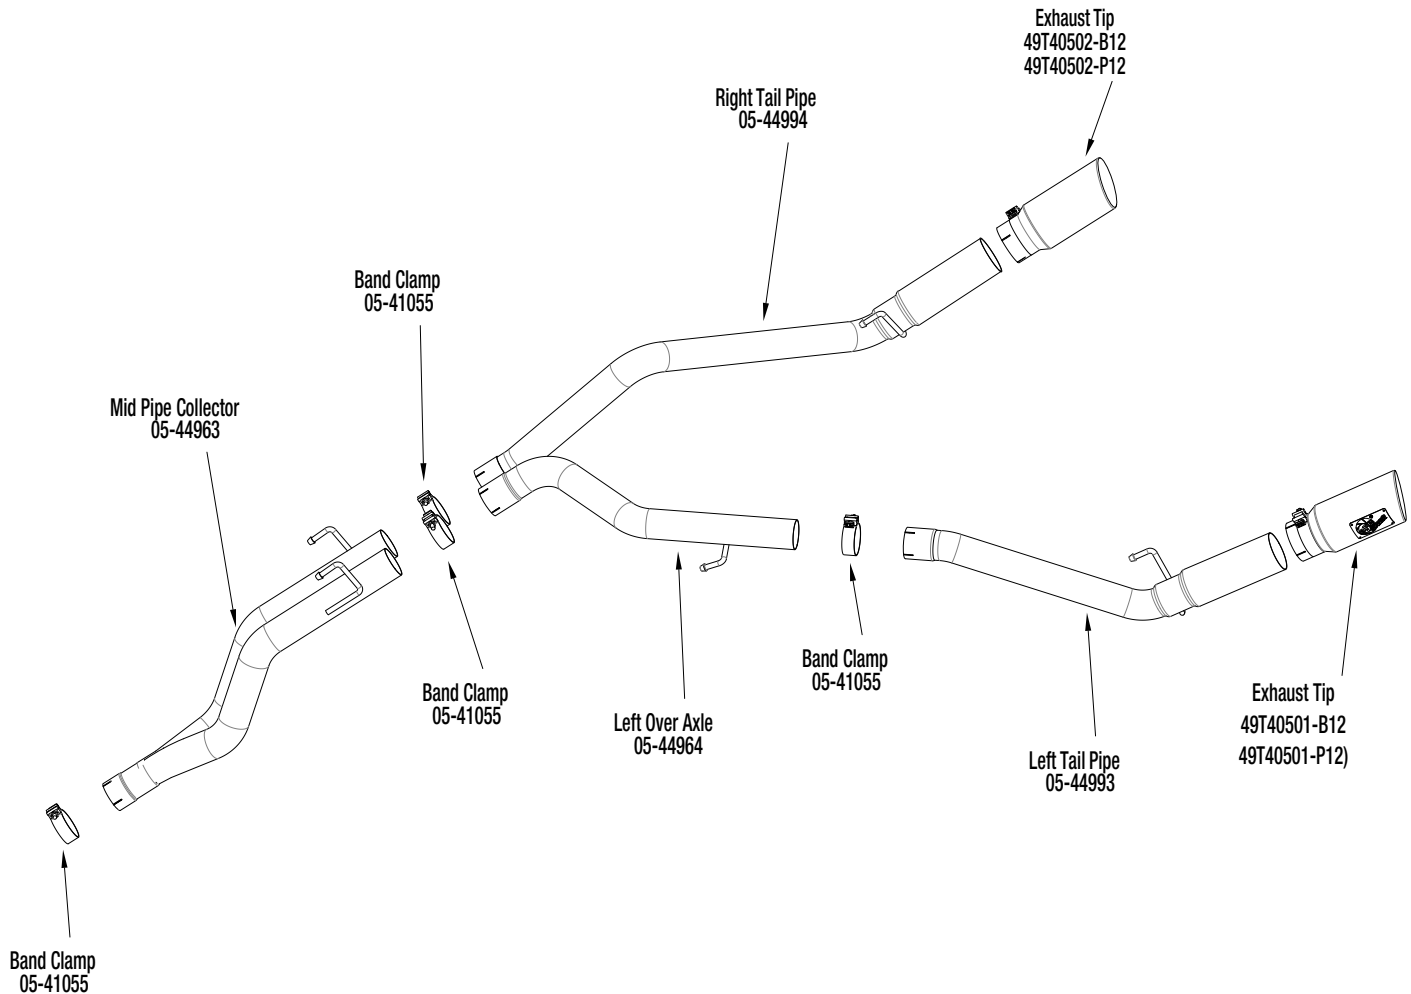

Step 1: (Read Instructions prior to installation) Remove your stock exhaust from the rear of your truck working your way forward. Disconnect the ground strap from chassis to muffler and save for re-use later. Also take caution not to damage the factory isolation mounts as they will be reused. It is recommended to not fully tighten the clamps until the entire system has been installed.

Step 2: For ease of installation spread the pieces of the exhaust along side of your vehicle according to the diagram shown.

Step 3: Install "mid-pipe collector" assembly with 3" band clamp. Do not fully tighten.

Step 4: Install the "left over-axle" tube with 3" band clamp, utilizing the factory isolation mount do not fully tighten.

Step 5: Install "left tail-pipe" with 3" band clamp but do not fully tighten until tip has been centered in the bumper cut out.

Step 6: Install "Right tail-pipe" with 3" band clamp but do not fully tighten until tip has been centered in the bumper cut out.

Step 7: Adjust for alignment, tighten all connections and reattach ground strap. Your installation is now complete. It is recommended to re-tighten all exhaust components after the first 50-100 miles.

NOTES:

- aFe recommends that the tail-pipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. **Tighten and secure.**

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**