



# Silver Bullet

Throttle Body Spacer

PN 46-33011


## Important!

Please verify the parts list and read all instruction steps before you begin installation.

Make	Model	Year	Engine
Ford	F-150	2010-2013	V8-6.2L
Ford	F-150 Raptor	2010-2014	V8-6.2L
Ford	F-250	2010-2016	V8-6.2L
Ford	F-350	2011-2016	V8-6.2L

1. Remove the intake tube using 8mm nut driver (or a flat-head screwdriver) to loosen the two hose clamps.
2. Disconnect the two hoses on the right side of the intake plenum, and unclip the electrical clip on the left side of the plenum.
3. Using a 10mm socket, loosen the two bolts at the front of the intake plenum. With the 8mm nut driver (or flat-head screwdriver), loosen the hose clamp located on the backside of the intake plenum. At this point you should be able to completely remove the plenum.
4. Unbolt the throttle body with a 10mm socket.
5. Now place the new Silver Bullet throttle body spacer up against the intake manifold with the "AIR IN" side facing out. Using the provided M6 x 75mm bolts, M6 washers, and with the gasket between the throttle body and the new throttle body spacer, secure the throttle body to the intake manifold.
6. Install the new 1" brackets that were included in the kit using the new M6 x 16mm screws. Also, at this point, you need to unclip the power cable that is connected to the alternator from the metal bracket.
7. Reinstall the intake plenum and secure it to the new 1" brackets using the OE bolts. Do not forget to tighten the hose clamp at this time too. Also, connect the two hoses to the right side of the plenum, and connect the electrical clip to the left side of the plenum (may have to slide it forward).
8. Re-install the intake tube and tighten both clamps. Your installation is now complete!

**NOTE: This part has been exempt by the California Air Resources Board (C.A.R.B.) and issued an Executive Order (E.O.). If part does not come with C.A.R.B. E.O. sticker already placed on device, it is necessary to place the sticker on or near the device on a smooth, clean surface. The C.A.R.B. E.O. sticker is required to pass the smog test inspections in the state of California.**

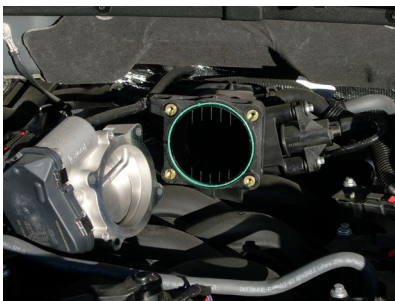

### Parts List

1	aFe Silver Bullet Spacer	4	M6 flat washers
1	Gasket	2	1" Brackets
4	M6 x 75mm hex bolts	2	M6 x 16mm counter sunk bolts
4	M6 lock washers		

advanced FLOW engineering, Inc.

252 Granite Street, Corona, CA 92879

For TECHNICAL and INSTALLATION SUPPORT, please call 951-493-7185 M-F 7:00am-5:00pm PST; OR email Tech@afepower.com (send photos if helpful). All other calls, please use our main line at 951-493-7100

[www.aFePower.com](http://www.aFePower.com)

Revised: 07-17-2020 CDS