


Description: C6 Transmission Mounts

Part #: 450-401008-N

Application: 05-13
Chevrolet Corvette C6

- Remove the mufflers
- Unbolt both of the factory transmission mounts (8 total)
- Loosen all four subframe nuts leaving them engaged by only 2 or 3 threads

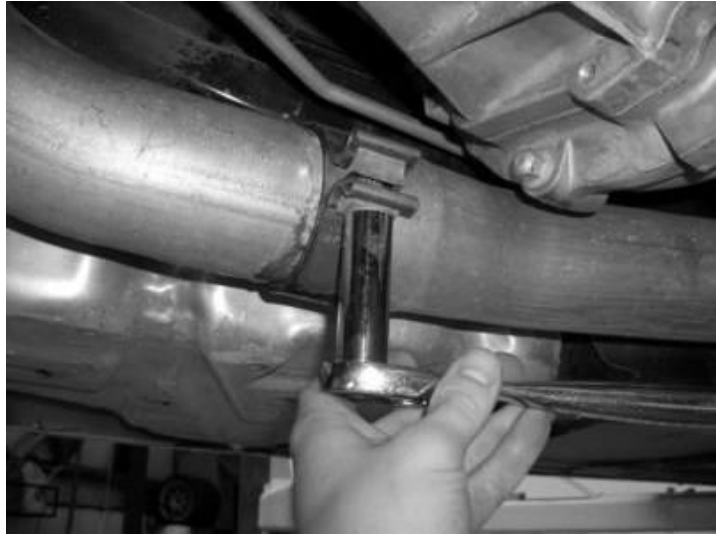

- Using a screw jack, lift the transmission/differential up, pull down the subframe and remove the stock mounts.

Note: if the vehicle has the leaf spring in place, removal of the trans mounts may be more difficult

- Install the Pfadt Transmission mounts with the nut towards the inside of the car

Note: It is easier to install the mounts without the studs in place



- Once the mounts are in place, install the studs until they bottom in the threaded hole
- Torque the 4 subframe nuts to 81 ft/lbs and lower the transmission down on to the mounts

- Re-install the 8 nuts onto the mounts and re-torque to 37 ft/lbs
- We recommend an alignment upon completion of the installation because the subframe may not reinstall into the same position.



Advanced Control Engineering
191 Granite Street Suite C
Corona, CA 92879
951-493-7128
www.aFecontrol.com

