




## INSTALLATION INSTRUCTIONS

MAKE: Toyota  
MODEL: Tundra  
YEAR: 2000-2004  
ENGINE: V8-4.7L  
WHEELBASE: 128.3" & 140.5" WB

**Cat-Back**  
**49-46007 (409SS)**


### ORDERING REPLACEMENT TIPS?

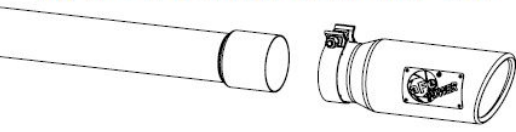

3 1/2" USE: 49T35451/49T35452



3" USE: 49T30451/49T30452

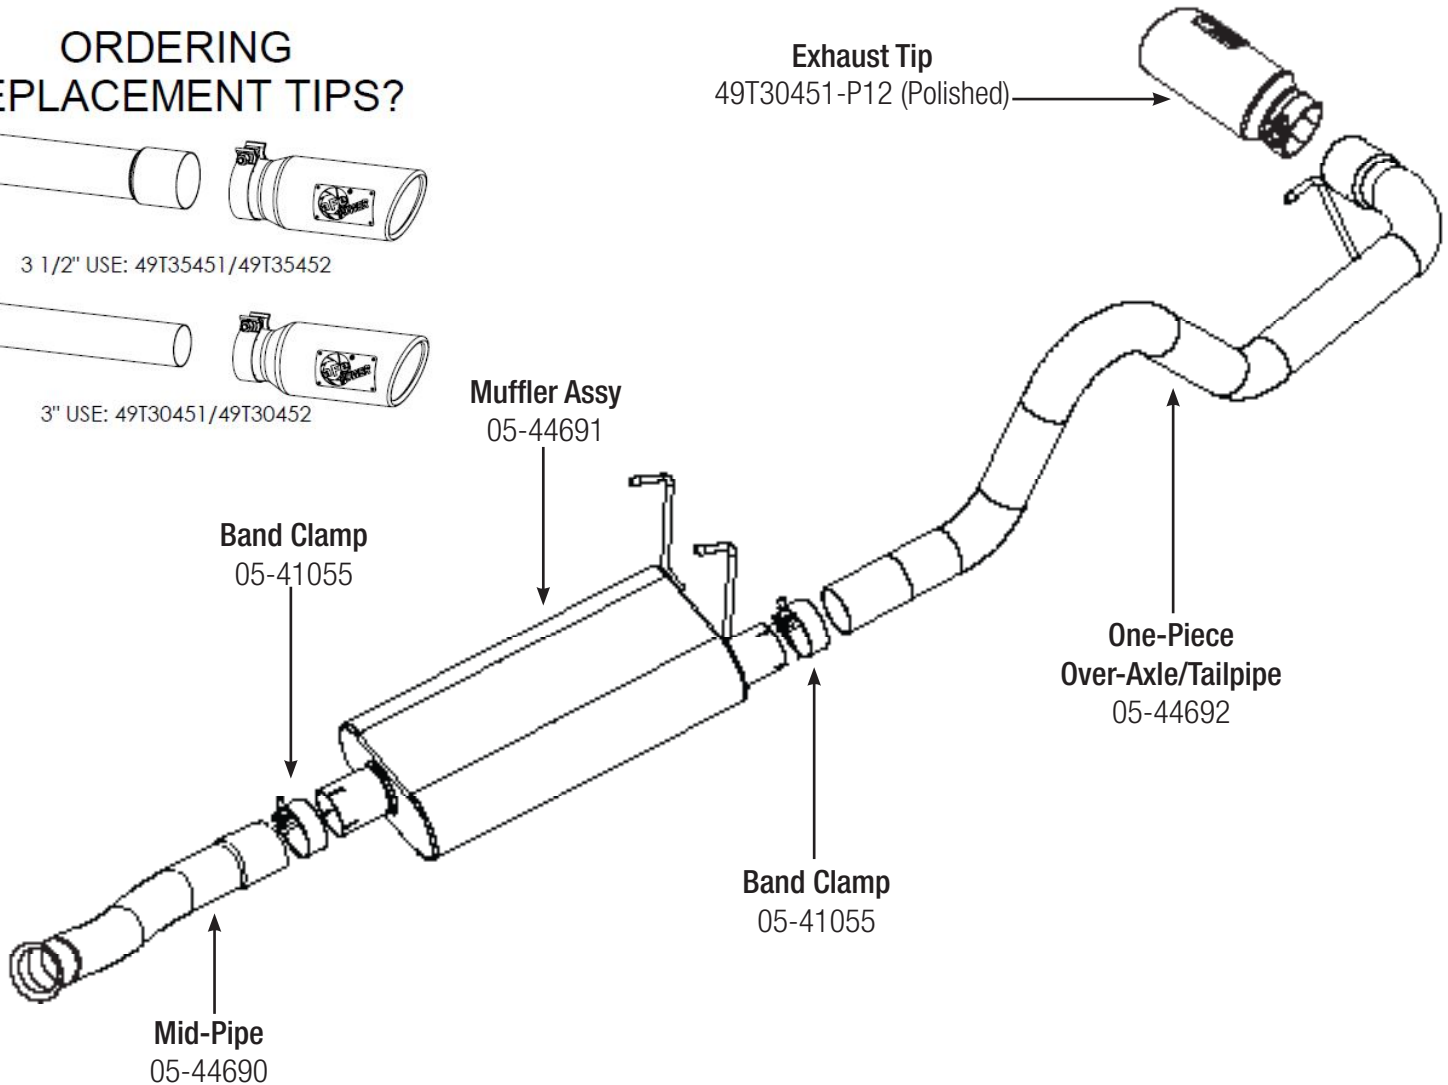

**Step 1: (Read Instructions prior to installation)** Remove your stock exhaust up to the catalytic converter from the rear of your truck working your way forward. Take caution not to damage the factory hardware and isolation mounts as they will be reused.

**It is recommended to not fully tighten the clamps until the entire system has been installed.**

**Step 2:** For faster installation spread the pieces of the exhaust along side of your vehicle according to the diagram shown.

**Step 3:** *Rear isolation mount bayonet hole sits below. Remove rear Isolation mount, flip and re-install so bayonet hole sits upward.* Install high clearance over axle/tailpipe, utilizing the factory isolation mount.

**Step 4:** With 2.5" band clamp install mid-pipe/muffler assembly to over axle/tailpipe

**Step 5:** Re-install isolation mounts to mid-pipe. Install and tighten bolts at cat-side. Now tighten all clamps.

**Step 6:** Your installation is now complete. It is recommended to re-tighten all exhaust components after 50-100 miles.

#### NOTES:

- aFe recommends that the tailpipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. **Tighten and secure.**

**Caution:** Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**