



INSTALLATION INSTRUCTIONS

MAKE: Porsche


MODEL: Boxster/Boxster S/Cayman/Cayman S (987.1-987.2)

YEAR: 2005-2012

ENGINE: H6-2.7/2.9/3.2/3.4L

**Tip Assembly
304 Stainless Steel
49-36410**

aFe recommends professional installation on our products.

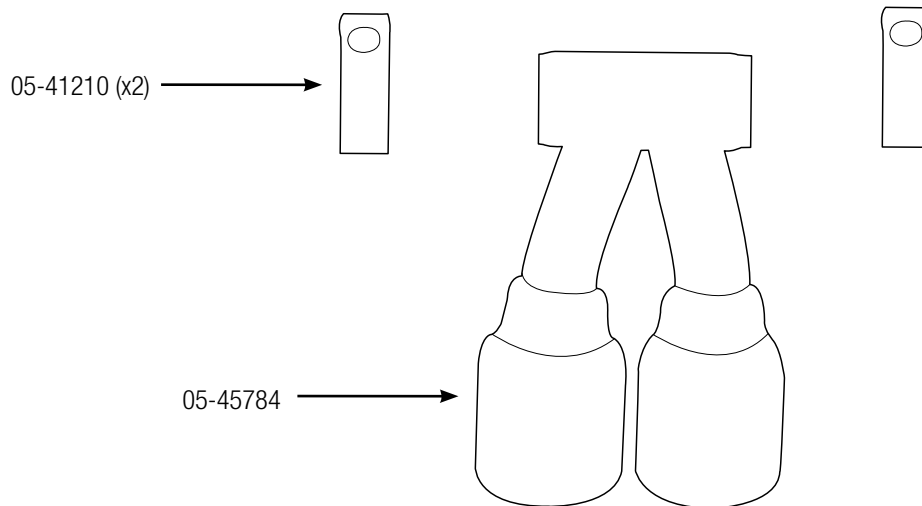

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

- Step 1:** Secure vehicle on jack stands (Refer to your manual for specified jack stand positions).
- Step 2:** Remove the rear wheels.
- Step 3:** Remove vacuum hoses off left and right side exhaust valves.
- Step 4:** Remove OE exhaust system and then remove the O.E. tip assembly.
- Step 5:** On the ground, install the aFe tip assembly onto the O.E. exhaust system using the supplied band clamps but do not tighten.
- Step 6:** Using the original hardware removed from step 4, install the exhaust system and tighten.
- Step 7:** Reinstall vacuum hoses on left and right side exhaust valves.
- Step 8:** Now align the aFe tip assembly to the desired position and tighten the (x2) band clamps.
- Step 9:** Re-check all your work.
- Step 10:** Install the rear wheels and torque to factory specs.
- Step 11:** Remove vehicle off jack stands..

NOTE: It is normal for the aFe Exhaust System to emit smoke for the first few minutes upon initial start-up.