



Silver Bullet®

Throttle Body Spacer

46-34014


Installation Instructions

Important!

Please verify that all parts on the Parts List are included before you begin the installation.

Make	Model	Year	Engine
GM	Colorado/Canyon	2015-2021	L4-2.5L

1. Use an 8mm nut driver to loosen the stock clamps at the throttle body and the air box. Disconnect the breather hose from the intake tube. Use a T-30 Torx driver to remove the screw holding down the intake tube. Remove the intake tube.
2. Disconnect the wiring harness at the throttle body. Using a 10mm socket and driver, remove the four (4) screws securing the throttle body. Set the throttle body and the four (4) screws aside.
3. Make sure the original gasket is not damaged. If the original gasket is damaged, contact a GM dealer for a new OEM and replace.
4. Slide the **aFe Silver Bullet** Throttle Body Spacer and orient it with the word "TOP" facing out and up.
5. Place the supplied spacer gasket in-between the **aFe Silver Bullet** Throttle Body Spacer and the throttle body. Use the four (4) screws previously removed to secure the throttle body to the intake manifold. Torque the screws to 88 in/lb. DO NOT OVERTIGHTEN THE SCREWS!
6. Reinstall the intake tube, tighten the two clamps, reconnect the breather hose and secure the intake tube with the screw previously removed with the T-30 Torx driver.

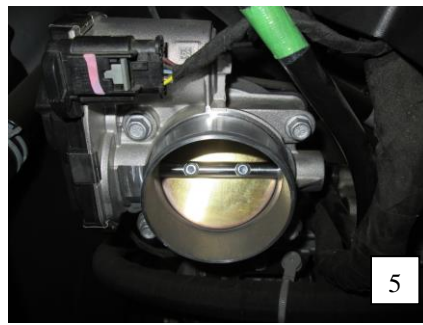

Parts List

- 1 **aFe Silver Bullet** Spacer
- 1 spacer gasket

Tools Needed

- 8mm nut driver
- T-30 Torx driver
- 10mm socket & driver

advanced FLOW engineering, Inc.

252 Granite Street, Corona, CA 92879

For TECHNICAL and INSTALLATION SUPPORT, please call 951-493-7134 OR email Tech@afepower.com (send photos if helpful)

All other types of calls, please call our main line at 951-493-7100

www.aFePower.com

Revised: 6-4-2021 CL