

advanced FLOW engineering

Dynamic Air Scoop D.A.S.

Instruction Manual P/N: 54-72006-S

Make: RAM Model: 1500 EcoDiesel Year: 2014-2018 Engine: V6-3.0L (td)



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.

Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Scoop, Rotomold	05-72006B3
B	2	Retainer Clip, 1/4"	05-01350


Installation will require the following tools:

Drill, 1/4" drill bit, marker, or punch to mark hole location, pliers.

Warranty Information available at: <https://afepower.com/contact#warranty>

Emissions Disclaimer:

This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.

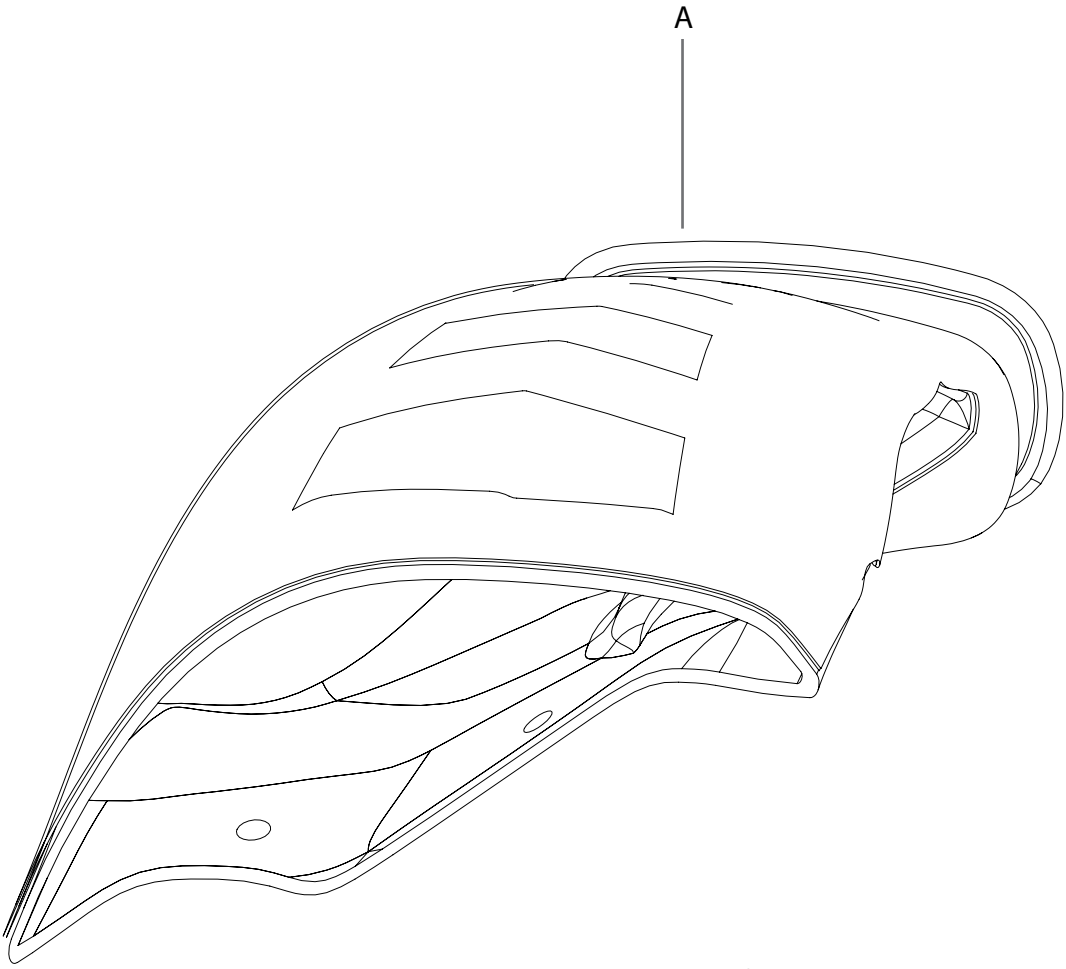



Refer to Figure A for Step 1

Step 1: Place the scoop into the truck as shown.



Refer to Figure B for Step 2

Step 2: While holding the scoop snug against the aFe housing, align the bottom of the scoop flush with the factory plastic trim piece and mark the center of each hole ①



Figure C

Refer to Figure C for Step 3

Step 3: Drill a 1/4" hole at each point you just marked ②.



Refer to Figure D for Step 4

Step 4: Support the bottom of the factory plastic trim and firmly press a retainer clip into each hole.

Your installation is now complete. Thank you for choosing aFe Power!



advanced FLOW engineering, inc.
252 Granite Street Corona, CA 92879
<https://afepower.com/contact>