

## advanced FLOW engineering

### **Instruction Manual** P/N: 54-22979

Make: **Ford** Model: **F-150** Year: **2015-2021** Engine: **V6-2.7L (tt) EcoBoost**

Make: **Ford** Model: **F-150** Year: **2015-2021** Engine: **V6-3.5L (tt) EcoBoost**



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7100.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.

## **Retain factory parts for future use.**

Label	Qty.	Description	Part Number
A	1	Harness, IAT Extension	05-70023

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.





Figure A

**Refer to Figure A for Step 1**

Step 1: Disconnect the intake air temperature harness from the sensor.

Step 2: Connect the female end of the supplied IAT harness extension to the OE harness and connect the male end of the IAT harness extension to the OE sensor.


Your installation is now complete. Thank you for choosing aFe POWER!

Page left blank intentionally



Page left blank intentionally

Page left blank intentionally

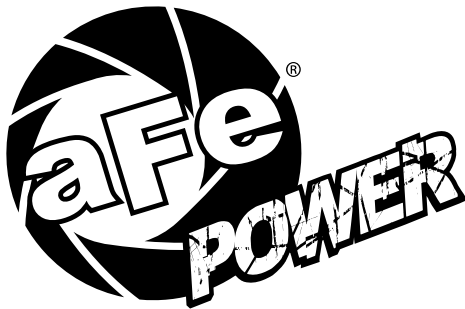

**advanced FLOW engineering, inc.**  
252 Granite Street Corona, CA 92879  
<https://afepower.com/contact>