




**GT**  
**MOMENTUM™**

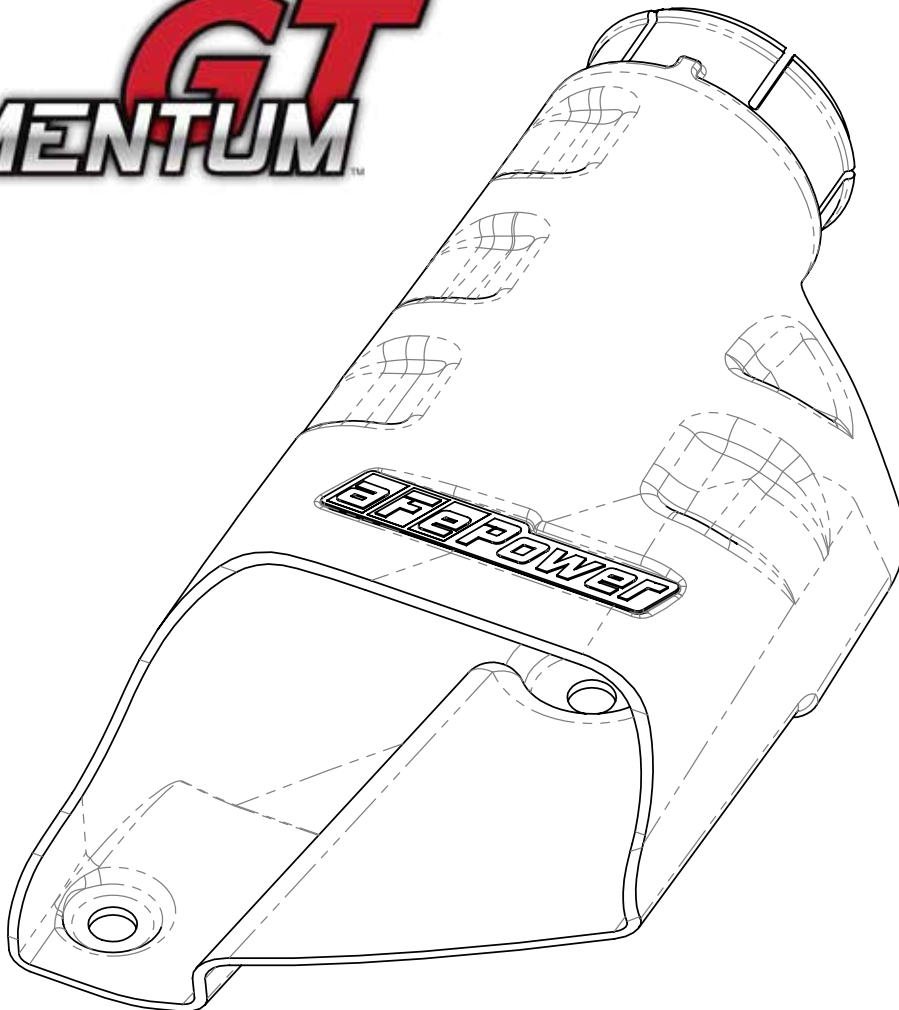

**advanced FLOW engineering**

Dynamic Air Scoop D.A.S.

**Instruction Manual** P/N: 50-70034S

Make: Nissan

Model: Titan XD

Year: 2017-2021

Engine: V8-5.6L



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.



## Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Scoop	05-5070034B3

Installation will require the following tools:

Flat head screwdriver, 10mm & 13mm sockets and socket wrench.

Emissions Disclaimer: This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.

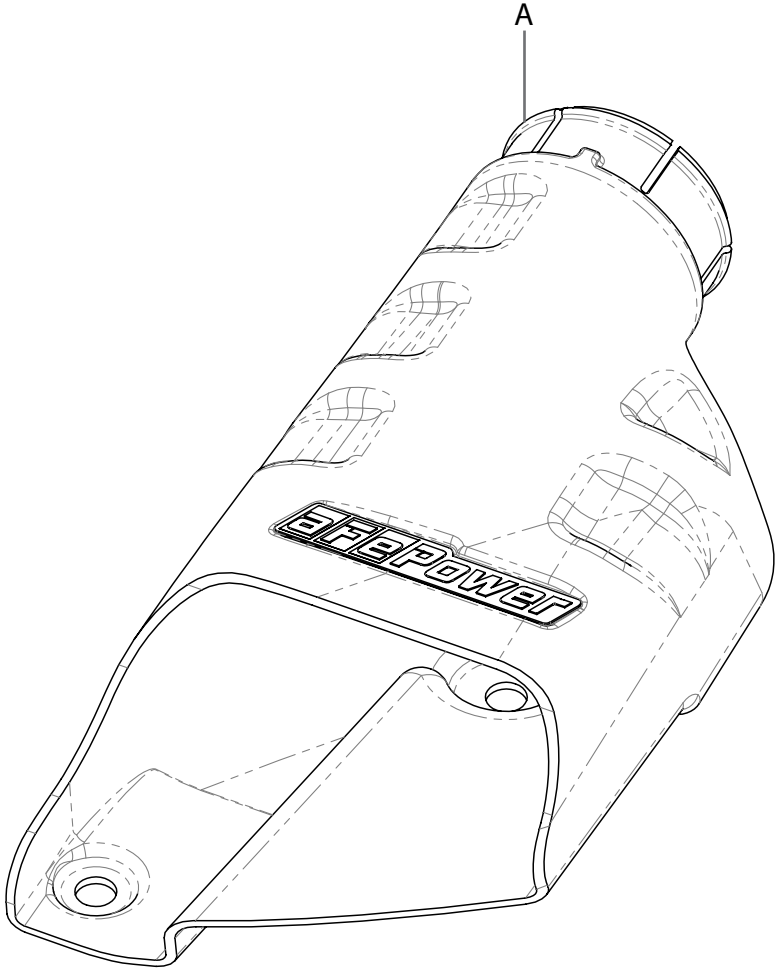




Figure A

Refer to Figure A for Steps 1-2

Step 1: Remove the plug on the housing, if installed ①.

Step 2: Remove the two (2x) factory bolts using socket and wrench ②.



Figure B

Refer to Figure B for Steps 3-5

Step 3: Push the aFe POWER scoop into the aFe POWER housing's round opening③.

Step 4: Secure the aFe POWER scoop with the two (2x) factory bolts removed in Step②. It may help to install the inside bolt first④.

Step 5: Verify the scoop is secured. Your installation is now complete. Thank you for choosing aFe POWER!

NOTE: Check all bolts, clamps, and connectors after 100-200 miles.



PAGE LEFT BLANK INTENTIONALLY

PAGE LEFT BLANK INTENTIONALLY



**advanced FLOW engineering, inc.**  
252 Granite Street Corona, CA 92879  
<https://afepower.com/contact>