

## ***advanced FLOW engineering***

Dynamic Air Scoop D.A.S.

### **Instruction Manual** P/N: 50-70009S

Make: **Dodge**

Model: **Challenger R/T Scat Pack**

Year: **19-23**

Engine: **V8-6.4L**

Make: **Dodge**

Model: **Challenger R/T**

Year: **19-23**

Engine: **V8-5.7L**




- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Air Inlet Duct	05-5070009B1

Warranty Information available at: <https://afepower.com/contact#warranty>

**Emission Disclaimer:** This product is not currently CARB exempt and is not available for purchase in California for use on any vehicle registered with the California Department of Motor Vehicles.

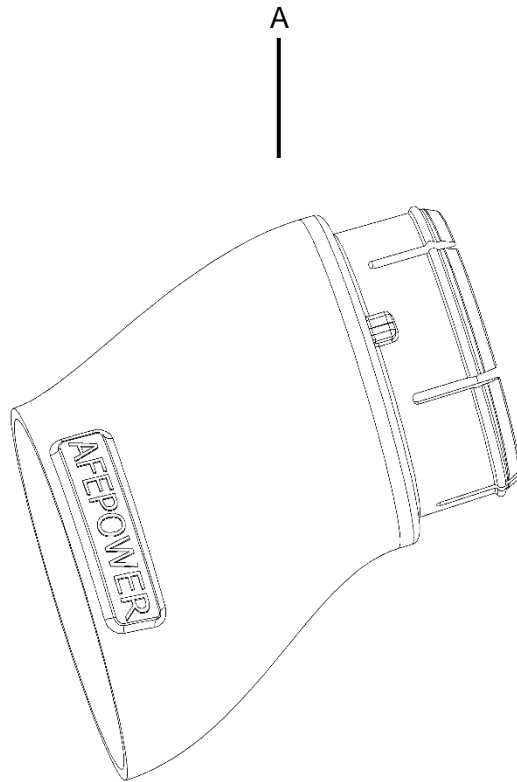

**Figure A**

### **Refer to Figure A for Steps 1-2**

Step 1: Remove the intake housing of vehicle to access the backside of the headlight.

Step 2: Slide your hand through the back side of the headlight and push the cap off on the center of the headlight.



Figure B

**Refer to Figure B for Step 3**

Step 3: Connect the inlet scoop to the aFe POWER housing.

**Figure C****Refer to Figure C for Step 4-5**

Step 4: Re-install housing into the vehicle and make sure the inlet scoop connects to the headlight hole.

Step 5: Install the other components for the intake per the intake system instruction sheet.

**Your installation is now complete.**



**Page left blank intentionally.**



***advanced FLOW engineering, inc.***

252 Granite Street Corona, CA 92879

<https://afepower.com/contact>