




INSTALLATION INSTRUCTIONS

MAKE: Jeep
MODEL: Wrangler (JL)
YEAR: 2018-2023
ENGINE: V6-3.6L / L4-2.0L (t)
FITS: 2 and 4-door

409 Stainless Steel
2-1/2" Axle-Back Exhaust
49-48070-1P (Polished)
49-48070-1B (Black)
48-48070-1 (Hi-Tuck)

Clamp, Band 2-1/2"

05-41061

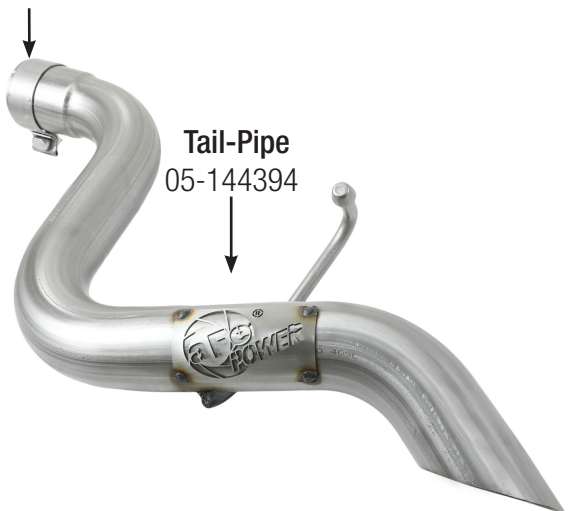


Tail-Pipe

05-144394

(Hi-Tuck)

Clamp, Band 2-1/2"

05-41061

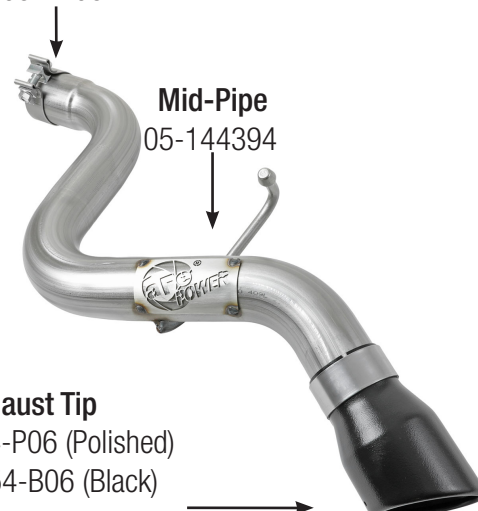

Mid-Pipe

05-144394

Exhaust Tip

49T25354-P06 (Polished)

49T25354-B06 (Black)

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**

Step 1: (Read Instructions prior to installation). It may be helpful to lubricate all the factory isolation rubber mounts, before taking off stock exhaust and also before installing aFe exhaust. Always use a jack or stand for support when installing or uninstalling any exhaust system.

Step 2: Begin by removing your stock exhaust from the rear of your truck working your way forward. Remove the factory muffler assembly. Take caution not to damage the factory isolation mounts as they will be reused

NOTE: It may be easier to unbolt the muffler hanger brackets from the frame than to disconnect the factory isolation mounts.

Step 3: For faster installation spread the pieces of the exhaust alongside of your vehicle, according to the diagram shown. It is recommended to not fully tighten any of the clamps until the entire system has been fully installed.

Step 4: Place the provided 2.5" band clamp onto the Tail-pipe assembly.

Step 5: Install the Tail-pipe assembly onto the factory over axle-pipe and slip the hanger into the rubber isolation mount. Then loosely tighten the band clamp.

Step 6: Install the exhaust tip if using 49-48070-B or 49-48070-P onto the Tail-pipe assembly.

Step 10: Straighten all exhaust components and begin to tighten down all clamps beginning at the front and ending at the rear.

Step 11: Congratulations your exhaust is now complete.

Note: It is recommended to re-tighten all clamps after 50-100 miles.

NOTES:

- aFe recommends that the tailpipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. **Tighten and secure.**