




252 Granite St  
Corona, CA 92879  
Phone # 844-469-6827  
aFeControl.com

## **2010-2020 Ford F150 3.0 Raptor Front Coilover Kit Installation**

*This item requires an aftermarket Live Valve Controller Bypass Device for 19-20 Raptor models.*

### **Parts List:**

- 2 Sway-A-Way shocks.
- 2 Reservoir Mount Brackets, Backing plates and hose clamps.
- 1 Spanner Wrench

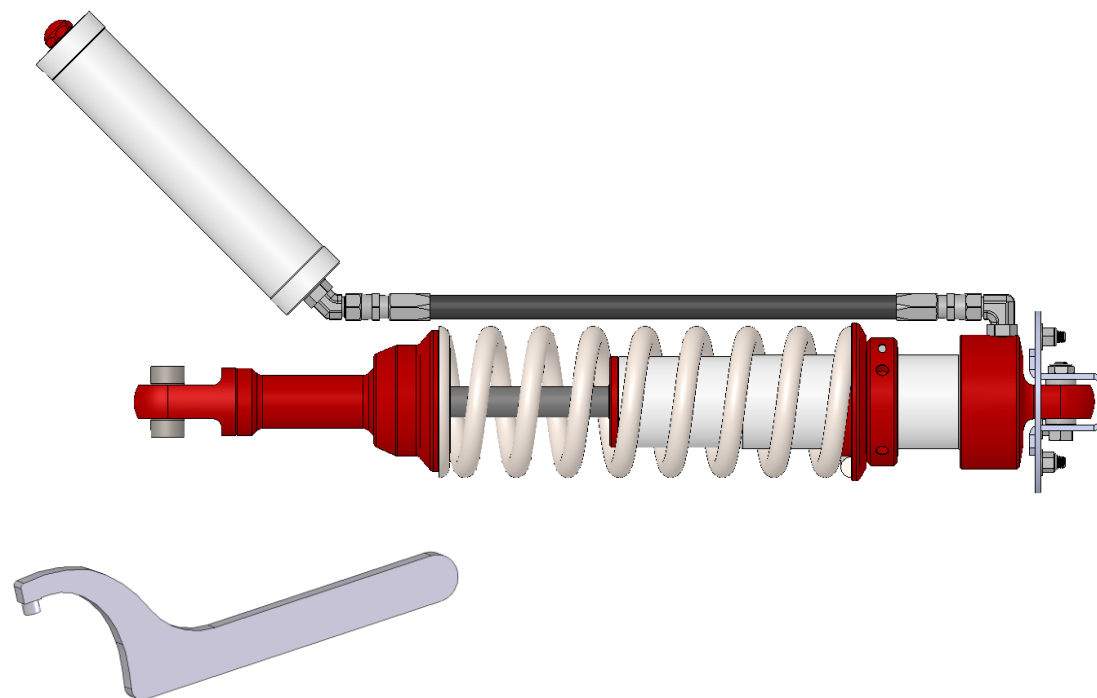


### **Tool List**

- 8mm, 10mm, 14mm, 15mm, 21mm, 27mm and 30mm sockets
- 16mm and 3/4in deep socket
- 19mm open end wrench
- Crescent wrench
- Ball joint remover
- Jack and jack stands
- Impact wrench (optional)
- Safety glasses

## **Removal and Installation Procedure for F150 Raptor Front**

**(Shocks are already charged with 200 PSI of Nitrogen)**

1. Park the vehicle on a level concrete surface where it is safe to work on your vehicle.
2. Lock and center the steering wheel.
3. Place blocks in front and behind the rear tires to keep the vehicle from moving forwards or backwards.
4. One side at a time, place the jack under the frame and raise the truck until the jack stand can be placed under the lower arm mount.

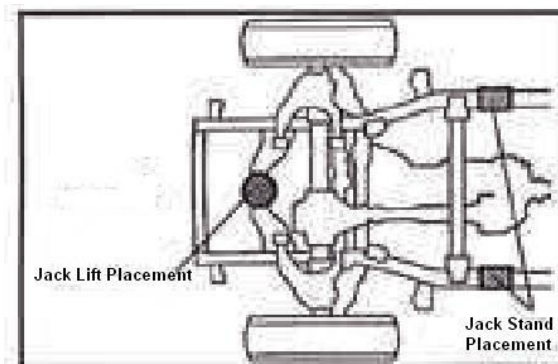

5. Once both sides are safely on jack stands, use the 3/4in deep socket and impact gun to remove the lug nuts and wheels.
6. Use the 21mm socket to remove the upper spindle ball joint nut.
7. Use the 18mm open end wrench and 8mm socket to remove the swaybar linkage.
8. Use the 8mm socket to remove the ABS sensor from the spindle.
9. Use the 10mm socket to remove the brake line from the spindle and upper arm.




10. Follow the ABS sensor wire to the back of the wheel well, disconnect the plug, remove the wire from the clip on the upper arm, and let the wire hang free.
11. Use the 21mm socket to remove tie rod end from the spindle.


12. Place and raise the jack under the lower arm to take the weight off the shock.
13. Use the 16mm deep socket to remove the 3 nuts holding the top of the shock to the mount. DO NOT remove center nut; doing so will release the spring from the stock assembly and could result in SERIOUS INJURY or DEATH!
14. Remove the lower shock mount bolt using the 30mm socket and impact gun on the nut and the 27mm socket (or crescent wrench) on the bolt head.



15. Use the ball joint remover to remove the upper spindle ball joint and slightly lower the jack to allow the arm to droop.
16. Remove the old shock
17. Install the coilover into the top mount, use the supplied M10 lock nuts (3) to hold the top of the shock into place while you install the bottom mount into the lower control arm. Be sure to reconnect the ABS sensor plug, and reinstall the sensor, brake line, and sensor wire back into the clip on the upper arm. **WARNING:** the shocks are directional. When installing the new shocks, be sure the 90° fitting in the top cap is pointing towards the front of the truck and the reservoir hose is routed under the upper arm.

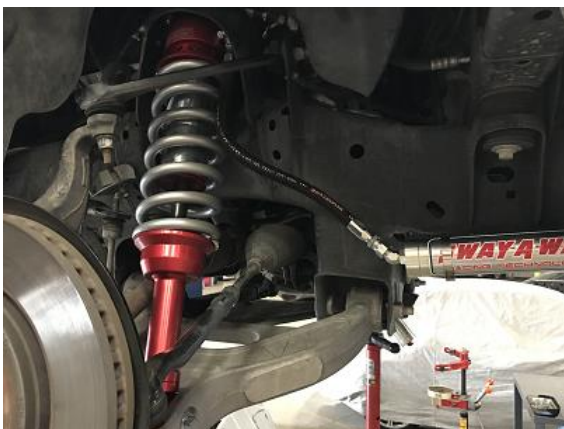


18. Remove skid plate by unbolting (6) 14mm bolts from the front of the vehicle. (2017+ Raptor will have (4) 14mm bolts in the front and (2) 15mm bolts in the rear of the plate)

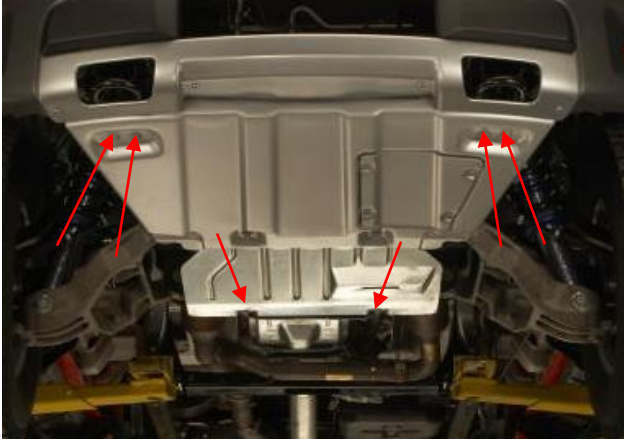

19. Remove front skid plate bracket and front tow hooks.
20. Install Reservoir Brackets in between the tow hook and frame.



21. Place the reservoir in the bracket, position the reservoir so that the hose does not come in contact with the truck and tighten the hose clamps. Hose clamps can be slid over the outside of the reservoir and should be placed so that they are centered the openings on the bracket.

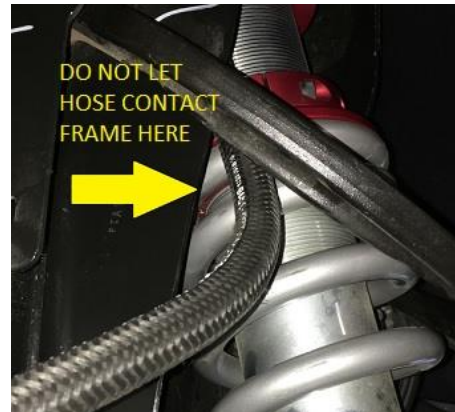

22. Reinstall everything in reverse order. Double check that every bolt that was removed has been retightened. Reinstall wheels and tighten lug nuts to factory spec.
23. If you are happy with the achieved lift you are done. If you would like to change the height of the vehicle, you can use the supplied spanner wrench to raise or lower the height. Loosen the set screw on the coil nut, then turn clock wise to raise the vehicle, or counter-clockwise to lower the vehicle. Repeat until you have achieved the desired lift. Lifting the vehicle from the frame will take pressure off the spring and make it easier to turn. Remember to tighten the setscrew when all adjusting has been completed.

**After you have finished installing your suspension kit, you must have the front end aligned.**