




252 Granite St, Corona, CA 92879  
Phone # 844-469-6827  
afecontrol.com

## **2019-2021 Ford Ranger 2.0" Rear Shock Kit Installation**

### **Parts List:**

-2 Sway-A-Way Shocks

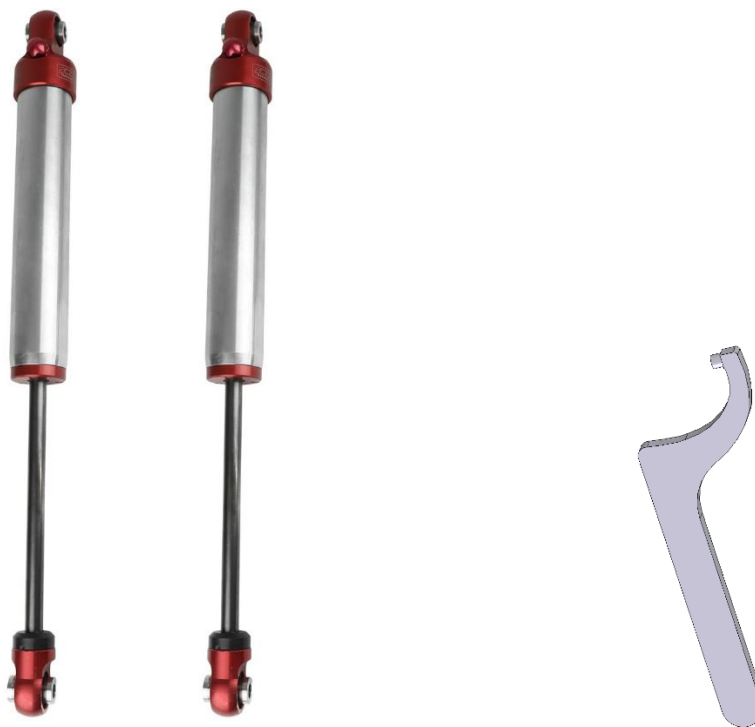

### **Tool List**


-15mm and 19mm sockets  
-Jack and jack stands  
-Impact Wrench (optional)  
-Safety Glasses

## **Removal and Installation Procedure for Ford Ranger Rear** (Shocks are already charged with 200 PSI of Nitrogen)

1. Raise the vehicle with a 2-post lift (preferable), or floor jack. If using a floor jack, place jack stands in the factory designated jack points.
2. Using a 19mm socket, remove the wheel lug bolts and remove the rear wheels from the driver and passenger side.
3. Using a 15mm socket, remove the bolt (1) from the lower shock mount.
4. Using a 15mm socket, remove the bolt (2) from the upper shock mount.



5. Install the Sway-A-Way shock's upper mount and hand tighten the hardware (3).
6. Install the Sway-A-way shocks lower mount and hand tighten the hardware (4).
7. Using a 15mm socket, tighten the upper shock mount.
8. Using a 15mm socket, tighten the lower shock mount.

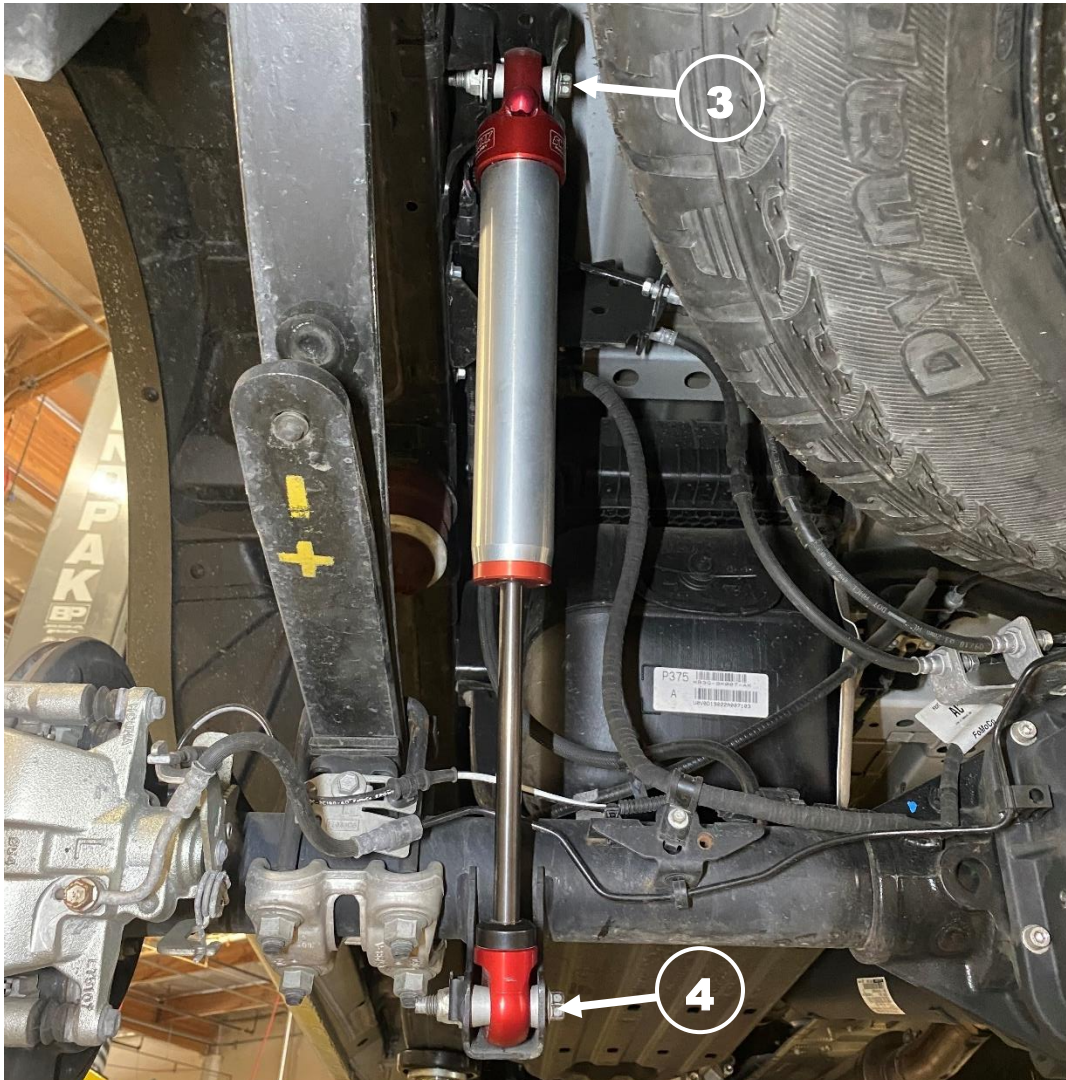

\*\*\*NOTE: After the first 20 hours or 500 miles (whichever comes first), make sure to check all bolts and re-tighten to factory specs.