

aFe Control

Front Suspension Strut Brace

BMW F-Chassis 2/M 14-18 L4/L6


Product Number: 450-502003-G
Install Time: 10 Min. (Front Strut Brace),



Full Kit Contents	Front & Rear Sway Bar Set	Qty.
00P-0P2619-G	Strut Brace, BMW F22/F23/F87, Gray	1
00P-0P2618-N	Plate, Logo: Strut Bar, Orange	1
00P-0C1765-A	Nut: M4x0.7, nylon locking	2
00P-0C1766-A	Screw: M4x0.7x10, Pan Head Phillips, 18-8SS, Blk	2
00P-0C1767-A	Bolt: M8x1.25x30, Hex Flange, Gr 10.9	6

Recommended Tools:

- Sockets: 7mm, 12mm, 13mm
- Phillips Head Screwdriver
- Socket Wrench
- Torque Wrench

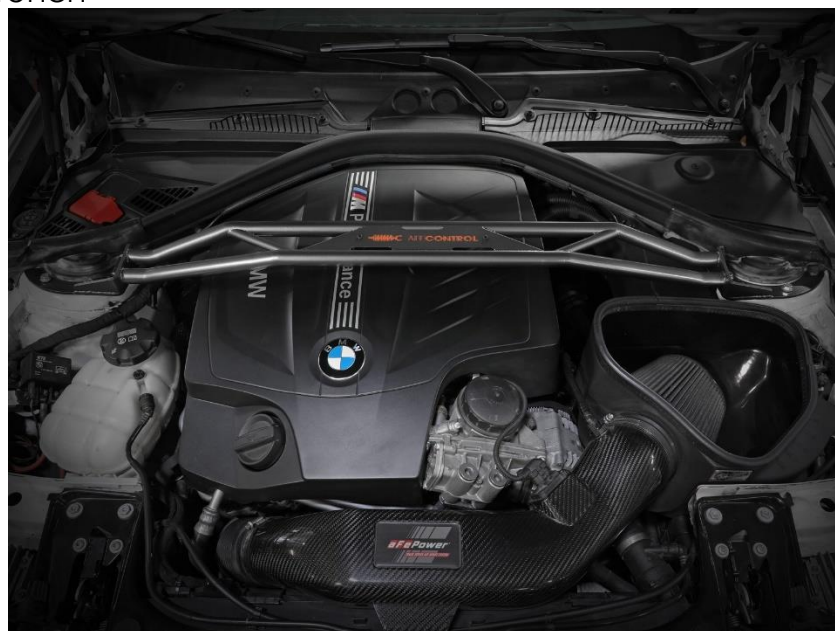

Installation:

1. Using the supplied 4mm hardware, install the logo plate onto the underside of the strut brace.
2. Using the 13mm socket, remove the 3 forward most strut bolts and washers. They will not be re-used.
3. Set the strut brace onto the strut towers and confirm that there is adequate clearance between the brace and the wiring harness on the passenger side. If there is inadequate clearance, it will be necessary to remove the harness retainer from the strut tower and re-position to the underside of the tab on the strut tower. (see image below)
4. Install the strut brace with the supplied M8 Hardware and Torque to 28 Nm (20 ft lb) and then tighten an additional 90 degrees.

