



advanced FLOW engineering

Instruction Manual

P/N: 77-83017 SCORCHER BLUE POWER MODULE

Make: Ford
Make: Ford

Model: F-150
Model: Edge ST

Year: 2015-2017
Year: 2019-2023

Engine: V6-2.7L (tt) Ecoboost
Engine: V6-2.7L (tt) Ecoboost



THIS IS A HIGH-PERFORMANCE PRODUCT: Do not use this product until you have carefully read the following agreement and installation instruction. This sets forth the terms and conditions for the use of this product. The installation of this product indicates that the BUYER has read and understands this agreement and accepts its terms and conditions.

DISCLAIMER OF WARRANTY AND LIMITATION OF LIABILITY: Advanced FLOW Engineering, Inc. (also known as aFe or aFe POWER) and its successors, distributors, jobbers, and dealers (hereafter “SELLER”) shall in no way be responsible for the product’s improper use and service. It is the installer’s responsibility to check for proper installation and if in doubt, contact the manufacturer. The SELLER assumes no liability regarding the improper installation or misapplication of its products. BUYER acknowledges it has had the opportunity to fully inspect the product. Accordingly, BUYER acknowledges that the product is being sold in “AS IS/WHERE IS” condition. SELLER shall not be held liable for special, indirect, incidental or consequential damages of any nature with respect to the products (including, without limitation, lost profits, lost sales, loss of production, property damage, personal injury or loss or damage resulting from interruption or failure in operation of the products) and BUYER hereby expressly waives and disclaims all such liability claims. The BUYER acknowledges and agrees that the disclaimer of liability contained herein is a material term of the sale of the product and, to the fullest extent permitted by law, BUYER shall defend, indemnify and hold SELLER harmless from any and all claims, demands, causes of action, controversies, liabilities, fines, losses, costs and expenses (including, but not limited to attorneys’ fees, expert witness expenses and litigation expenses) arising from or related to SELLER’s products.

Before proceeding with the installation:

- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding. Do not attempt to work on your vehicle when the engine is hot.

Emission Disclaimer: This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.



Label	Qty.	Description	Part Number
A	1	Module	R77-83017
B	1	LED Switch	05-70029
C	1	Bypass Plug	05-70017
D	1	Harness	AFE-10-220
E	2	Velcro (2" Inches)	05-01244
F	5	Cable Ties	05-60167
G	2	Double Sided Tape	07-90001





SLEEP MODE

Figure A

Refer to Figure A for Step 1 (For both F-150 and Edge ST)

Step 1: Before installing your aFe POWER module, you will have to place your vehicle's ECU in sleep mode. In order to do this, you will need to do the following:

- If the engine is cold: open the hood, close the doors, lock the car and wait 30 seconds.
- If the engine is warm: open the hood, close the doors, lock the car and wait 20 minutes.
- If the engine is warm and you can't wait 20 minutes: disconnect the battery.

 **Note: Do NOT open doors or start vehicle while one of the sensors is disconnected. This could create a check engine light**

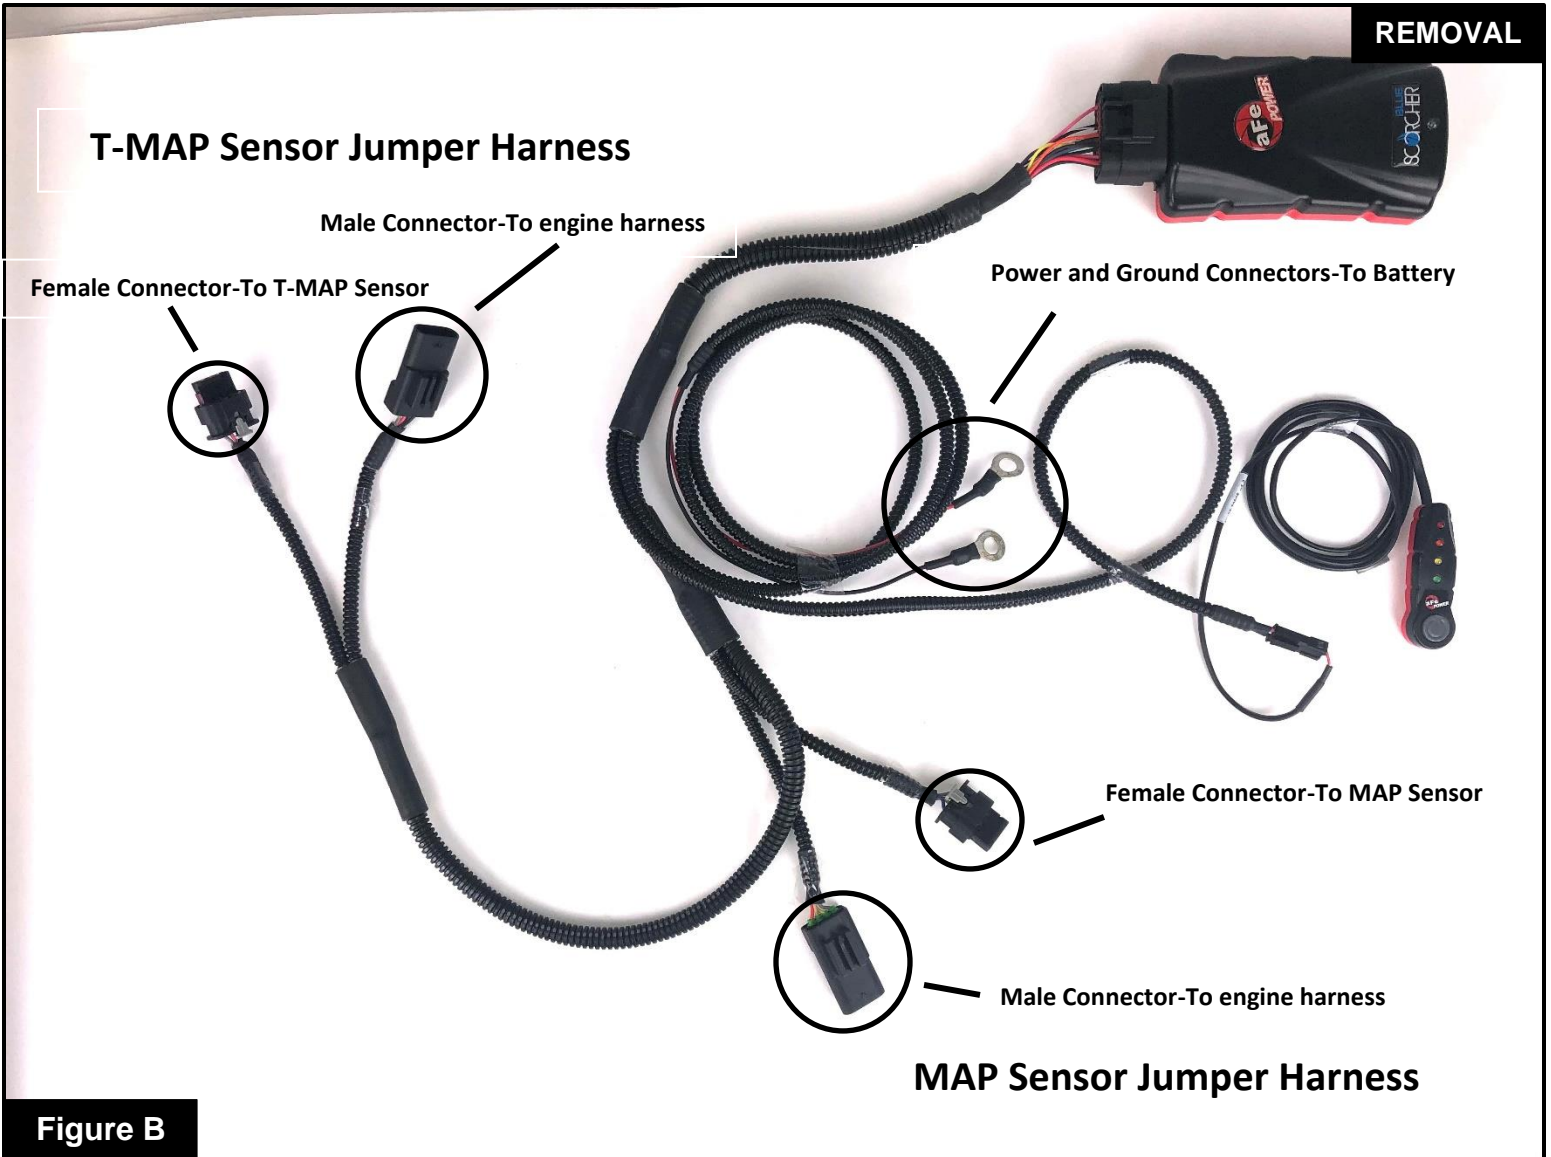


Figure B

Refer to Figure B for Step 2

Step 2: Refer to the diagram to identify the connectors and their corresponding sensors that they plug into.

- The MAP sensor jumper harness will be the shorter set of wires.
- The T-MAP sensor jumper harness will be the longer set of wires.



Note: Installation will be different between F-150 and Edge ST vehicles.

- For F-150 installation, please proceed to Page 6.
- For Ford Edge installation, please proceed to Page 13.



Refer to Figure C for Steps 3-5 (Installation for F-150 Only)

Step 3: See picture for the locations of the MAP and T-MAP sensors. The MAP sensor can be accessed by removing the engine cover.

Step 4: The MAP sensor is located on top of the intake manifold, right after the throttle body and in the middle of the engine bay. It has a 4-wires connector and a white locking tab.

Step 5: The T-MAP sensor is located on the driver side charge pipe. It also has a 4-wires connector and a white locking tab.



Refer to Figure D for Step 6 (Installation for F-150 Only)

Step 6: Disconnect the MAP sensor by pulling back the white locking tab, then pressing down on the connector and sliding it out of the sensor.

**Figure E****Refer to Figure E for Steps 7-9 (Installation for F-150 Only)**

Step 7: Locate the MAP sensor jumper harness on the aFe POWER harness. It is the first, shorter set of connectors coming out of the aFe Power module. It is labeled "MAP".

Step 8: Plug the female connector of the aFe POWER harness to the MAP sensor, then take the male connector of the aFe POWER harness and connect it to the female connector of the engine harness.

Step 9: Check with the picture to make sure the connectors are fully seated and that the locking tab is slid back into place.


 **Make sure that the connections are fully engaged and not reversed. Usually, connectors make a snapping sound when fully engaged.**



Refer to Figure F for Steps 10-11 (Installation for F-150 Only)

Step 10: The T-MAP connector is located on top of the charge pipe, before the throttle body.

Step 11: Disconnect the T-MAP sensor by pulling back the white locking tab, then pressing down on the connector and sliding it out of the sensor.

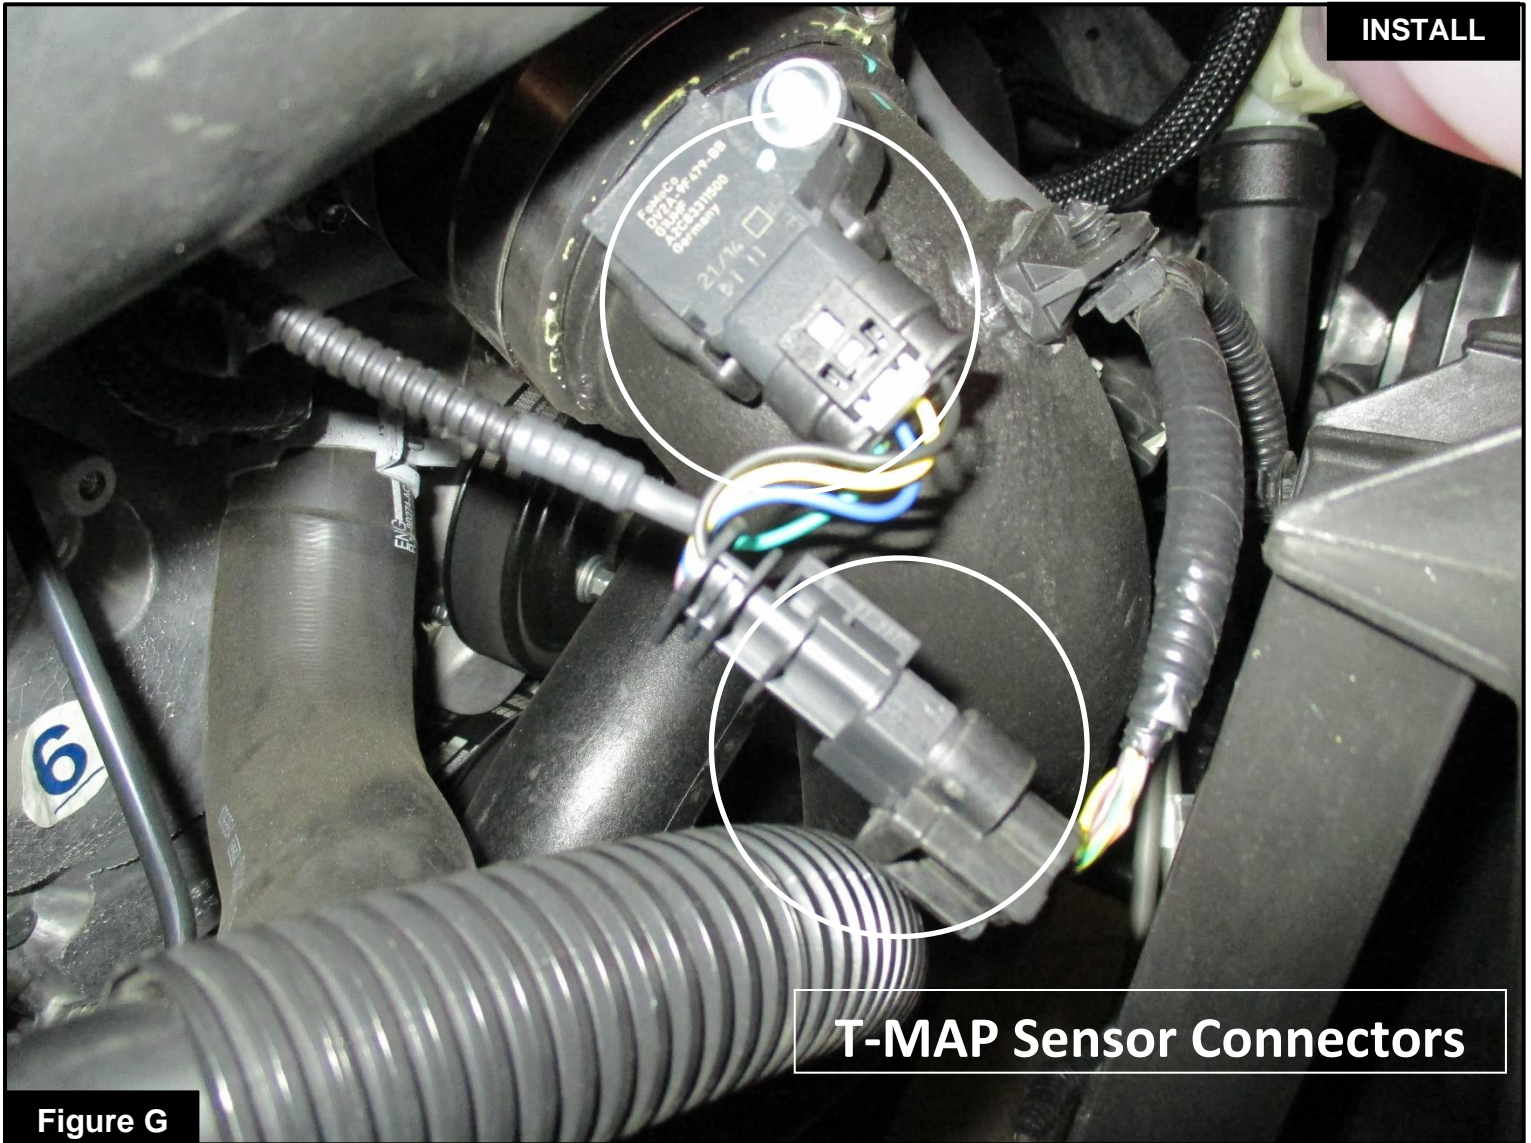
**T-MAP Sensor Connectors****Figure G****Refer to Figure G for Steps 12-14 (Installation for F-150 Only)**

Step 12: Locate the T-MAP sensor jumper harness on the aFe POWER harness. It is the longer, second set of connectors coming out of the aFe Power module. It is labeled “T-MAP”.

Step 13: Plug the female connector of the aFe POWER harness to the T-MAP sensor, then take the male connector of the aFe POWER harness and connect it to the female connector of the engine harness.

Step 14: Check with the picture to make sure the connectors are fully seated and that the locking tab is slid back into place.

 **Make sure that the connections are fully engaged and not reversed. Usually, connectors make a snapping sound when fully engaged.**

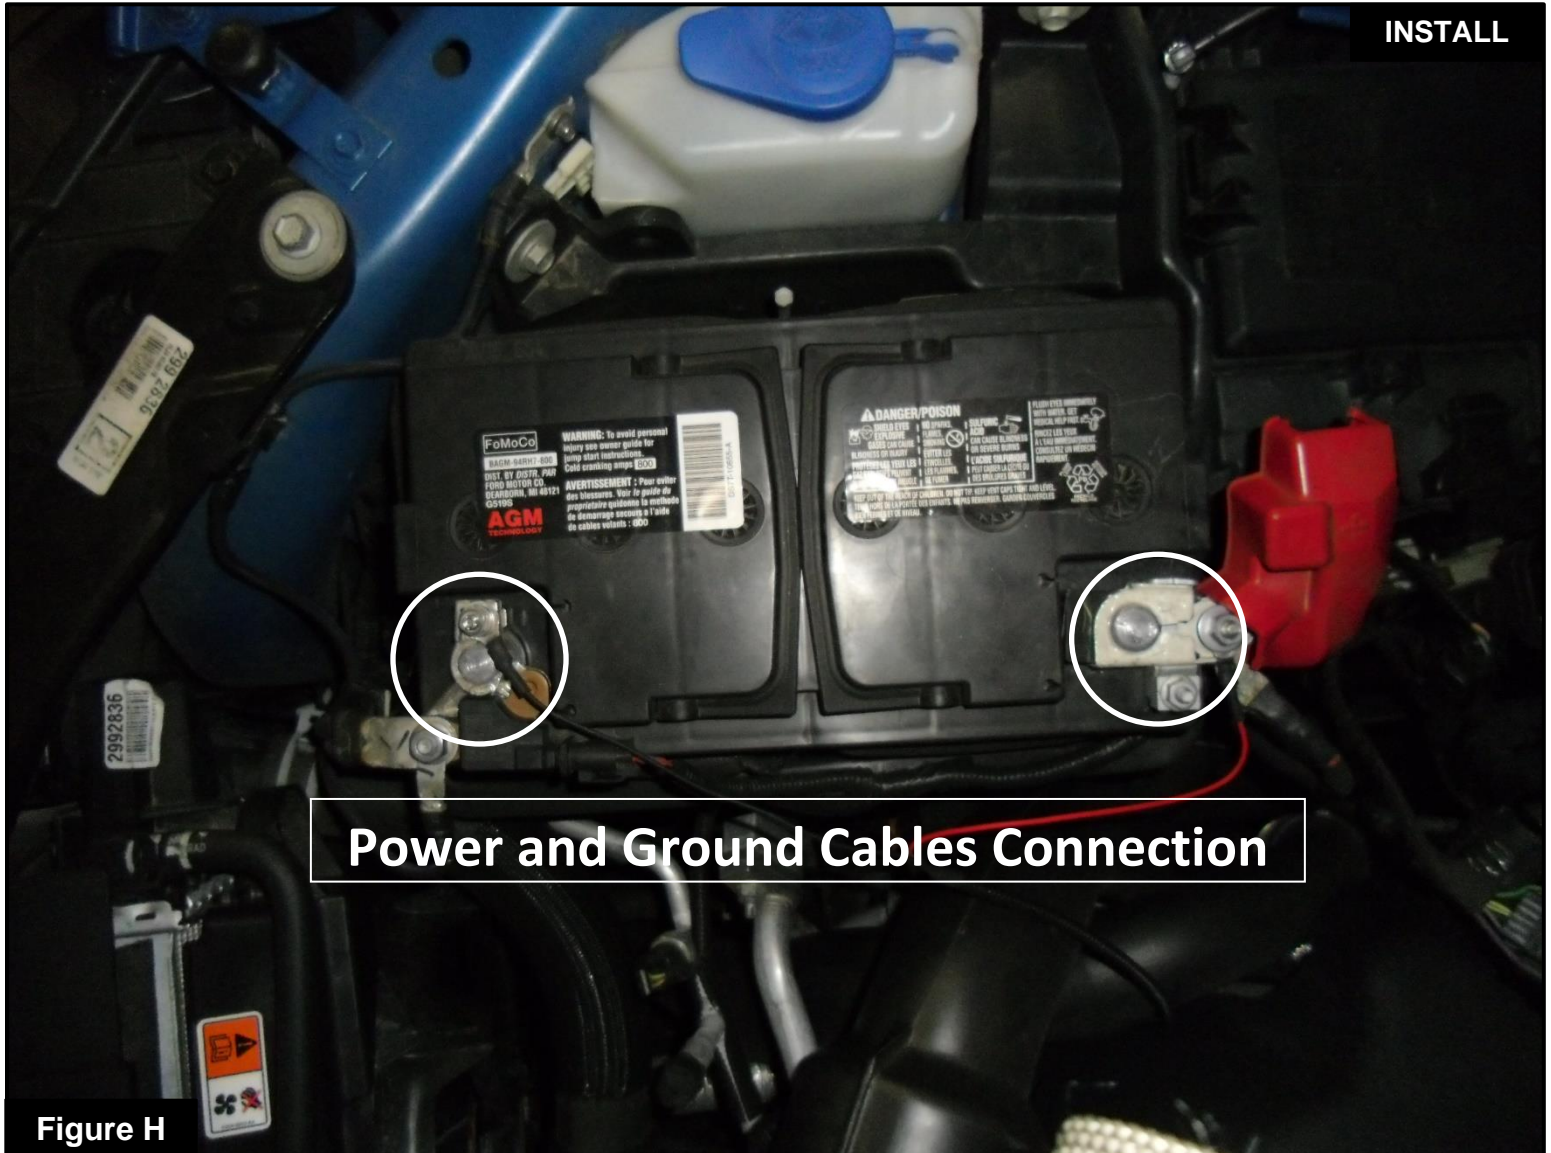

Power and Ground Cables Connection


Figure H

Refer to Figure H for Steps 15-17 (Installation for F-150 Only)

Step 15: Locate the battery on the passenger side of the vehicle.

Step 16: Connect the black ground terminal cable of the aFe POWER module harness to the negative battery terminal.

Step 17: Connect the red power terminal cable of the aFe POWER module harness to the positive battery terminal.

 **If the vehicle needs to be jump-started, the harness will have to be disconnected from the module, and the bypass plug installed in place of the module. This is to protect the Scorcher Blue from any damage that may occur when jump-starting.**

**Figure I****Refer to Figure I for Steps 18-21 (Installation for F-150 Only)**

Step 18: Select a location to mount the Scorchers BLUE module using the included Velcro. We recommend that the module be mounted in a place that is dry, away from extreme heat and moving parts.

Step 19: Connect the aFe POWER harness to the Scorchers Blue module, making sure that the retaining tab clicks into place.

Step 20: Route the harness wires and secure them using the included zip ties for a neat installation.

Step 21: Re-install the engine cover.


The doors can now be opened to install the LED Switch-Optional if using the Bluetooth App (Proceed to page 21).



Figure J

Refer to Figure J for Step 22 (Installation for Ford Edge ST Only)

Step 22: Remove the engine cover by removing the two 10mm bolts.

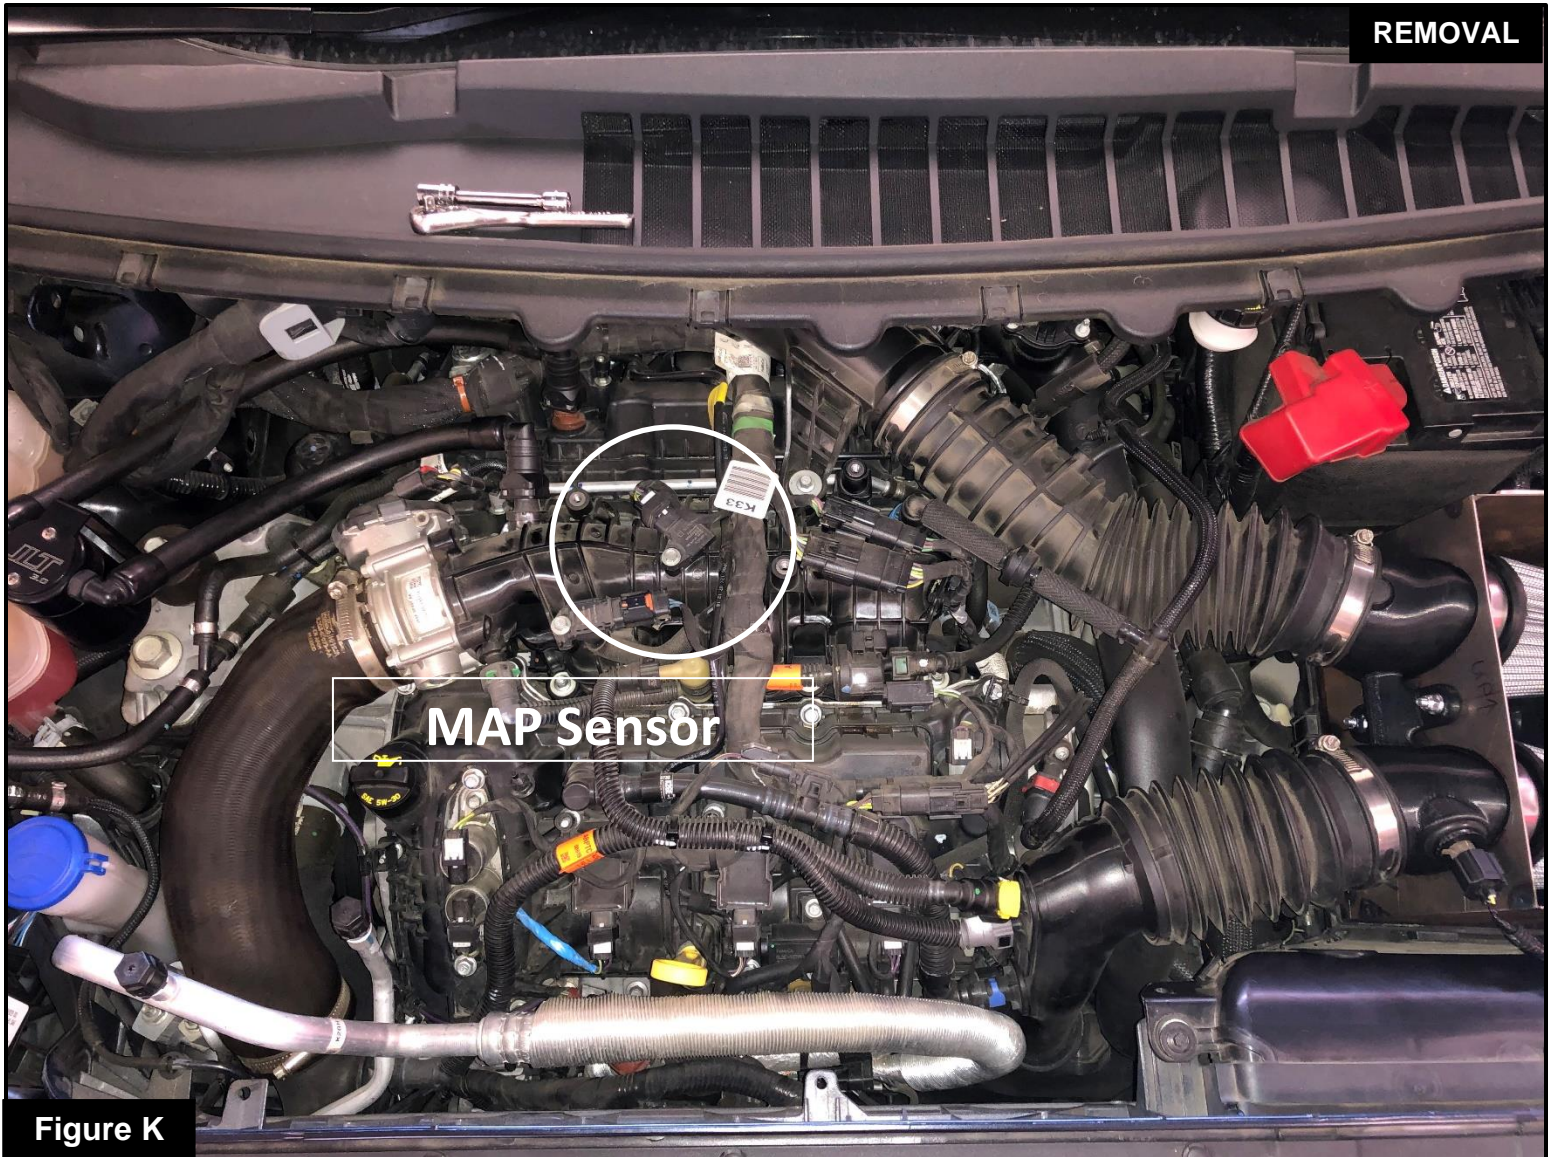

REMOVAL

MAP Sensor

Figure K

Refer to Figure K for Steps 23-24 (Installation for Ford Edge ST Only)

Step 23: Locate the MAP Sensor. It is on top of the intake manifold in the middle of the engine bay.

Step 24: Disconnect the MAP sensor by pulling back the white locking tab, then pressing down on the connector and sliding it out of the sensor.



MAP Sensor Connectors

Figure L

Refer to Figure L for Steps 25-27 (Installation for Ford Edge ST Only)

Step 25: Locate the MAP sensor jumper harness on the aFe POWER harness. It is the first, shorter set of connectors coming out of the aFe Power module. It is labeled "MAP".

Step 26: Plug the female connector of the aFe POWER harness to the MAP sensor, then take the male connector of the aFe POWER harness and connect it to the female connector of the engine harness.

Step 27: Check with the picture to make sure the connectors are fully seated and that the locking tab is slid back into place.

 **Make sure that the connections are fully engaged and not reversed. Usually, connectors make a snapping sound when fully engaged.**


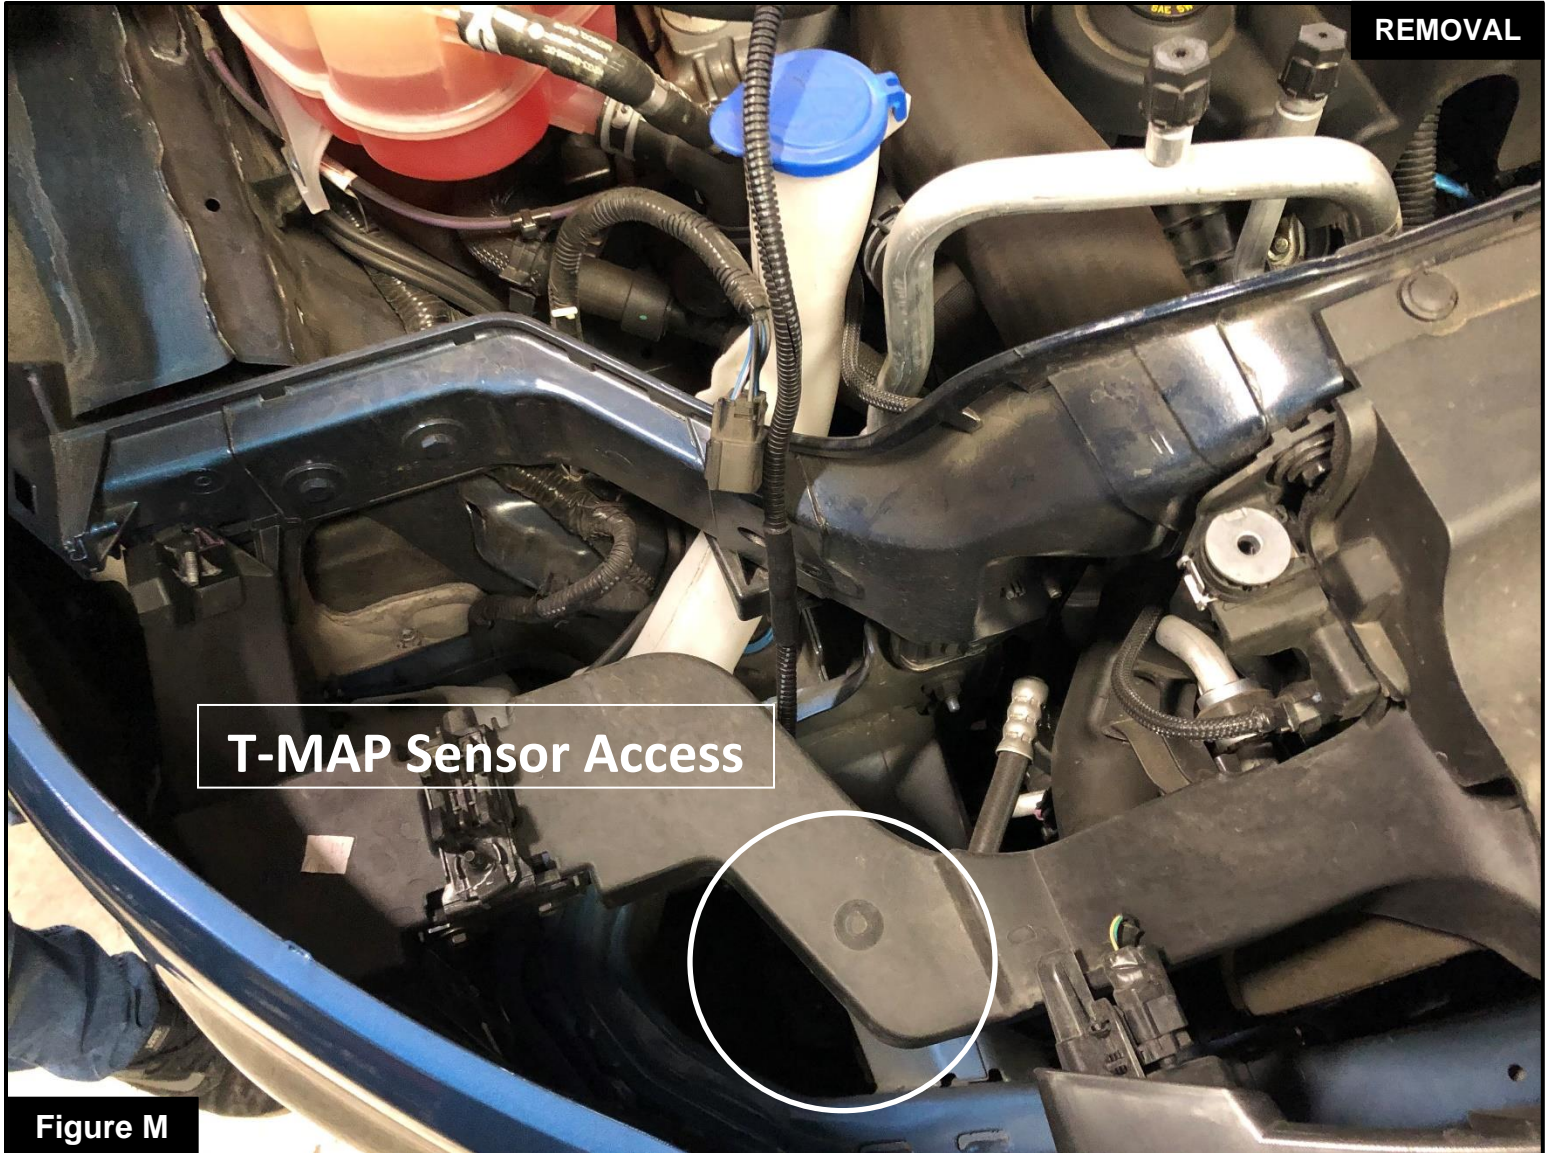


Figure M

Refer to Figure M for Steps 28-29 (Installation for Ford Edge ST Only)


Step 28: The T-MAP sensor and connector can be accessed by removing the passenger side headlamp assembly.

Step 29: The T-MAP sensor is located on the passenger side of the intercooler, towards the bottom of the intercooler.

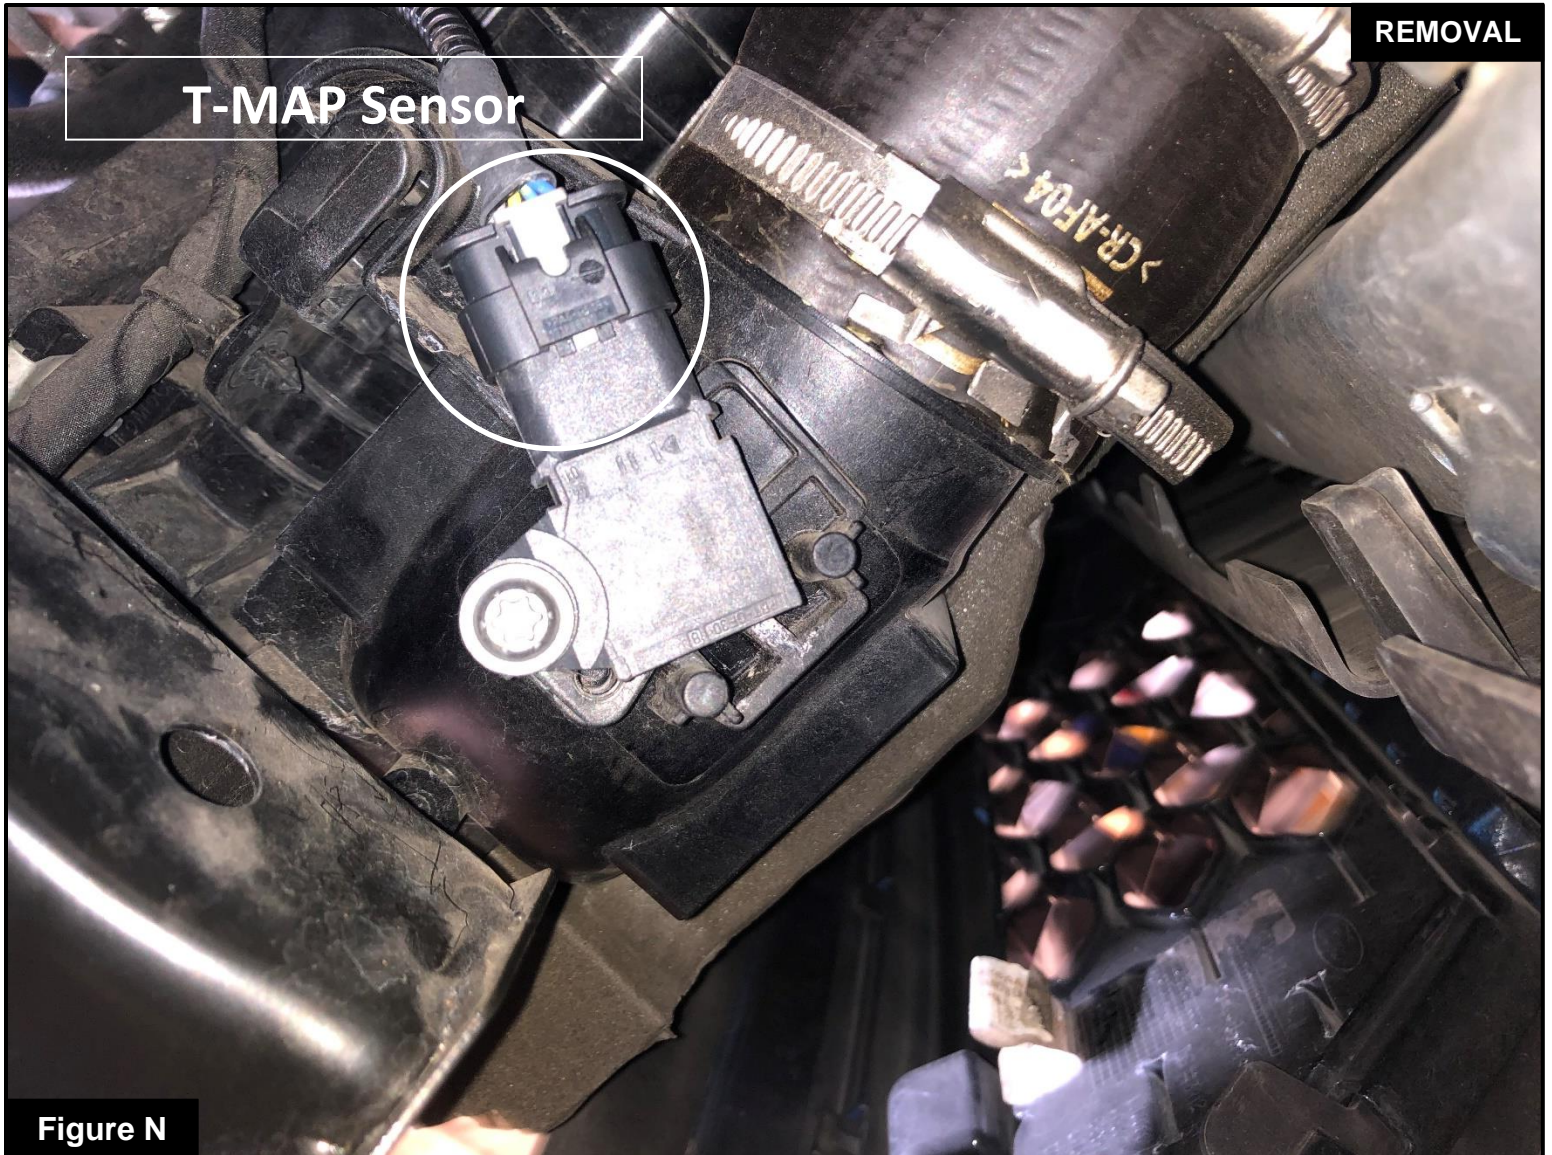

Refer to Figure N for Step 30 (Installation for Ford Edge ST Only)

Step 30: Disconnect the T-MAP sensor by pulling back the white locking tab, then pressing down on the connector and sliding it out of the sensor.

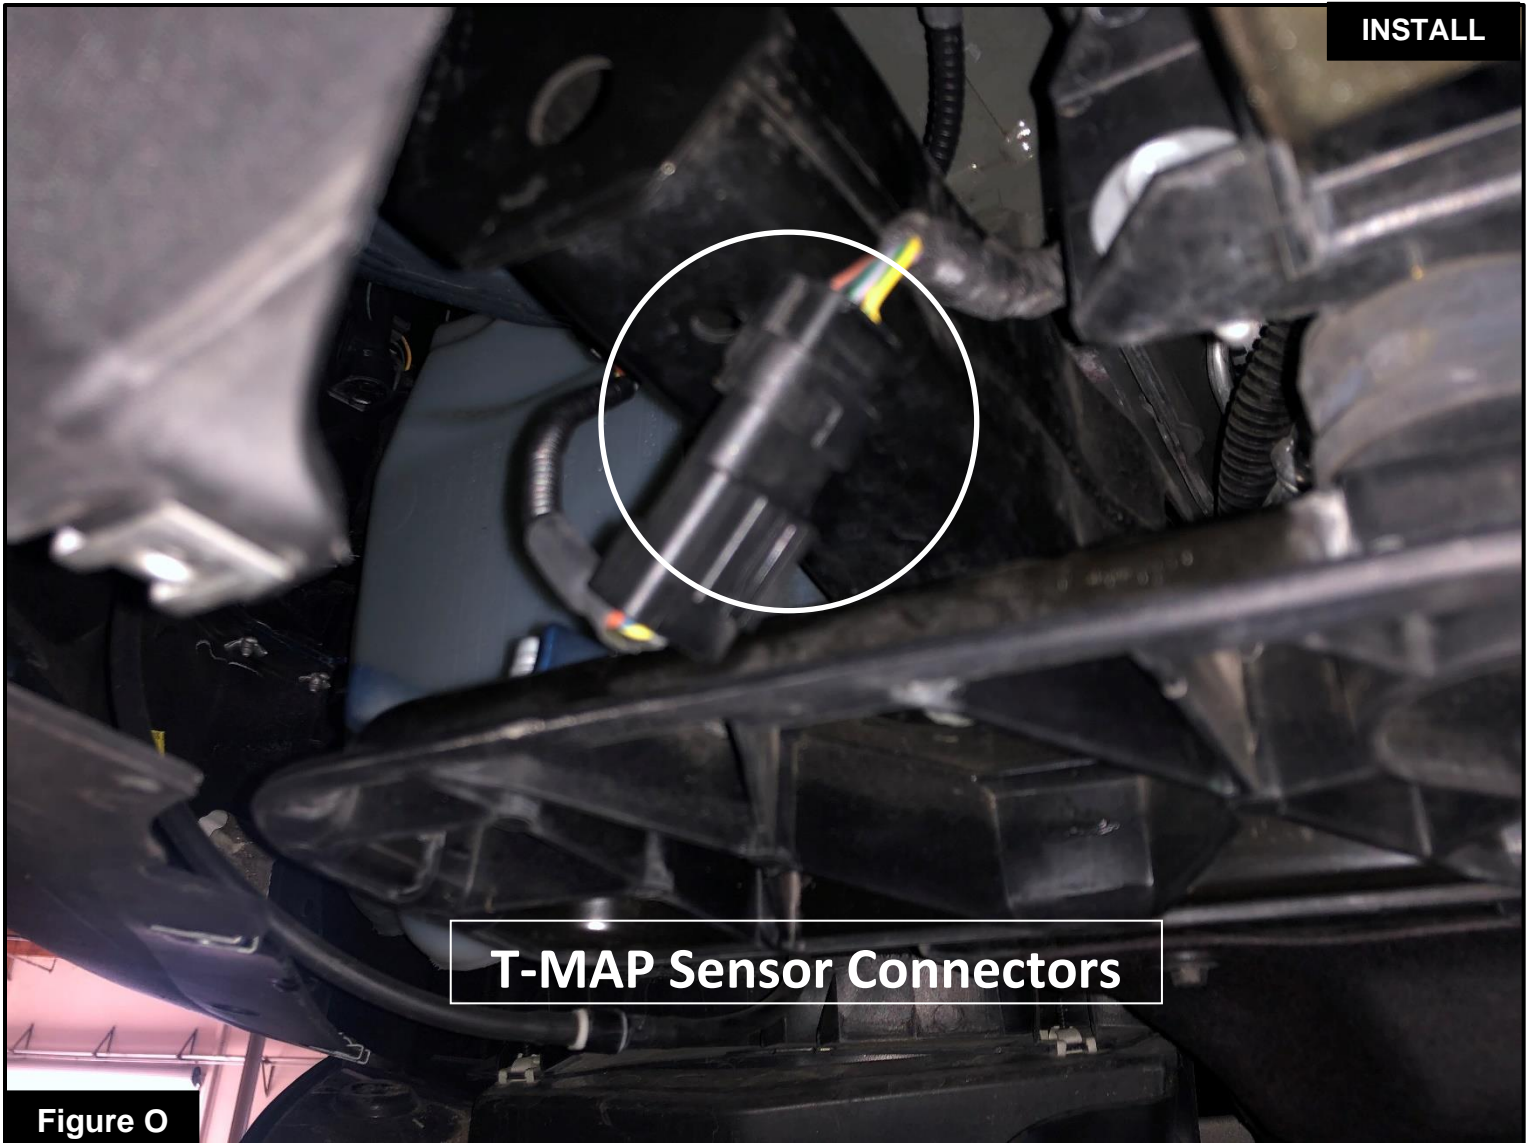**Figure O****Refer to Figure O for Steps 31-33 (Installation for Ford Edge ST Only)**

Step 31: Locate the T-MAP sensor jumper harness on the aFe POWER harness. It is the longer, second set of connectors coming out of the aFe Power module. It is labeled "T-MAP".

Step 32: Plug the female connector of the aFe POWER harness to the T-MAP sensor, then take the male connector of the aFe POWER harness and connect it to the female connector of the engine harness.

Step 33: Check with the picture to make sure the connectors are fully seated and that the locking tab is slid back into place.

 **Make sure that the connections are fully engaged and not reversed. Usually, connectors make a snapping sound when fully engaged.**

Power and Ground Connections

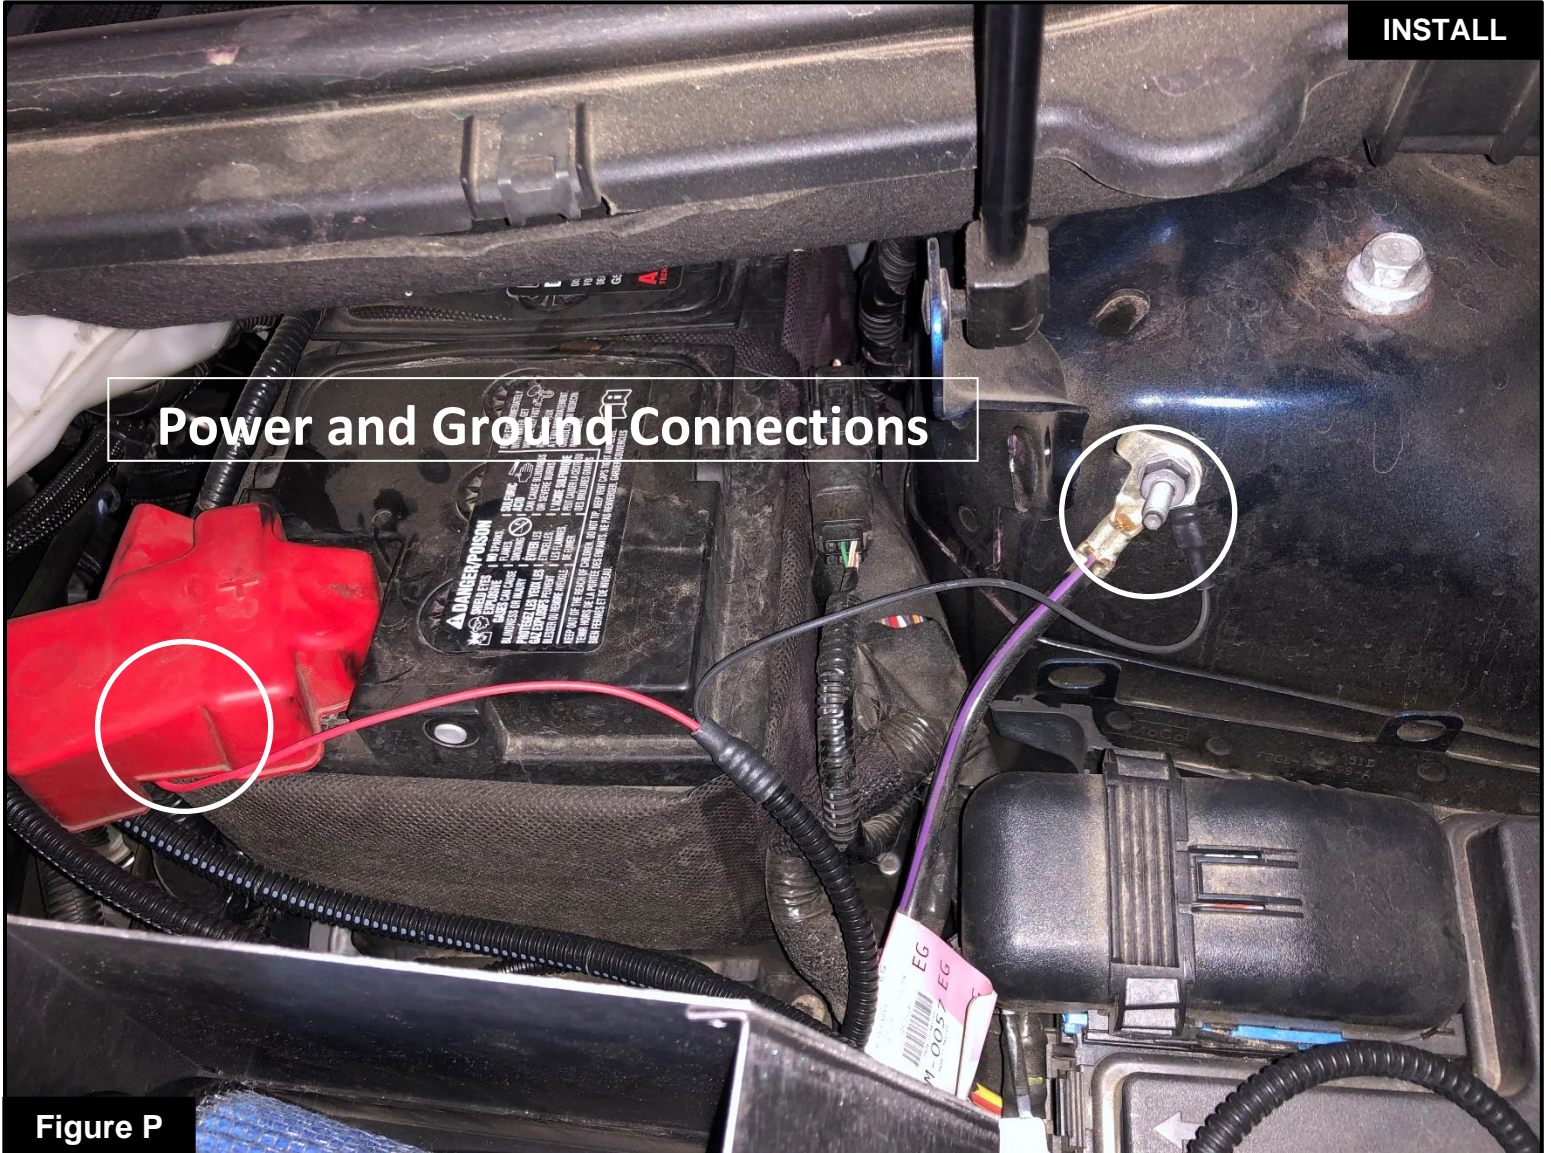



Figure P

Refer to Figure P for Steps 34-36 (Installation for Ford Edge ST Only)

Step 34: Locate the battery and the ground location on the driver side of the vehicle.

Step 35: Connect the black ground terminal cable of the aFe POWER module harness to the ground location on the frame of the vehicle.

Step 36: Connect the red power terminal cable of the aFe POWER module harness to the positive battery terminal.

 **If the vehicle needs to be jump-started, the harness will have to be disconnected from the module, and the bypass plug installed in place of the module. This is to protect the Scorchers Blue from any damage that may occur when jump-starting.**

**Figure Q****Refer to Figure Q for Steps 37-41 (Installation for Ford Edge ST Only)**

- Step 37: Select a location to mount the Scorchers BLUE using the included Velcro. We recommend that the module be mounted in a place that is dry, away from extreme heat and moving parts.
- Step 38: Connect the aFe POWER harness to the Scorchers Blue module, making sure that the retaining tab clicks into place.
- Step 39: Route the harness wires and secure them using the included zip ties for a neat installation.
- Step 40: Re-install the engine cover.
- Step 41: Re-install the passenger side headlamp assembly.

The doors can now be opened to install the LED Switch (Optional if using the Bluetooth App)



Figure R

Refer to Figure R for Steps 42-43 (Optional for both F-150 and Edge ST)

Step 42: Select the desired location for the LED switch. Route the cable on the back of the switch to exit towards the top or the bottom of the switch.

Step 43: Use the provided double sided tape to secure the LED switch in the desired location.



Refer to Figure S for Steps 44-46 (Optional for both F-150 and Edge ST)

Step 44: Carefully route the switch cable behind the steering wheel cover or cabin trim cover. For the cleanest install, partially remove the cabin trim cover and run the LED with wire between the trim panels.

Step 45: Locate the engine bay wiring access slot below the driver side kick panel.

Step 46: Route the switch cable through the firewall and into the engine bay using this slot.

**Figure T****Refer to Figure T for Steps 47-48 (Optional for both F-150 and Edge ST)**

Step 47: Plug the end of the LED switch cable to the aFe POWER harness inside the engine compartment.

Step 48: Secure all wires away from any extreme heat and moving parts with the provided zip ties. Make sure all connections are secured and fully engaged.

The installation of the module itself is now complete. Keep reading the installation instructions to learn how to use all of its features.



Figure U

Refer to Figure U (Picture is for reference)

The blue LED light will start flashing once the module is connected to the car and the ECU is on. The blue LED will become solid if the module gets connected through Bluetooth to a device



Figure V

Refer to Figure V (LED Switch)

When turning on the vehicle, each LED will flash, and it will stop at its last setting. The LED on the switch represents the different levels of power.

- Green LED: Stock
- Yellow LED: Sport
- Orange LED: Sport+
- Red LED: Race

Use the grey button to select the desired setting. Power adjustments can be done at any time while the unit is on. The LED switch can be used at the same time as the Bluetooth App.



Figure W

Refer to Figure W* (app connection-iOS)

For iOS devices, download the app from the apps store. Make sure the Bluetooth is activated on your device. Open the app and it will automatically connect through Bluetooth to the SCORCHER BLUE module when both the vehicle and module are on. When connected, the vehicle description will appear on top of the screen and the gauges will show current data.

The blue LED light on the module will become solid once connected to a Bluetooth device. Simply tap on the green, yellow, orange and red button to switch between the modes.

**Screen shots shown here are for example only. Actual screen display will vary depending on your vehicle.*

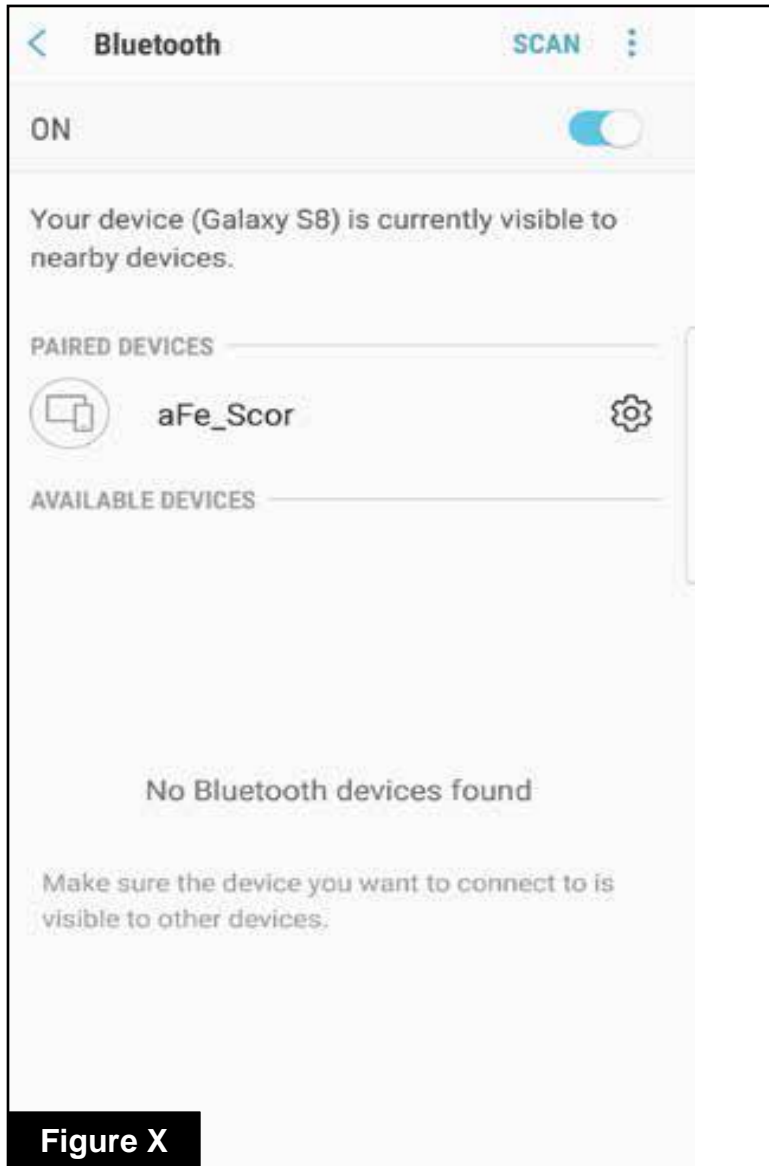


Figure X




Refer to Figure X* (app connection-Android)

For Android devices, download the app from the play store. For the initial connection, go to the Bluetooth settings of your device, turn on Bluetooth and scan for available devices. Select "aFe SCOR" and pair with device. The vehicle needs to be on and the module connected. Once shown as paired device, open the app on your device and it will automatically connect to the vehicle. The vehicle description will appear on top of the screen and the gauges will show current data.

The blue LED light on the module will become solid once connected to a Bluetooth device. Simply tap on the green, yellow, orange and red button to switch between the modes.

**Screen shots shown here are for example only. Actual screen display will vary depending on your vehicle.*

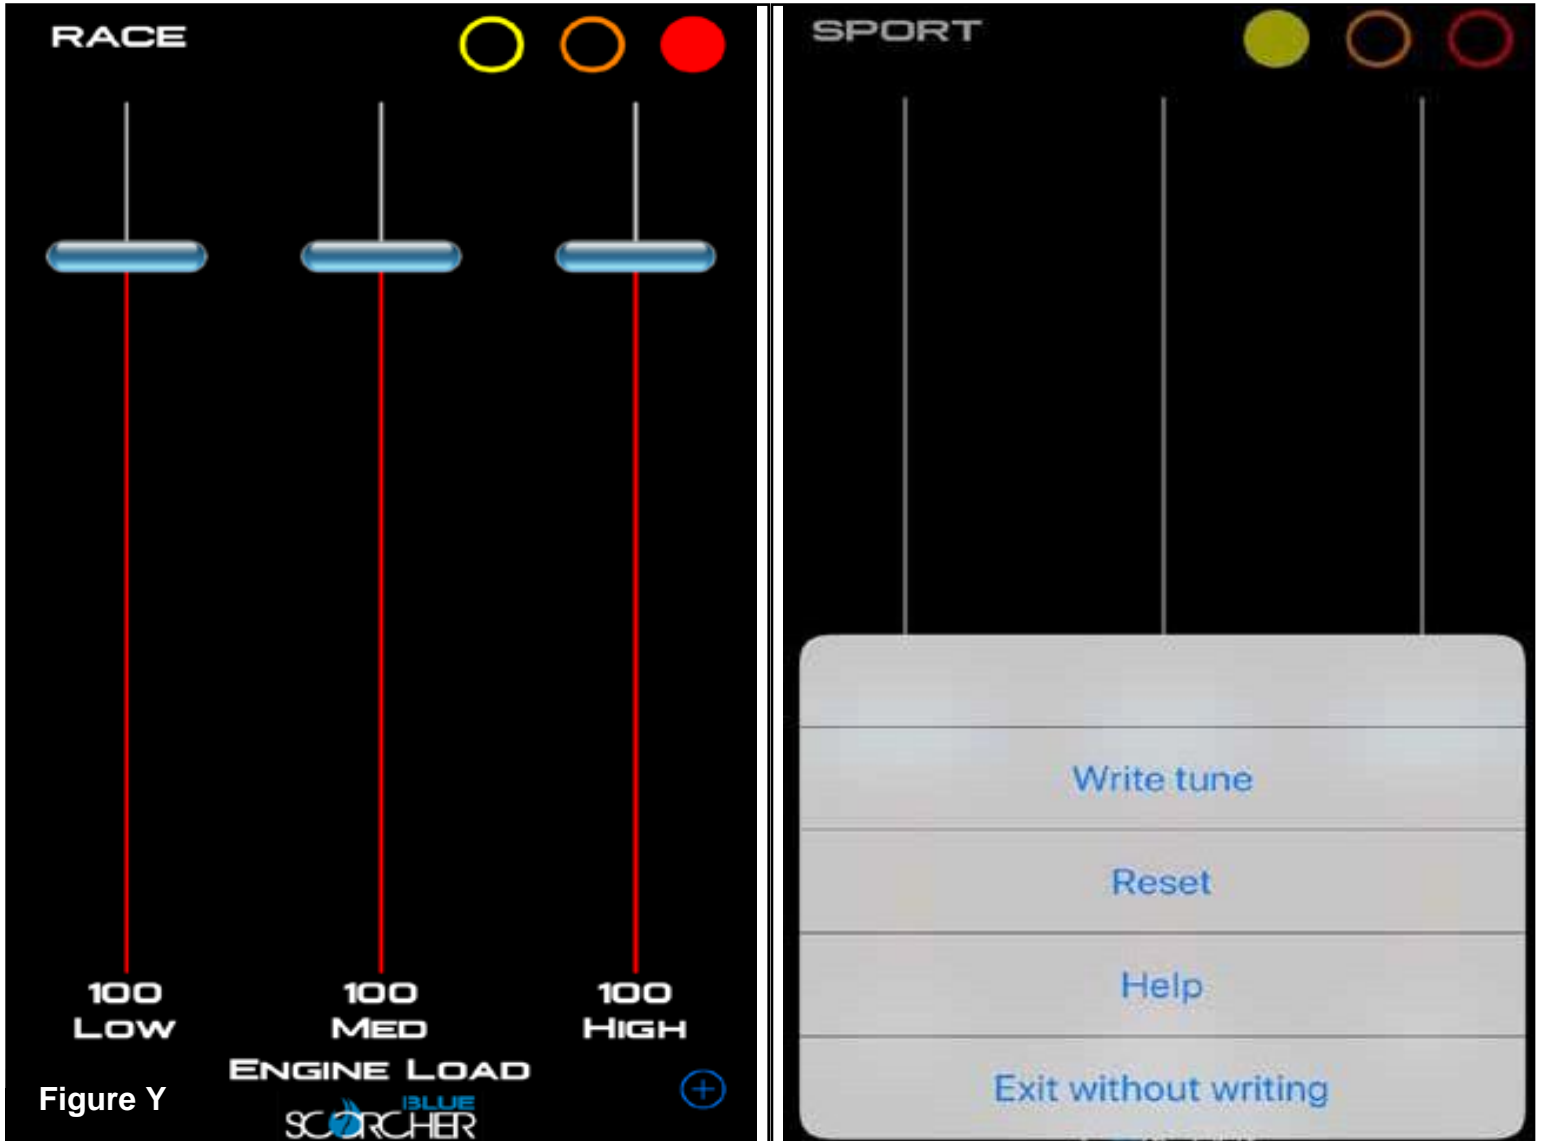

Refer to Figure Y (Custom Tuning)

The aFe POWER SCORCHER BLUE app offers the capability to custom tune the different modes. Go to the menu on the top right corner and select “Tune”. Select the mode you would like to custom tune and adjust the sliders at low, medium, and high load. You can either write the tune, reset, or exit without writing.



Disclaimer: Custom tuning should only be performed with the ignition in the “run” position and engine off. Configuring the tunes outside the default values may cause drivability issues and /or check engine lights to occur.



Figure Z1

Refer to Figure Z1 (Vehicle Performance Screen)

On the gauges screen, swipe to the left to get to the vehicle performance screen. When the vehicle is not moving, select the test you are wanting to attempt (0-60mph, ¼ mile or mile). The app will automatically detect the movement of the vehicle and the timer will start. Once you reach the speed or distance, the timer will stop. If you select a new mode, it will reset, and you can start again. If you need to stop the test at any point, hit the cancel button and leave the screen.

 Use the aFe POWER SCORCHER BLUE app responsibly. Always drive safely and obey traffic laws. aFe POWER is not responsible for any accidents, injuries, or property damage that may occur during its use.



Figure Z2

Refer to Figure Z2 (Bypass Plug)

A bypass plug is included in the kit. The plug can be connected to the harness instead of the module. This bypass plug will need to be used when the vehicle needs to be jump-started, or when there is an issue with the drivability of the vehicle. Once the bypass plug is connected, the vehicle will run in factory settings. Make sure the plug is fully engaged when connected to the harness. Thank you for choosing aFe POWER!



The vehicle needs to be in sleep mode when the module gets disconnected and the bypass plug connected. Wait for the blue LED on the module to stop flashing to make sure the vehicle is in sleep mode.



Page left blank intentionally.



Page left blank intentionally.



Page left blank intentionally.



Sprint Booster V3



P/N: 77-13001

Rapid Induction Intake (Edge ST)



P/N: 52-10003R

Dynamic Air Scoop (F-150)



P/N: 53-10008SC

Differential Cover (F-150)



P/N: 46-71180B

Quantum Cold Air Intake (F-150)



P/N: 53-10008R

Magnum Force Duo (F-150)



P/N: 54-22642-B

Magnum Force Stage 2 (F-150)



P/N: 54-32642-1B

Intercooler w/ Tubes (F-150)



P/N: 46-20202-B

To purchase any of the items above, view airflow charts, dyno graphs, photos, and video; please go to aFepower.com



Warranty

General Terms:

- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is non-transferrable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization ("RGA"), email RGA@afepower.com or call (951)493-7185. Upon receipt of the RGA, you must return the product to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA. Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the defective product within a reasonable time, not to exceed thirty days.

Product Category	P/N Prefix	Warranty duration
Direct OE Replacement Filters	10, 11, 30, 31, 71, 73	Life of the vehicle
Racing Filters	18	1 year
Universal	20, 21, 23, 24, 72, TF	2 years
Air Intake Systems	50, 51, 53, 54, 55, 56, 57, 58, 75, TR, TA, TL, TM	2 years
Exhaust Systems	49	2 years
Intercoolers & Intercooler Tubes	46-2	2 years
Intake Manifolds	46-1	2 years
Differential Cover	46-7	Life of the vehicle
Exhaust Manifolds	46	2 years
Throttle Body Spacers	46-3	2 years
Turbochargers	46-6	2 years*
Fluid Filters	44	90 days
Pre-Filters	28	2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
Tuners	77	1 year

No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

*See turbocharger warranty for more info



advanced FLOW engineering, inc.

252 Granite Street Corona, CA 92879
TEL: 951.493.7100 • TECH: 951.493.7185
E-Mail: Tech@aFepower.com

P/N: 06-80893